




QUICK INSTALL
15-25 MINUTES

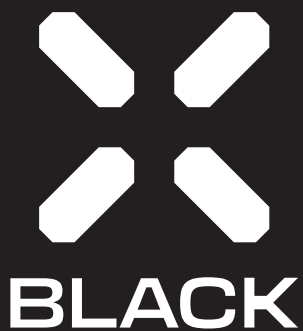

FOLLOW ALONG VIDEO
SCAN QR CODE

US-MK2-EN

Pre-Installation Guide

Before installing your BLACK X Smart Deadbolt, confirm that your door meets the following requirements.

1. Door Thickness

Your door must be between 1½"-2" (38-50 mm).

Doors outside this range may not be compatible with this model.

2. Deadbolt Type

BLACK X is designed to replace a standard single cylinder deadbolt.

Your door should have an exterior key cylinder and an interior thumb turn.

It does not replace mortise locks, multi-point locks, or rim locks.

3. Backset Measurement

Your door must have a backset of: 2.36" (60mm)


Measure from the edge of the door to the centre of the keyhole.

4. Door Alignment

Ensure the door closes correctly before installing the lock. Check that:

- The latch moves freely
- The door closes smoothly
- The strike plate aligns with the latch

If the door does not close properly, adjust the strike plate before installing the lock.

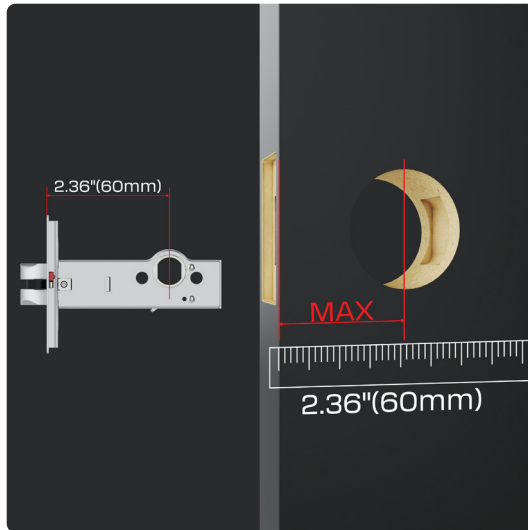

5. Required Tools

You may need the following tools:

- Phillips screwdriver
- Flathead screwdriver
- Measuring tape
- Drill (if installing a new strike plate)

The Allen key required for installation is included in the box.

6. Smartphone Requirements

To use the smart features you will need:

- iOS 13 or later
- Android 7 or later
- Bluetooth enabled

1 Download the App



Open the app and create your BLACK X account before beginning installation.

2 Unbox and Prepare Components

Before installation, open the package and identify all components. Lay them out for easy access.

Hardware components:


- BLACK X deadbolt (1x)
- Mechanical Access Keys (2x)

Box 1 Contents:

- Strike box (1x)
- CR2 3V Battery (1x)


Box 2 Contents:

- Allen key (1x)
- Strike plate (1x)
- M4 x 0.71" (18 mm) Screws (4x)

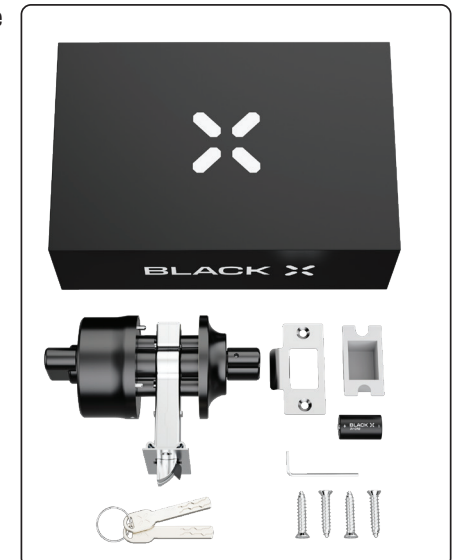

3 Loosen the Screws

1. Insert the supplied Allen key into the screw socket.
2. Turn the Allen key counter-clockwise to loosen the screw.
3. Repeat the same process for the screw on the opposite side of the lock.

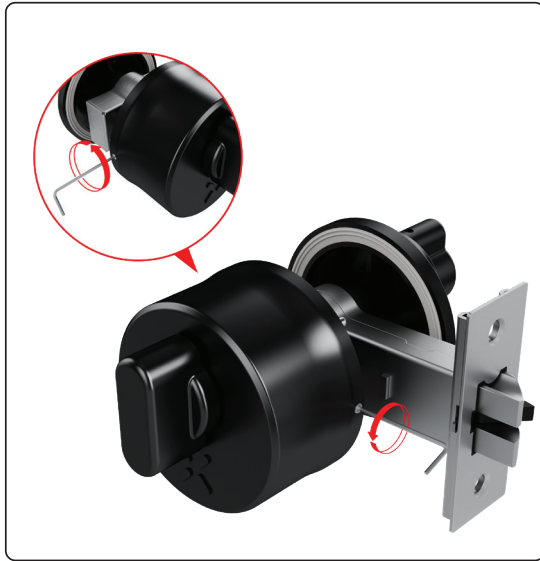

5 Remove the Fasteners

1. Insert a screwdriver into the designated fastener slots, as illustrated.
2. Turn the screwdriver counter-clockwise to loosen and remove the fasteners.
3. Once the fasteners are removed, gently detach the components, following the directions shown in the diagram, to fully separate the lock for assembly preparation.



4 Disassemble the BLACK X Mechanism

1. Rotate the BLACK X mechanism counter-clockwise to loosen the body.
Note: Refer to the arrows in the diagram for guidance.
2. Carefully separate the lock body and ratchet housing as shown in the diagram.



6 Remove the Existing Cylinder

1. Use a screwdriver to remove the screws securing the existing Lock.
2. Carefully pull the cylinder straight out of the lock housing.



Check Latch Orientation

Before installing the cylinder, check that the latch orientation is correct. Ensure the top mark on the latch housing is facing upward, as shown in the illustration.

Check the latch position:

- The slanted side of the latch must face the door frame (strike plate).
- The flat side must face the interior side of the door.



This orientation allows the latch to retract smoothly when the door closes.

- If the latch is correctly positioned, continue to Step 8.
- If the latch is facing the wrong direction, follow the instructions below to reverse it.


Reversing the Latch Direction

1. Remove the safety plug (red piece) to release the latch mechanism, and keep it in a safe place for reinstallation in Step 11.
2. Locate the release tab on the slanted side of the latch.
3. Lift the release tab to unlock the latch mechanism.
4. Using the Allen key, loosen the Hex socket screw.
5. Remove the latch from the housing.
6. Rotate the latch 180° to the correct orientation.
7. Insert the latch back into the lock housing.
8. Tighten the screw to secure the latch.
9. Push the locking slider (black piece) toward the latch until it is fully inserted.
10. Push the release tab down to secure the latch mechanism.
11. Reinsert the safety plug (red piece) into its original position to secure the mechanism.

⚠ Important

- Ensure the locking slider is fully inserted.
- If the locking slider is not fully pushed in, the release tab cannot lock correctly.

Do not lock the release tab until the locking slider has been fully inserted.

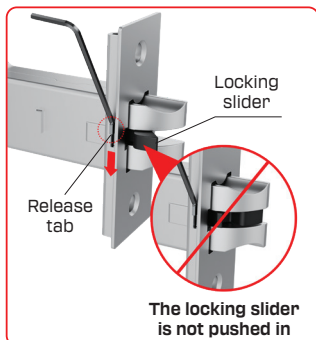

The locking slider is not pushed in




7.1




7.2




7.3

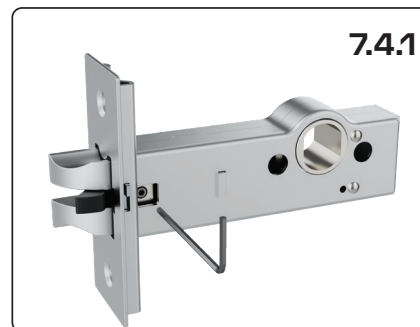


7.4.1

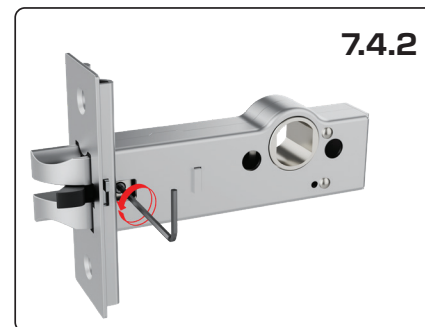

7.4.2

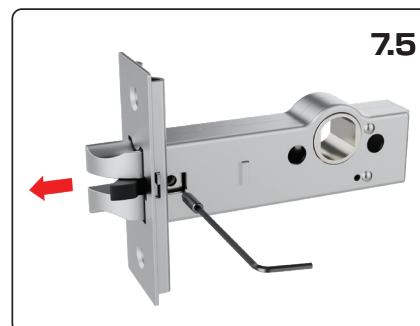

7.5

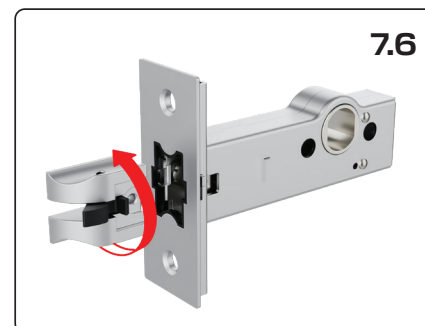


7.6

7.7




7.8

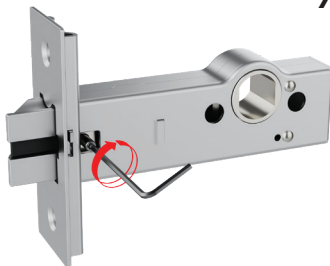


7.9.1



7.9.2

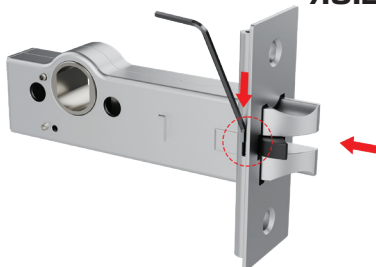

7.10

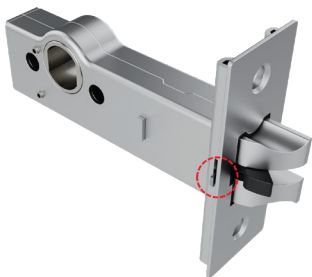

7.11



8

Latch Function Check

Before inserting the cylinder, confirm the latch operates correctly.

1. Press the latch and ensure that it retracts fully into the housing.
2. Release the latch and ensure it returns smoothly to its original position.
 - If the latch operates correctly, continue with the cylinder installation.
 - If the latch does not retract fully or does not return properly, repeat Step 7 and ensure the latch, release tab, and locking slider are positioned correctly.



9

Install the Cylinder

1. Slide the cylinder straight into the lock housing on the door, as shown in the diagram. Ensure the cylinder is fully aligned with the screw holes.

Note: Insert the cylinder in the orientation shown in the diagram, with the latch facing upward.
2. Secure the cylinder by tightening the 2 supplied screws.
3. Insert the strike box into the door frame, then secure the strike plate using the supplied screws.



10 Installing the CR2 Battery

1. Use a flathead screwdriver to open the battery compartment cover. Turn the screw **half a turn** and then press down on the latch to release the compartment.
2. Insert the battery release tab into the lock. Place the CR2 battery into the BLACK X device, ensuring the **positive (+)** and **negative (-)** ends align with the markings on the battery pull tab. A beep will confirm the device is operational.
3. Return the battery compartment cover to its original position with the tab facing outward from the lock. Use the flathead screwdriver to turn the screw back to its locked position.

10.1



10.2



10.3



11 Attaching the BLACK X Deadbolt Device



1. Insert the lock mechanism through the door as shown in the diagram.
2. Align the components with the corresponding holes on both sides of the door.
3. Slide the lock mechanism fully into place, ensuring it fits securely within the door structure.
4. Tighten the screws to secure the lock in place and ensure proper alignment and functionality.




10

12 Gear Assembly

1. Slide the Gear Module onto the central shaft (pin). Align it with the two connection points on either side before pressing it firmly into place. Make sure it is fully seated.

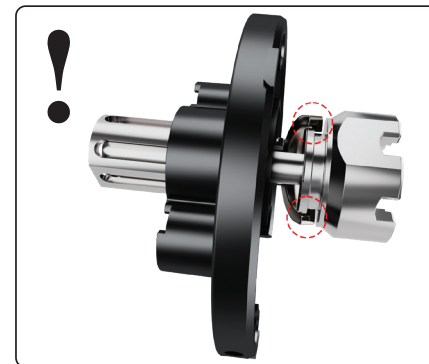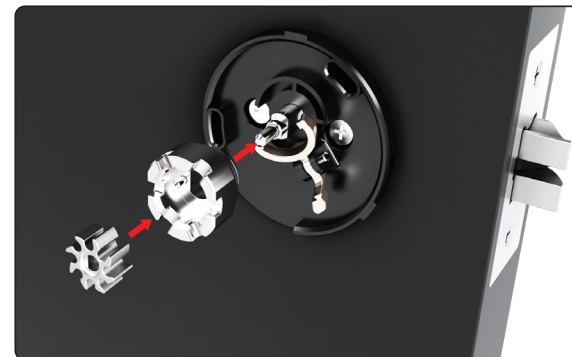

2. Insert the gear into the module. The gear is reversible and can be installed with either side facing outward.

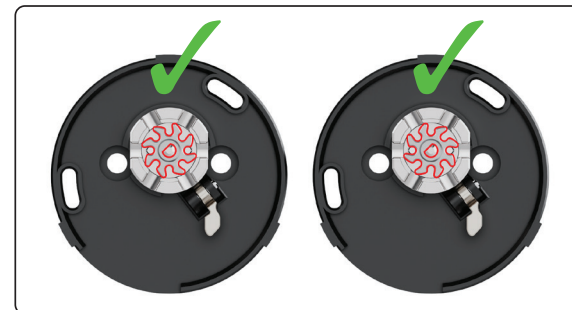

Warning


Do not force the Gear Module into place. Ensure the two connection points are correctly aligned before pushing it into position. Incorrect installation may prevent the lock from locking or unlocking correctly.



11


13 Pairing with the BLACK X App

1. Open the BLACK X App.
2. Click on 'install a new lock'.
3. Name your Lock or choose a description.
4. Create a 'Home' to associate with your lock.
5. Choose the 'Home' for your lock.
6. While in "Discovering Nearby Locks" mode, use the Allen key to press the connect button on the BLACK X device.
7. When a pop-up for the correct lock appears, click "Connect" to proceed.
8. Congratulations! Your lock has been successfully connected.

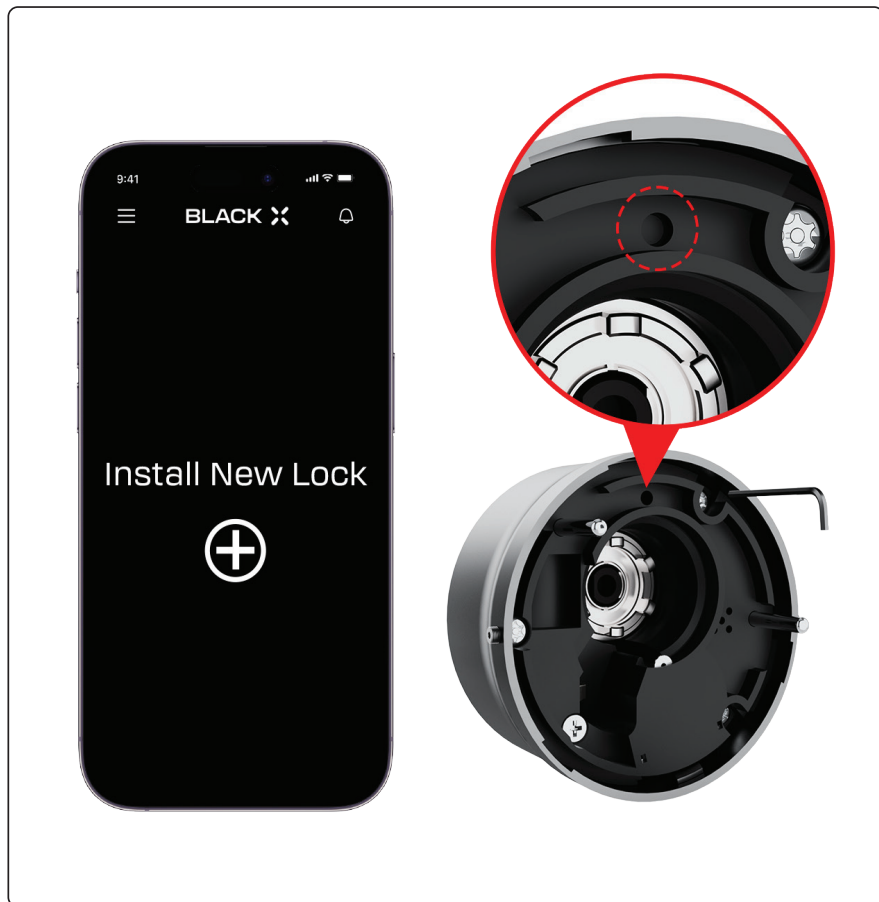

14 Final Assembly

1. Align the two parts of the lock assembly, as illustrated in the diagram.
2. Rotate the assembly in the direction indicated by the red arrows to securely connect the components.
3. Once aligned, ensure the mechanism locks into place by rotating it slightly to confirm a tight fit.
4. Use the Allen key to rotate the screws clockwise and tighten them on both sides.

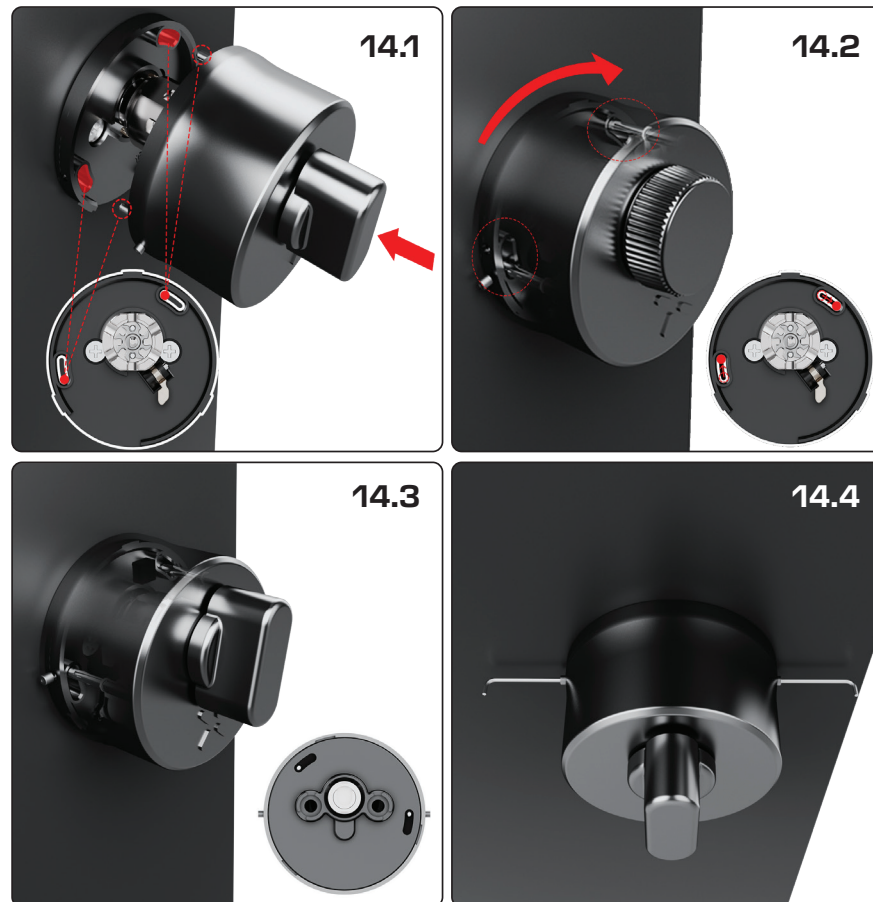

Functionality Tests and Optional Wi-Fi Bridge Setup (if purchased)

A. Door Closing Test

Before completing installation, verify that the latch moves freely.

1. Press the latch bolt and confirm it moves smoothly into the latch housing.
2. Release the latch and confirm it returns fully to the extended position.

The latch must move freely without sticking or binding.

If the door does not close or latch properly after installation, check the following:

- The slanted side of the latch faces the strike plate.
- The top mark on the latch housing is facing upward.
- The latch bolt retracts fully when pressed.
- The locking slider is fully inserted.


Incorrect latch orientation may prevent the door from closing or latching correctly.

B. App Function Test

With the door open, use the **BLACK X app** to activate the unlock command and confirm the lock operates correctly.

C. Optional Wi-Fi Bridge Installation

If purchased, connect the USB-C Wi-Fi bridge to enable remote access features.

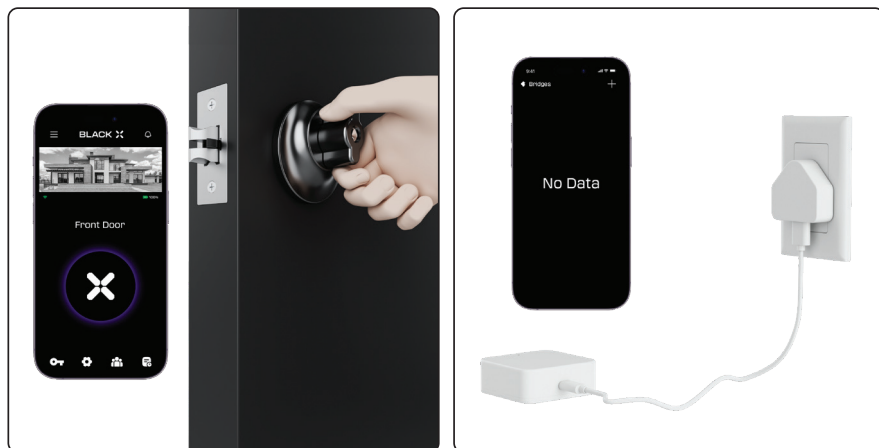

Online Instructions

Scan the QR codes below for installation and troubleshooting guides, or visit www.black.inc/support for more information.

Installation
Guide



Troubleshooting
Guide



www.black.inc

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

