

Lantech

IPES/IES-5408T Series

8 10/100TX D-coded + 4 10/100/1000T X-coded L2+ (w/8 PoE at/af)
EN50155 Managed Ethernet Switch

User Manual (Hardware)



V1.10
MAY. 2026
RP-001-31


Approval Information

| Version 1.09 | Name | Title | Date |
|---------------------|-------------|--------------|-------------|
| Author | Greg Tsai | Marketing | 2026.05.13 |
| Verifier | Jacky Chou | HW QA | 2026.05.13 |
| Approver | Thomas Lee | RD head | 2026.05.13 |

| Version | Date | Content of Modification | Author(s) |
|----------------|-------------|--|------------------|
| V1.01 | 2021.11.23 | Update the power source warning | Greg Tsai |
| V1.02 | 2022.03.03 | Update the PoE warning | Greg Tsai |
| V1.03 | 2022.09.12 | Typo correction | Greg Tsai |
| V1.04 | 2022.10.28 | Update the PoE warning | Greg Tsai |
| V1.05 | 2023.08.31 | Update the grounding information | Greg Tsai |
| V1.06 | 2023.10.16 | Update the PoE warning | Greg Tsai |
| V1.07 | 2024.11.20 | Update on PoE Budget Usage Guidelines | Greg Tsai |
| V1.08 | 2026.02.06 | Add bypass section | Greg Tsai |
| V1.09 | 2026.02.26 | Update the bypass diagram and distance 25M | Greg Tsai |
| V1.10 | 2026.05.13 | Update the power input table | Greg Tsai |

Recommendation for Shielded network cables

STP cables have additional shielding material that is used to reduce external interference. The shield also reduces the emission at any point in the path of the cable. Our recommendation is to deploy an STP network cable in demanding electrical environments. Examples of demanding indoor environments are where the network cable is located in parallel with electrical mains supply cables or where large inductive loads such as motors or contactors are in close vicinity to the camera or its cable. It is also mandatory to use an STP cable where the power device (like IP camera) is used outdoors or where the network cable is routed outdoors.

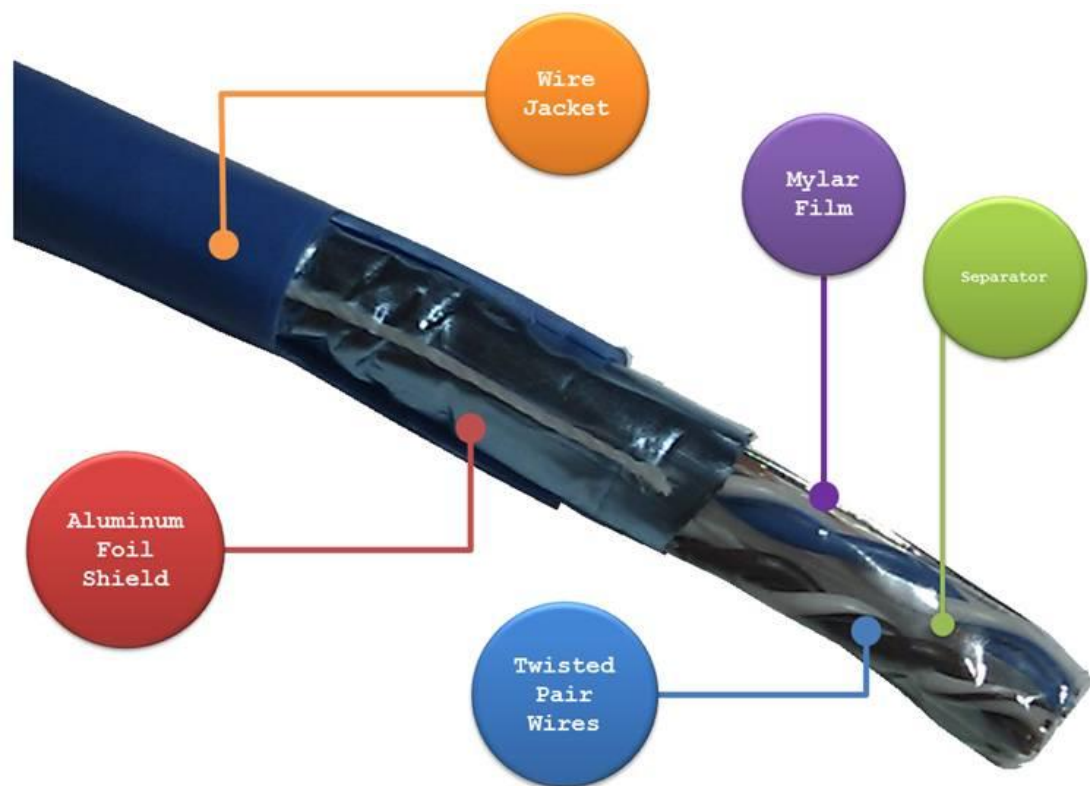

Important Notice

Lantech Communications Global, Inc. reserves the right to modify the equipment, its specification or this manual without prior notice, in the interest of improving performance, reliability, or servicing. At the time of publication all data is correct for the operation of the equipment at the voltage and/or temperature referred to. Performance *data* indicates typical values related to the particular product.

No part of this documentation or information supplied may be divulged to any third party without the express written consent of Lantech Communications Global Inc. Products offered may contain software which is proprietary to Lantech Communications Global Inc. The offer or supply of these products and services does not include or infer any transfer of ownership.

Interference Issues

This Equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a commercial or industrial installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions.

FCC Warning

This Equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE Mark Warning

This is a Class-A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Content

| | |
|--|-----------|
| Chapter 1 Introduction..... | 6 |
| Chapter 2 Hardware Description | 7 |
| 2.1 Physical Dimension..... | 7 |
| 2.2 Package Content:..... | 11 |
| 2.3 IP Protection..... | 11 |
| 2.4 LED Indicators..... | 14 |
| 2.5 Bypass design..... | 15 |
| Chapter 3 Hardware Installation | 17 |
| Chapter 4 Console Management | 24 |
| 4.1. Connecting to the Console Port | 24 |
| 4.2. Login in the Console Interface | 24 |

Chapter 1 Introduction

Lantech IPES-5408T (IP67/IP54) is a high performance L2+ (Gigabit uplink) switch with 8 10/100TX(d-coded) + 4 10/100/1000T(x-coded) w/8 PoE 802.3af/at Injectors by M12 provides L2 wire speed and advanced security function for network aggregation deployment.

Lantech IES-5408T (IP67/IP54) is a high performance L2+ (Gigabit uplink) switch with 8 10/100TX(d-coded) + 4 10/100/1000T(x-coded) by M12 provides L2 wire speed and advanced security function for network aggregation deployment.


Chapter 2 Hardware Description

In this paragraph, it will describe the Industrial switch's hardware spec, port, cabling information, and wiring installation.


A battery is inside the device to maintain the RTC function with estimated battery life of 10 years. The lost of battery power will only effect the RTC function. *Unless otherwise specified.

2.1 Physical Dimension

Aluminum case. IP-67,
215 (W) x 193 (D) x 76.7 (H) mm

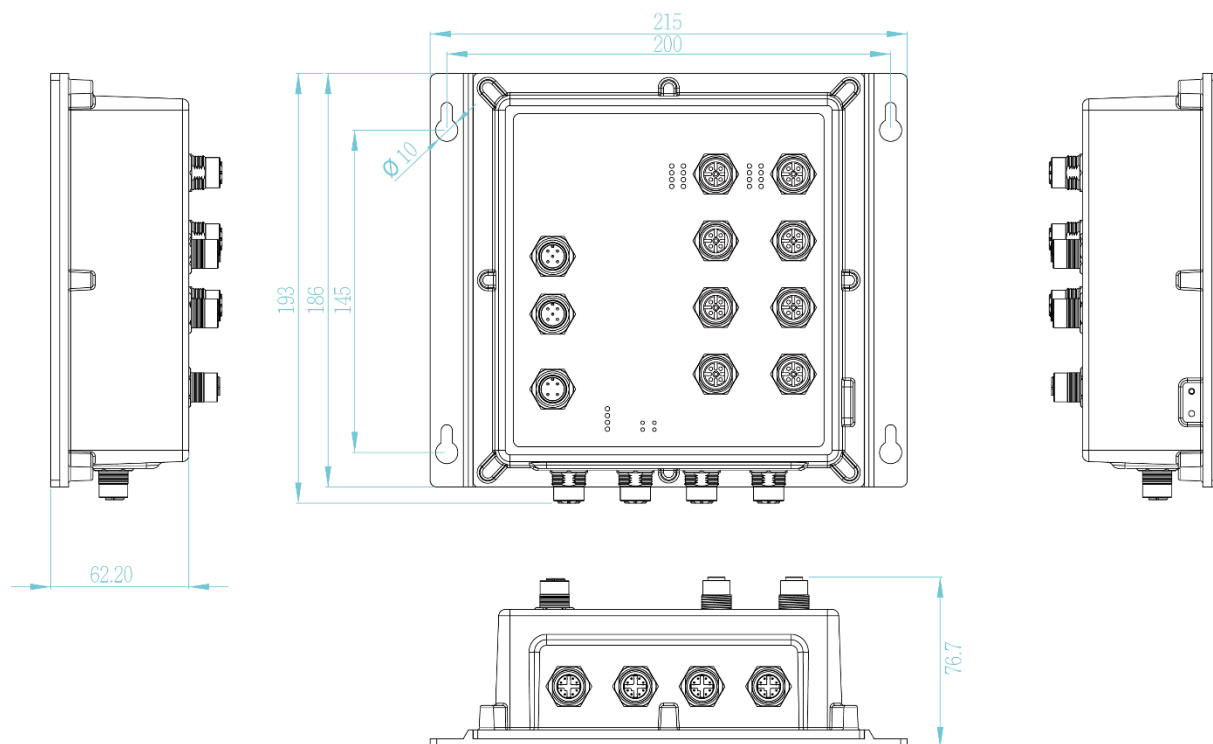


Aluminum case. IP-54,
182 (W) x 180.3 (H) x 77.3 (D) mm

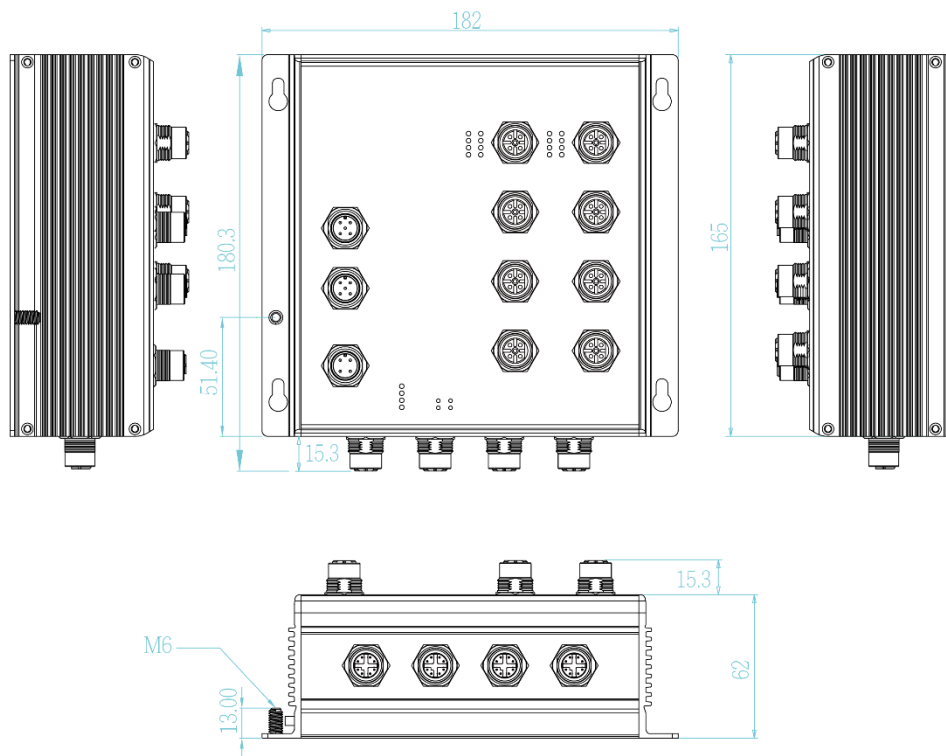

Front panel of IES-5408T

Lantech IES-5408T

8 10/100TX + 4 10/100/1000T
X-coded L2+ EN50155 Managed
Ethernet Switch

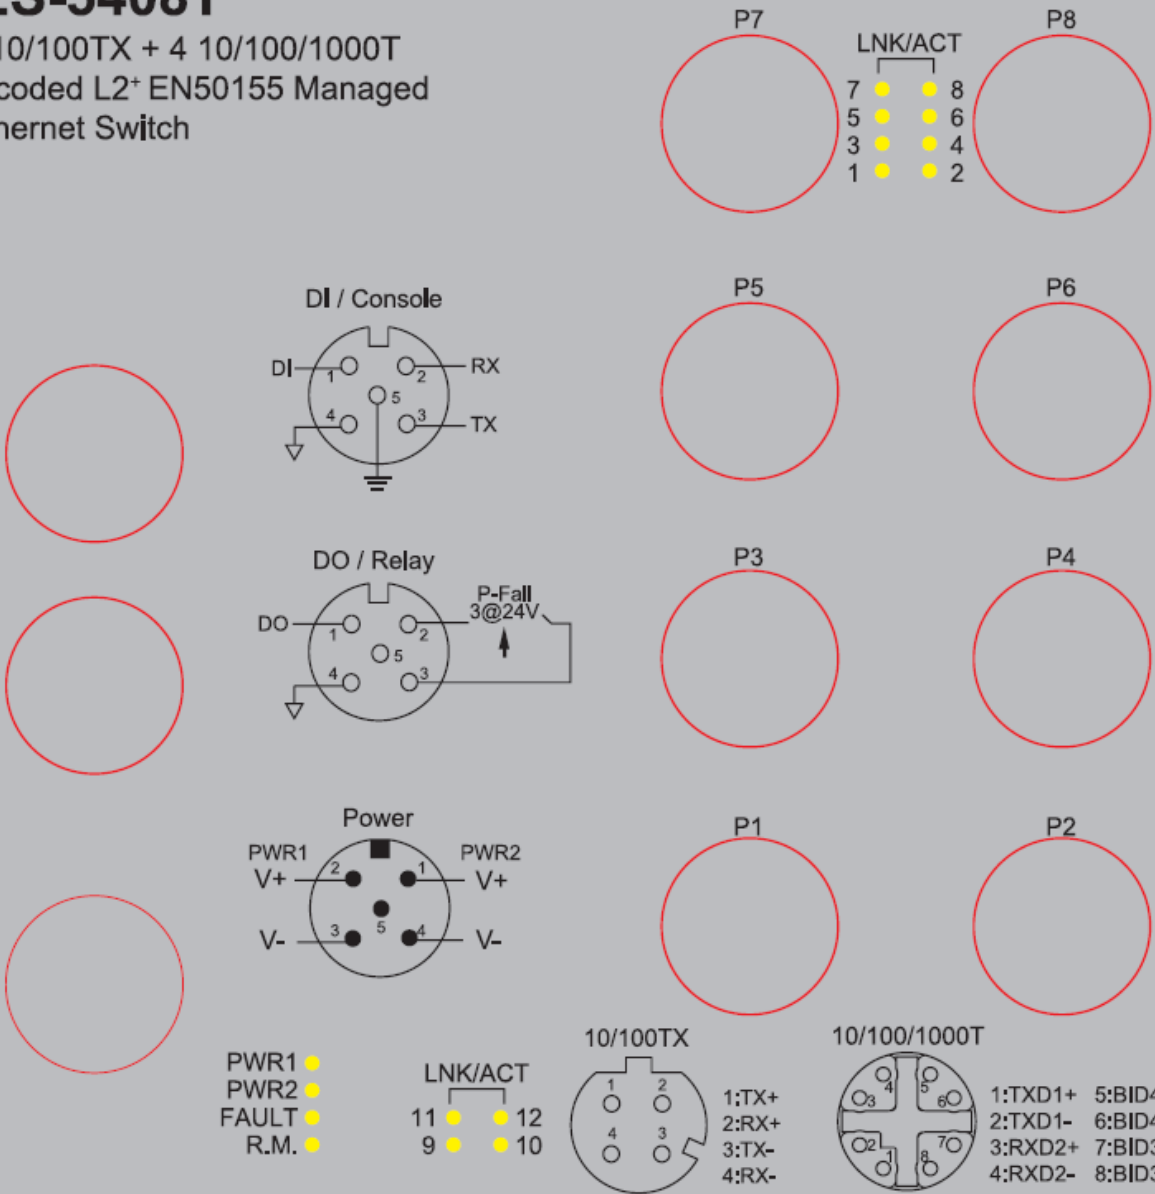

2.2 Package Content:

- Manual CD (by request)
- Product
- Console cable

2.3 IP Protection

The **IP Code**, **Ingress Protection Rating**, sometimes also interpreted as **International Protection Rating**, classifies and rates the degree of protection provided against the intrusion (including body parts such as hands and fingers), dust, accidental contact, and water in *mechanical casings* and with electrical enclosures. It is published by the International Electrotechnical Commission (IEC)

Solid particle protection

The first digit indicates the level of protection that the enclosure provides against access to hazardous parts (e.g., electrical conductors, moving parts) and the ingress of solid foreign objects.

| Level | Object size protected against | Effective against |
|-------|-------------------------------|--|
| 0 | — | No protection against contact and ingress of objects |
| 1 | >50 mm | Any large surface of the body, such as the back of a hand, but no protection against deliberate contact with a body part |
| 2 | >12.5 mm | Fingers or similar objects |
| 3 | >2.5 mm | Tools, thick wires, etc. |
| 4 | >1 mm | Most wires, screws, etc. |

| | | |
|----------|----------------|--|
| 5 | Dust protected | Ingress of dust is not entirely prevented, but it must not enter in sufficient quantity to interfere with the satisfactory operation of the equipment; complete protection against contact |
| 6 | Dust tight | No ingress of dust; complete protection against contact |

Liquid ingress protection

The second digit indicates the level of protection that the enclosure provides against harmful ingress of water.

| Level | Protected against | Testing for | Details |
|--------------|--------------------------------------|---|---|
| 0 | Not protected | — | — |
| 1 | Dripping water | Dripping water (vertically falling drops) shall have no harmful effect. | Test duration: 10 minutes Water equivalent to 1 mm rainfall per minute |
| 2 | Dripping water when tilted up to 15° | Vertically dripping water shall have no harmful effect when the enclosure is tilted at an angle up to 15° from its normal position. | Test duration: 10 minutes Water equivalent to 3 mm rainfall per minute |
| 3 | Spraying water | Water falling as a spray at any angle up to 60° from the vertical shall have no harmful effect. | Test duration: 5 minutes Water volume: 0.7 litres per minute Pressure: 80–100 kPa |
| 4 | Splashing of water | Water splashing against the enclosure from any direction shall have no | Test duration: 5 minutes Water volume: 10 litres per minute |

| | | | |
|----------|----------------------|---|--|
| | | harmful effect. | Pressure: 80–100 kPa |
| 5 | Water jets | Water projected by a nozzle (6.3 mm) against enclosure from any direction shall have no harmful effects. | Test duration: at least 15 minutes Water volume: 12.5 litres per minute Pressure: 30 kPa at distance of 3 m |
| 6 | Powerful water jets | Water projected in powerful jets (12.5 mm nozzle) against the enclosure from any direction shall have no harmful effects. | Test duration: at least 3 minutes Water volume: 100 litres per minute Pressure: 100 kPa at distance of 3 m |
| 7 | Immersion up to 1 m | Ingress of water in harmful quantity shall not be possible when the enclosure is immersed in water under defined conditions of pressure and time (up to 1 m of submersion). | Test duration: 30 minutes Immersion at depth of at least 1 m measured at bottom of device, and at least 15 cm measured at top of device |
| 8 | Immersion beyond 1 m | The equipment is suitable for continuous immersion in water under conditions which shall be specified by the manufacturer. Normally, this will mean that the equipment is hermetically sealed. However, with certain types of equipment, it can mean that water can enter but | Test duration: continuous immersion in water Depth specified by manufacturer |

| | | | |
|----------|--------------------------------------|--|---|
| | | only in such a manner that it produces no harmful effects. | |
| 9 | Powerful high temperature water jets | Protected against close-range high pressure, high temperature spray downs. | — |

2.4 LED Indicators

The diagnostic LEDs that provide real-time information of system and optional status are located on the front panel of the industrial switch. The following table provides the description of the LED status and their meanings for the switch.

| LED | Color | Status | Meaning |
|----------------|----------|----------|---|
| R.M | Green | On | The switch unit is owner switch of ITU-Ring |
| | | Off | The switch is not owner switch |
| PWR1 | Green | On | Power 1 is active |
| | | Off | Power 1 is inactive |
| PWR2 | Green | On | Power 2 is active |
| | | Off | Power 2 is inactive |
| FAULT | Red | On | Power or port failure |
| | | Off | No failure |
| P1 ~ P8 | Link/Act | On | A network device is detected. |
| | | Blinking | The port is transmitting or receiving packets from the TX device. |
| | | Off | No device attached |
| | PoE | On | The port is operating in PoE mode.(IPES) |

| | | | |
|----------|-------------|----------|---|
| | (1~8)(IPES) | Off | The port is not operating in PoE mode.(IPES) |
| P9 ~ P12 | Link/Act | On | A network device is detected. |
| | | Blinking | The port is transmitting or receiving packets from the TX device. |
| | | Off | No device attached |


2.5 Bypass design

(Available on -BT/-BBT models; **Maximum copper uplink by-pass port distance is 25m**)


The bypass module is like an alarm relay but it has default position – close. When system finish booting procedures, CPU will ask bypass module change position from close to open and keep in open status. That’s why when switch loss the power, bypass module will be active, because CPU has no ability to ask bypass module keep in open status then bypass will be restored to default position – close.

There is another condition will trigger bypass module -- CPU hang. When CPU is hang, it also loss ability to ask bypass module keep in open status. But at this time, watch dog chipset will force to reset CPU then system will reboot. The CPU will back to normal status after rebooting then ask bypass module to keep in open status.


Bypass mechanism in open status

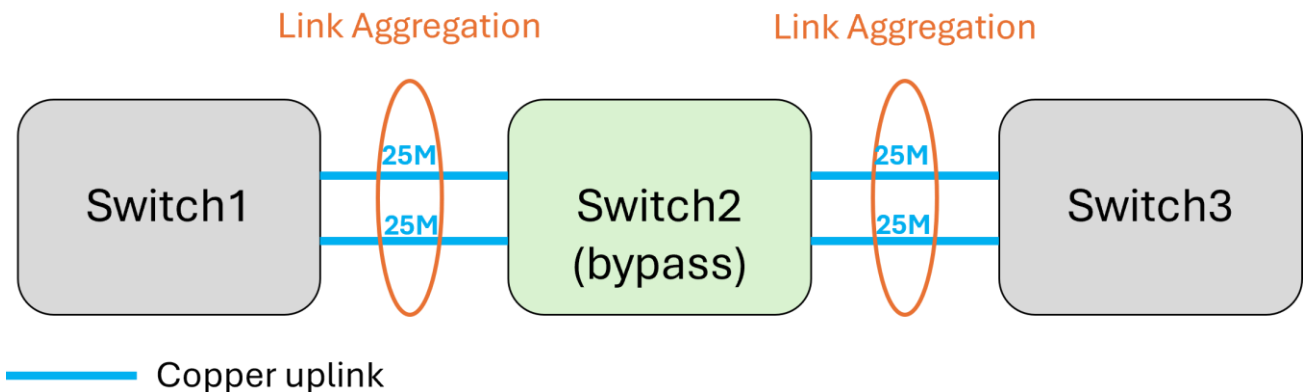

Bypass mechanism in close status

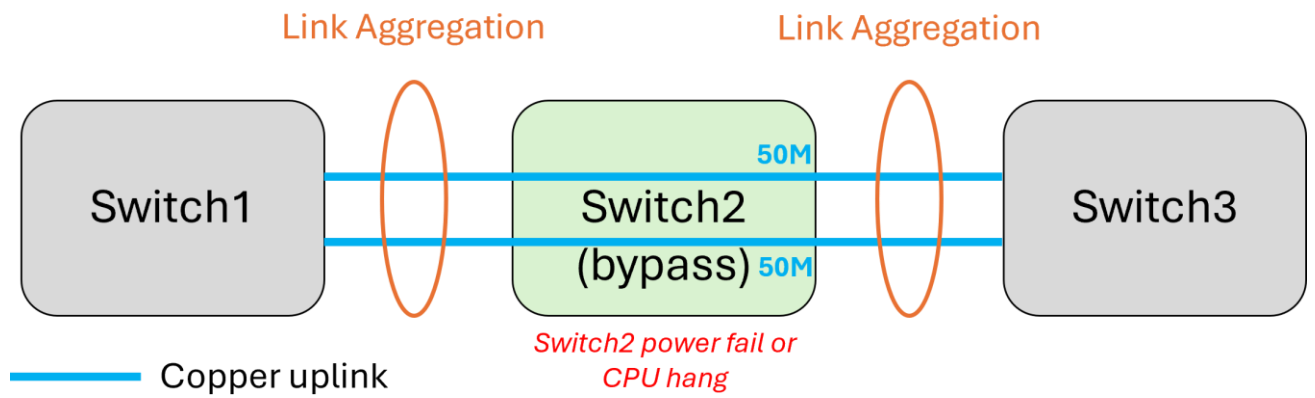

Chapter 3 Hardware Installation

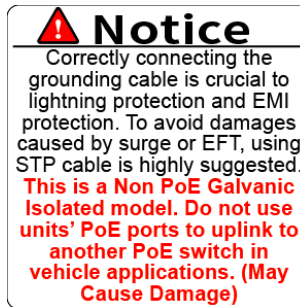

For POE models: Do not use units' POE ports to uplink to another POE switch in vehicle applications. (May Cause Damage) Lantech strongly advise the installation of a Galvanic isolated DC/DC converter between the power supply and the Ethernet switch on all Non-Isolated models. Please contact the sales team for advice on which models support isolated power design.

Alert! PoE Budget for Managed POE Switch Model

For managed PoE models, the factory-default PoE budget is 12W per port; however, users can customize the PoE budget for each port based on their requirements. Managed switches have a safety feature where, if the total PoE budget is exceeded, the last connected port will automatically be disabled to prevent overloading.

Please be mindful of the total PoE budget limit. To prevent ports from shutting down due to insufficient budget, set the desired PoE budget for each used port and set the PoE budget for idle ports or ports that do not require PoE to "0". Once the preceding ports consume the entire PoE budget, the subsequent ports will not provide power for devices.

3.1 Hardware installation

3.1.1 Unpack switch and check the accessory with packing content list

3.1.2 Mount the switch on desired position. For the best ventilation, it is suggested to mount the switch on metallic surface.

3.1.3 Connect the M12/M23 connector of power input. The power supply for this switch is connected via a 5-pole M12/M23 male connector. ***May vary by models. Please check the front panel of the switch.**

Note: Please check the power connector has been connected to the switch correctly before you turn on the power resource.



■ Voltage of Power Input

| | |
|---------------|--|
| Non-PoE model | 24VI model: 9V to 36VDC with galvanic isolation |
| | 24TVI model: 16.8V to 56VDC with galvanic isolation |
| | WVI model: 16.8V to 137.5VDC with galvanic isolation |
| PoE model | 24VI model: 9V to 36VDC with PoE galvanic isolation |
| | 24TVI model: 16.8V to 56VDC with PoE galvanic isolation |
| | WVI model: 16.8V to 137.5VDC with PoE galvanic isolation |

*Please double check the power input range on the product label.

Please make sure that the external power supply unit you use to provide the PoE voltage meet the following criteria:

- The power consumption can satisfy the total power request from all PD devices required.
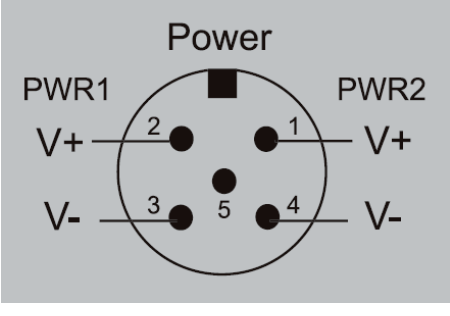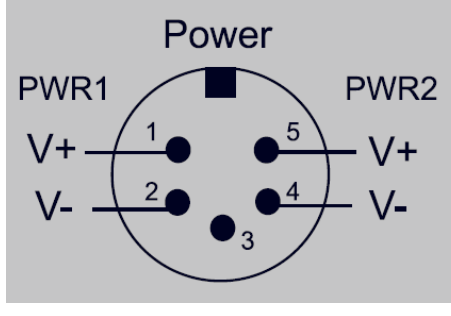
| M12 power connector | M23 power connector |
|---|--|
|  |  |


Pin assignment of Power input


■ Dual Power Input

The power input can be supported redundantly. The supply voltage is electrically isolated from the housing.

Note: With single power supply of the mains voltage, the device will report a power failure. You can disable this power fail event via web browser.

Attention: When connecting to 110V DC power sources, the following scenarios can damage to the switch. Please avoid these scenarios.

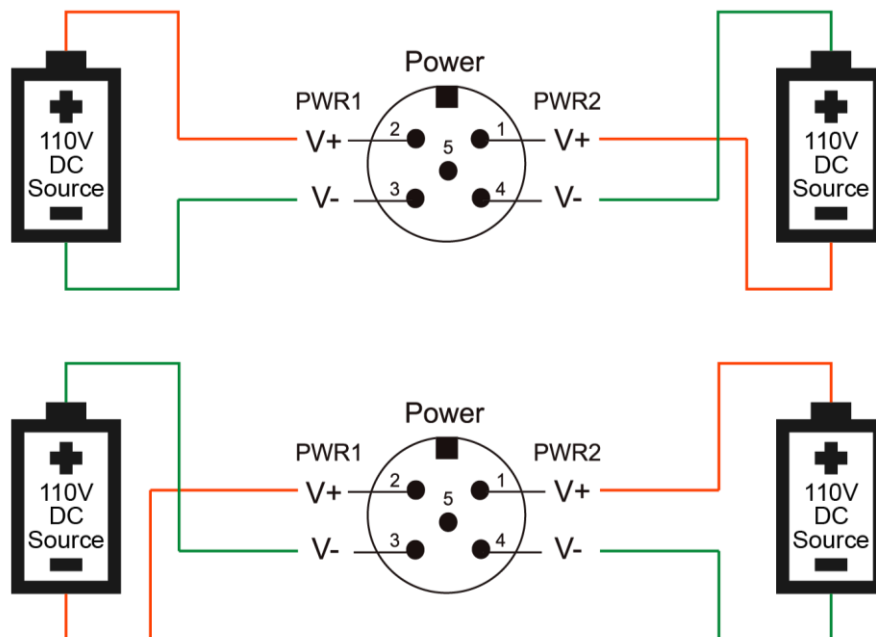

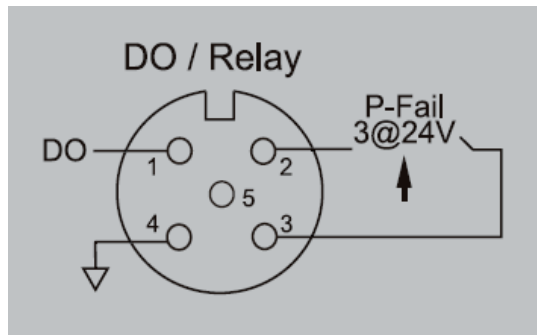

Pin assignment of alarm relay

A break in contact is reported via the relay contact :

- The failure of at least one of the two supply voltages.
- The break link status of at least one switch port.

3.1.4 Fitting the device, grounding


Install the system in a dry and clean area to protect the switch to get exposed with dirt.

Plug the connector to the power supply plug then turn on the power supply.

■ Ground – IP67 model

The chassis is grounded via a separate ground nut (M3).

Use toothed locking washers for a good electrical connection.

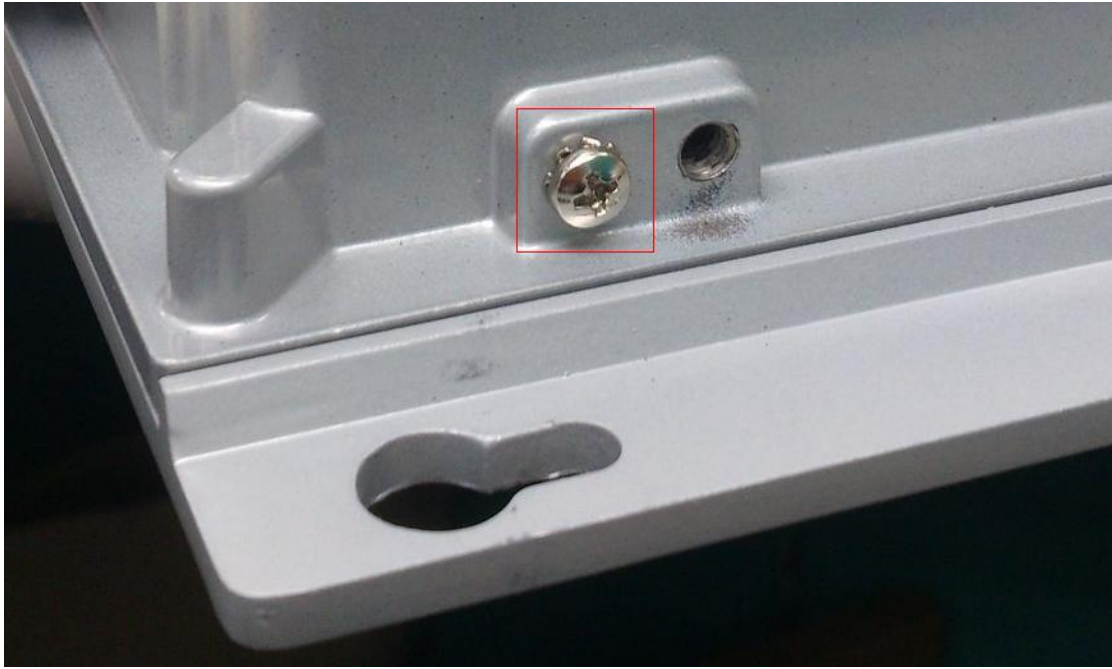


Ground screw of Ethernet switch

■ **Ground – IP54 model**

The chassis is grounded via a separate grounding nut (M6).


Use toothed locking washers for a good electrical connection.

***Note: The torque should not be over 14 kilogram-force centimeter (kgf·cm).
Using torque over 14 kgf·cm may cause damage to the grounding parts.**

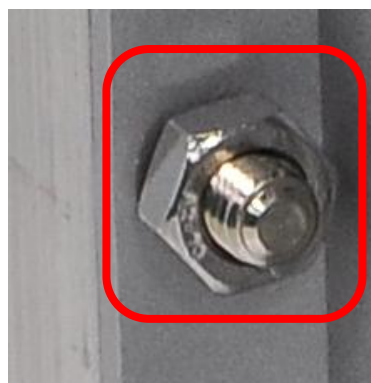



Ground screw of the switch

3.1.5 Connect the M12 connector with RJ-45 data cable, ports are not used shall be capped that comes with the package to insulate the surrounding.

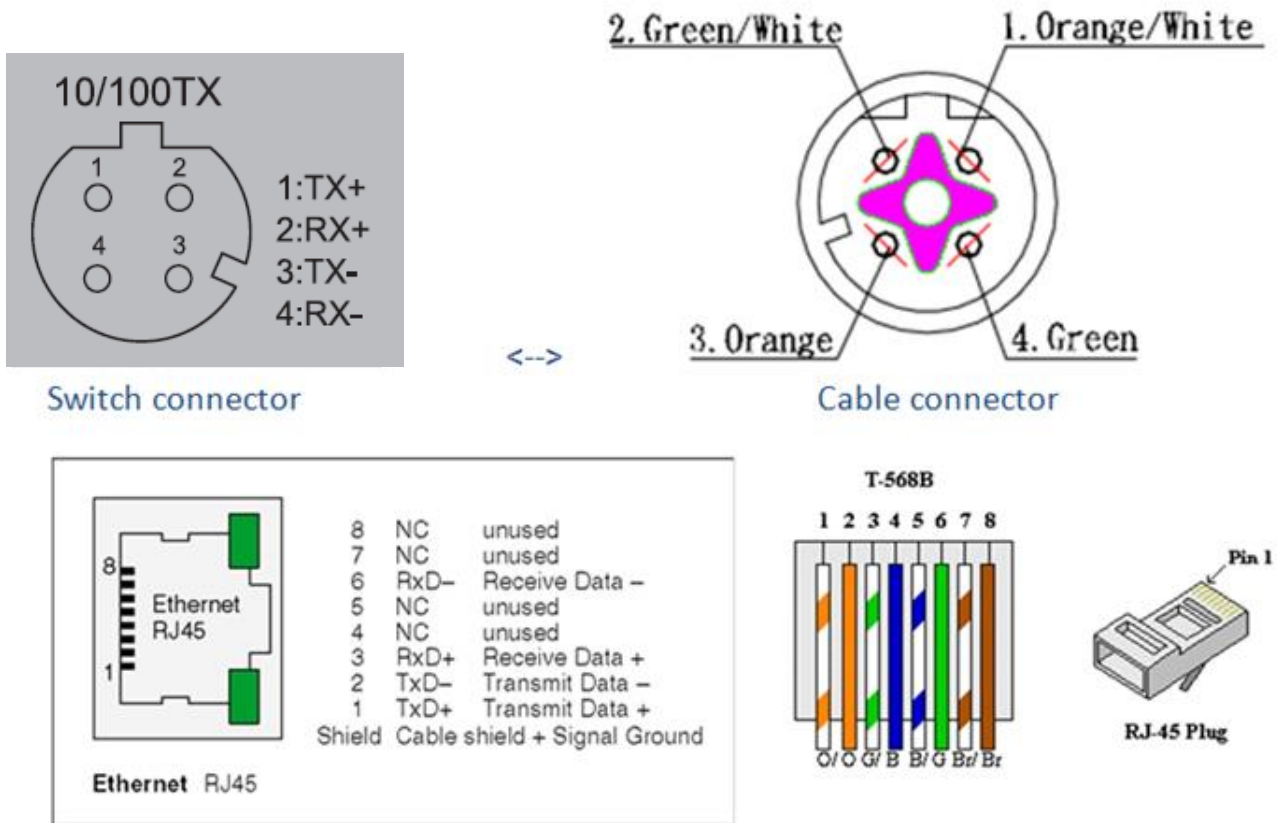

Pin assignment of M12 10/100Tx network connector

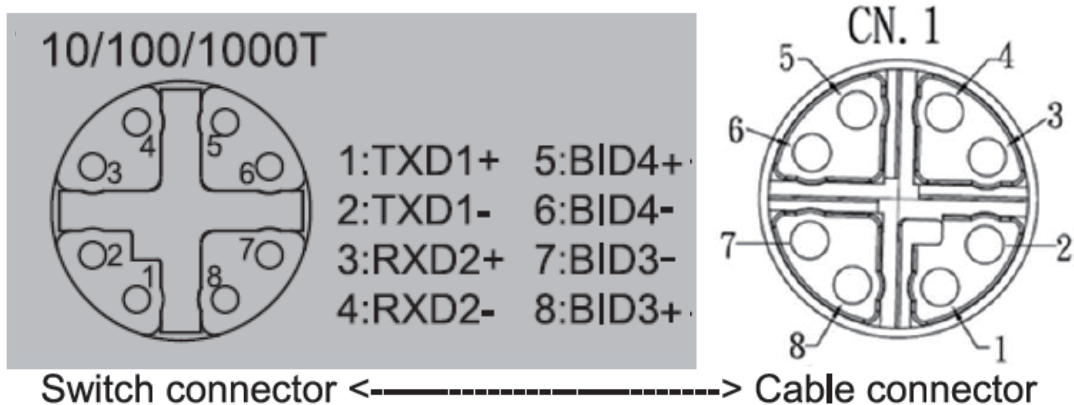

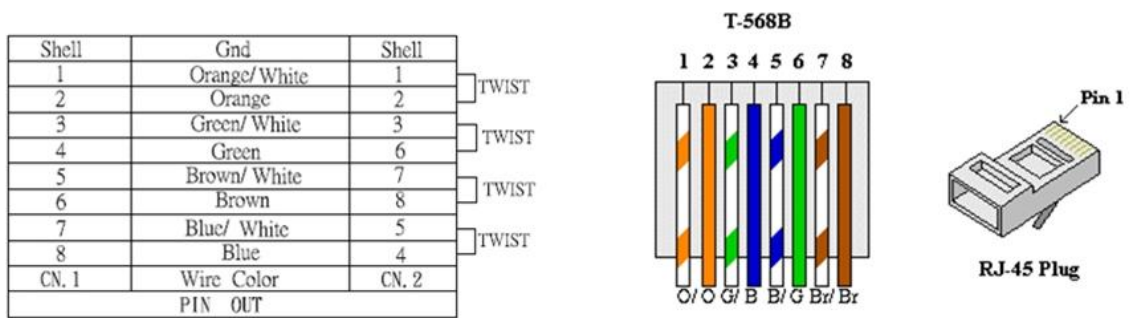

Pin assignment of M12 10/100/1000T network connector

3.1.6 Check the status of LED, make sure the switch was in working status.


Note:

- The protection class IP67/IP54 is only achieved when bolted together.
- The other components attaching to the system have to meet with the IP67/IP54 protection class in order to reach the whole system IP67/IP54 protection.
- Empty ports must be sealed with the protective caps supplied.

Chapter 4 Console Management

4.1. Connecting to the Console Port

The supplied cable which one end is M12 5-pole connector and the other end is RS-232 connector. Attach the end of RS-232 connector to PC or terminal and the other end of M12 connector to the console port of the switch. The connected terminal or PC must support the terminal emulation program.

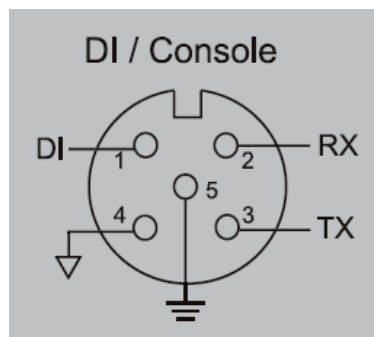

4.2. Login in the Console Interface

When the connection between Switch and PC is ready, turn on the PC and run a terminal emulation program or **Hyper Terminal** and configure its **communication parameters** to match the following default characteristics of the console port:


Baud Rate: 115200 bps

Data Bits: 8

Parity: none


Stop Bit: 1

Flow control: None

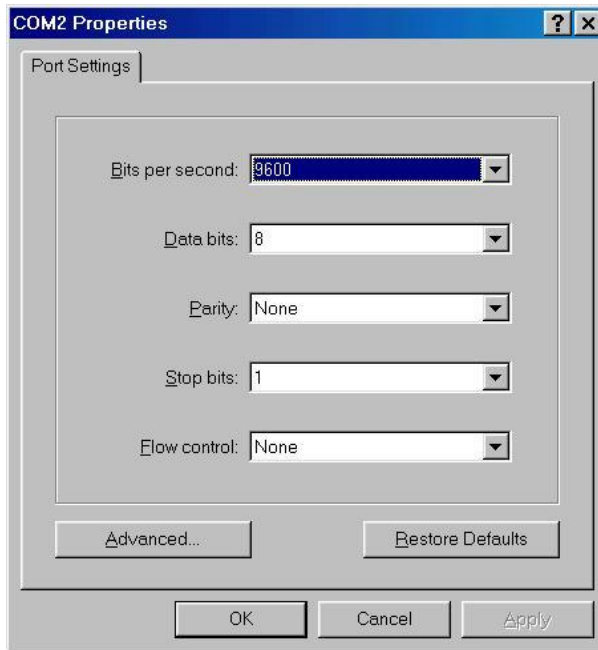

The settings of communication parameters

Having finished the parameter settings, click 'OK'. When the blank screen shows up, press Enter key to have the login prompt appears. Key in 'admin' (default value) for both User name and Password (use **Enter** key to switch), then press Enter and the Main Menu of console management appears. Please see below figure for login screen.

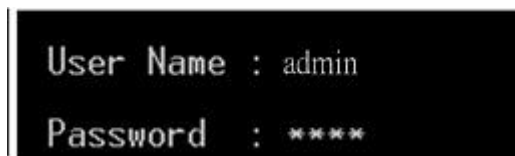

Console login interface

=====Notice=====

For web-based management, please refer to our "Software Management Manual".
Please contact support@lantechcom.tw for more information.