GLAND SEAL GUARD DATA SHEET

COMPANY: _____

CONTACT PERSON: _____

LOCATION: _____


PHONE: _____ **EXT:** _____

EMAIL: _____


EQUIPMENT #: _____

QUANTITY: _____


PLEASE SUBMIT PHOTOS WITH YOUR DATA SHEETS

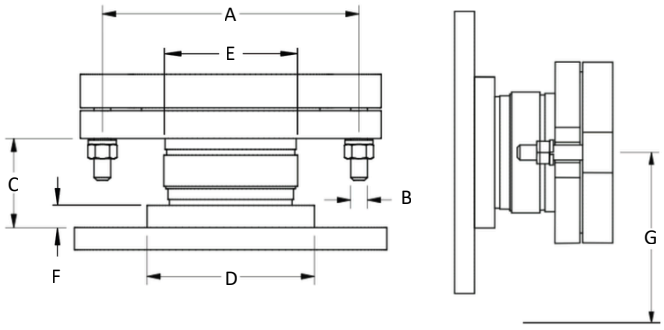

OPEN BOTTOM GUARD (Please Circle)

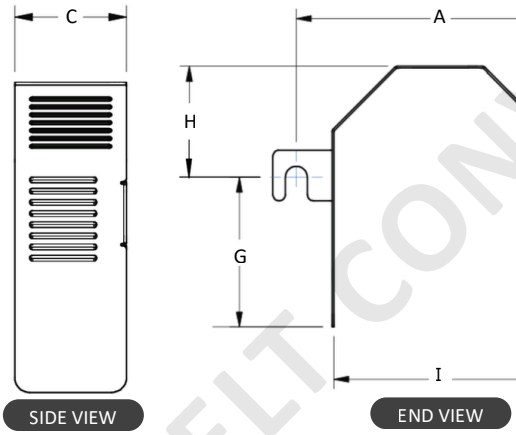

ENCLOSED BOTTOM GUARD (Please Circle)

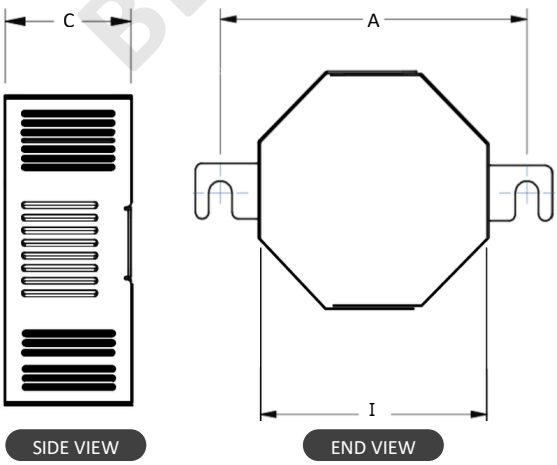

INFORMATION REQUIRED

ITEM	DIMENSION
A - Bolt Centers	
B - Bolt Diameter	
C - Maximum Distance with New Seal	
-Maximum Adjustment to Worn Seal	+_____
D - Largest Diameter to Guard	
E - Shaft Diameter	
F - Length of Largest Diameter to Guard	
G - Height from Bolt ℄ to Bottom of Guard	
H - Maximum Guard Height from Bolt ℄	
I - Maximum Guard Width	
Guard Bottom	◯ Open ◯ Enclosed

GUARD COATING/MATERIAL

ITEM	PLEASE INDICATE
Color - Guard Body	◯ *Yellow ◯ Black ◯ Other ◯ Uncoated
Guard Material	◯ *Mild Steel ◯ Stainless ◯ Aluminum ◯ Brass
Guard Coating	◯ *Powder Coat ◯ 2-Stage Pwdr Coat
Stainless Steel Hardware	◯ Yes ◯ *No

Items marked with * are standard

ADDITIONAL INFO

- Open bottom guards should be used where possible when there is no access to the hazard from the underside.
- Dimension *G* should be measured to within ½" of the housing, or to a degree that ensures the guard extends far enough to prevent a worker's fingers from reaching underneath and coming into contact with the hazard.
- Dimensions *H* and *I* are only required when there are obstructions present.
- These guards are designed to protect the full length of the shaft through the entire life of the packing seal. When adjusting the packing seal, adjust the guard to ensure the shaft is not exposed. (maximum gap = ¼")

ATTENTION

- GLAND SEAL GUARDS MOUNT TO THE GLAND SEAL PACKING BOLTS AND SHOULD ONLY BE INSTALLED BY AN INDIVIDUAL WHO IS COMPENTENT IN ADJUSTING THE PACKING SEALS.
- OVERTIGHTENING THE PACKING BOLTS MAY RESULT IN PREMATURE WEAR OR EQUIPMENT FAILURE.

ADDITIONAL NOTES / SKETCHES:

BELT CONVEYOR GUARDING