



SCHUBSTANGE

Ein kurzer Druck auf den Griff der Schubstange genügt und schon lässt sich der Kurs ihres Kindes sicher bestimmen. Sie eignet sich auch als Schiebehilfe für das Tret. Die Schubstange ist höhenverstellbar und wird einfach an der Sitzlehne montiert.

Montage und Einbau

- Bild (A)**
Nehmen Sie den Sitzbezug an der Sitzlehne ab und befestigen Sie die W-4-38 Rohrschellen (1) mit Gummischutz um die Sitzlehne des Trets. Schrauben Sie das Stützblech (2) mit M6x40 Schrauben und jeweils 4 Unterlegscheiben an den Schellen fest.
Befestigen Sie den Sitzbezug. Stechen Sie zwei Löcher in den Sitzbezug für die M5x50 Schrauben.
- Bild (B)**
Setzen Sie die zwei 10-er Rohrschellen (3) auf die Querstange der Sitzlehne. Montieren Sie eine Klemmschelle (4) mit M5x50 Schrauben am Stützblech und die zweite Klemmschelle mit M5x45 Schrauben an den 10-er Schellen. Führen Sie die Hülse (5) durch die Klemmschellen und ziehen Sie die Schrauben fest.
- Setzen Sie die Aluschelle (6, nicht abgebildet) auf die Hülse. Spannen Sie die Schubstange (7) auf der gewünschten Höhe fest.

Position	Bezeichnung	Art. Nr.	Anzahl
1	W-4 34 Rohrschelle mit Gummi	20795	2
2	Stützblech	23593	1
3	10-er Schelle	20769	2
4	Klemmschelle	23591	2
5	Hülse	23592	1
6	Alu Schelle 25,4mm	23558	1
7	Schubstange	22393	1
	div. Schrauben, Muttern, U-Scheiben		

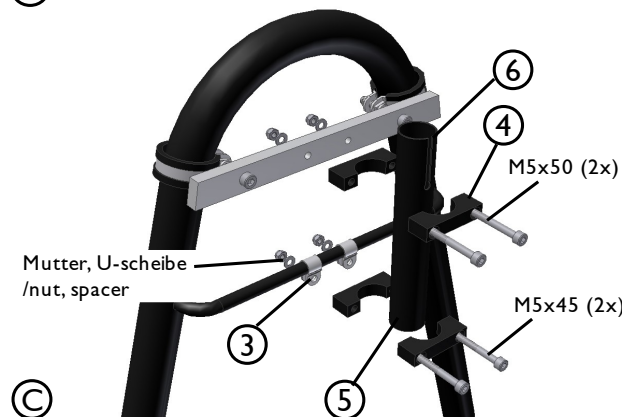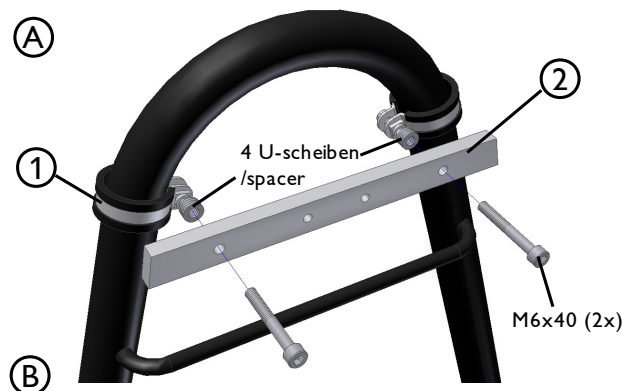

The push rod is suited as a moving aid and to control the course of your child. The push rod is high adjustable and easy to mount.

Installation

- Drawing (A)**
Take off the seat cover and fit the W-4 38 clamps (1) with the rubber element around the backrest. Tighten the gusset (2) with M6x40 screws at the clamps by using a 5mm allen key. Place 4 spacers underneath at both sides. Fit the seat cover. Cut two holes into the seat cover for the M5x50 screws.
- Drawing (B)**
Fit the small clamps (3) around cross bar. Mount one gripper clamp (4) with M5x50 screws at the gusset and the other one with M5x45 screws at the small clamps. Put the bush (5) between the gripper clamps and tighten the screws by using a 4mm allen key.
- Put the alu clamp (6, not displayed) on the bush. Clamp the push rod (7) at the desired high.

Position	Description	Art. No.	Number
1	clamp, W-4 34 with rubber	20795	2
2	gusset	23593	1
3	clamp, 10	20769	2
4	gripper clamp	23591	2
5	bush	23592	1
6	alu clamp 25,4mm	23558	1
7	push rod	22393	1
	misc. screws, nuts and spacers		