




# Wall Panels Ready-made

731.24.10-30.000.00 731.12.10-30.000.00

# **General Information**

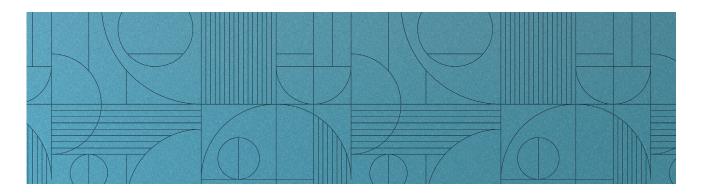

### Data

### Applicable article numbers

731.24.10-30.000.00 and .01 731.12.10-30.000.00 and .01

Total Dimensions <sup>3</sup>	24mm / 12 mm	0.9" / 0.5		
Height	2400mm / 2800mm	95" / 110"		
Width	1800mm / 1200mm	71" / 47"		



### **Material**

Wall Covering 100% PET (60% post-consumer) in 36 colors



### Weight<sup>1</sup>

24mm / 0.95"	4 kg/m2	0.82 lbs/sq.ft
12mm / 0.47"	2.4 kg/m2	0.49 lbs/sq.ft

# Included



1 - all weights are nominal

2 - Impact Acoustic warranty terms apply

# Specification Guide

Ensure you make the perfect choice by choosing our solutions for your next project. To get started, simply define some basic information and constraints about your space. Then explore our range of standard solutions or contact us directly for a more in-depth discussion of personalised customized options.

# Prepare this information:







Project Area

Plans

Other Considerations

## Specify your Wall Covering:








Material Thickness

Quantity

Color

# **Mount options:**







**Z-Clip profiles** 



Spray adhesive

732	Material Thickness <sup>2</sup>	12	Color	Mount type
732	24mm	10	Chanan anlaum	00
/32	12mm	12	Choose colour	00

Example: 732.24.12.662.00


Wall Covering - Kingscross, 2400 x 1800 x 24mm, 662 - Poster Red, 00 - Undercover mount

1 - Patent Pending No.102024000009088 2 - all dimensions are nominal

# Installation methodes overview

# Undercover Mount (standard) Patent Pending<sup>1</sup>

All our Wall Covering products come with pre-cut **Undercover** attachment points. Those points are distributed along the edge (10-15mm offset) and in the middle of the panel. **Undercover** mounting system allows for concealed mechanical attachment of the panel to the mounting surface. The **installation hardware** (screws, bolts) needs to be selected in accordance to the surface on which panels are applied, and are **not included**.

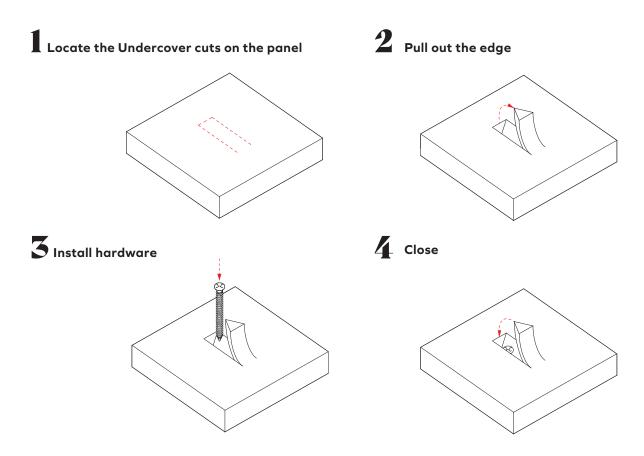

For full installation manual check our product page.

# **Alternative methods**

Please note, that selected hardware for alternative installation methods is not included in a default delivery scope and needs to be accounted for separately.

1 - Patent Pending No.102024000009088

# Tabula



# Geometry Information

### Tabula 24mm

### **Applicable articles numbers**

731.24.10.000.00 and .01 731.24.11.000.00 and .01 731.24.11.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set PET panels (in the dimensions below).

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# Tabula 12mm

### **Applicable articles numbers**


731.12.10.000.00 and .01 731.12.11.000.00 and .01 731.12.12.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of PET panels (in the dimensions below).

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

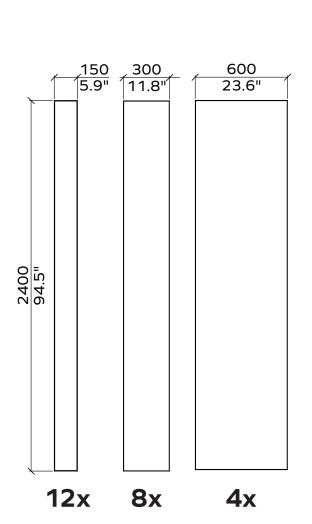

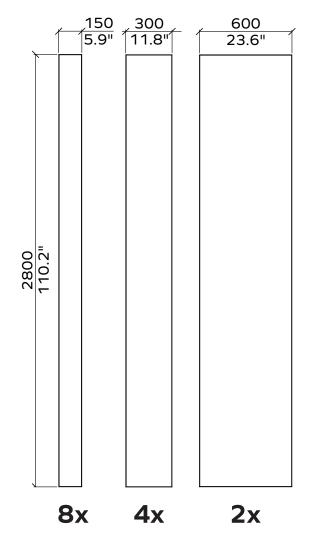

# **Fishbone**



# Geometry Information

### Fishbone 24mm

### **Applicable articles numbers**

731.24.15/16.000.00 and .01 (RIGHT/ LEFT)

### Scope of delivery

For each 24mm item you will receive a set of 3x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

### Fishbone 12mm

### **Applicable articles numbers**


731.12.15/16.000.00 and .01 (RIGHT/ LEFT)

### Scope of delivery

For each 12mm item you will receive a set of 2x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

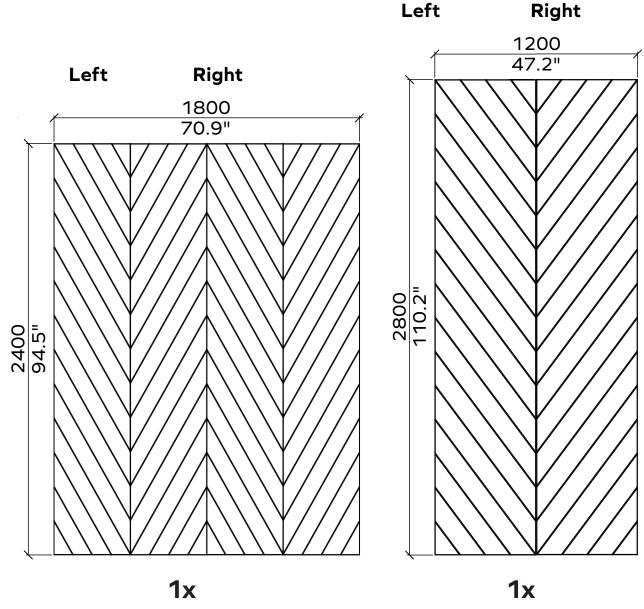

# Hexagon



# **Geometry Information**

# **Hexagon 24mm**

### Applicable articles numbers

731.24.20.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 65x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# Hexagon 12mm

### **Applicable articles numbers**


731.12.20.000.00 and .01


### Scope of delivery


For each 12mm item you will receive a set of 48x PET panels (in the dimensions below)


### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.



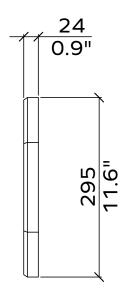

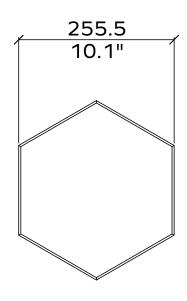

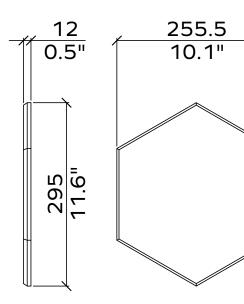

65x

48x



# **Flow**



# **Geometry Information**

### Flow 24mm

### Applicable articles numbers

732.24.11.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 3x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

### Flow 12mm

### **Applicable articles numbers**


732.12.11.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 2x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

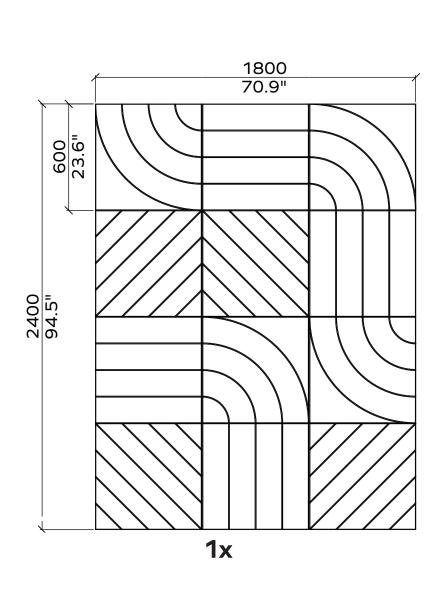

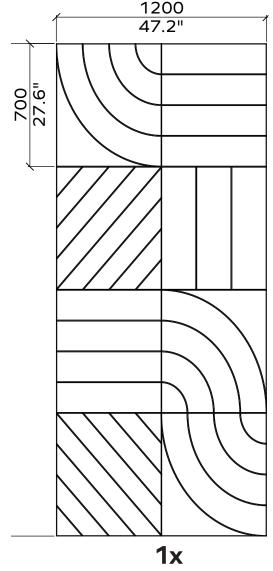

# Kingscross



# **Geometry Information**

# Kingscross 24mm

### Applicable articles numbers

732.24.12.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 3x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# Kingscross 12mm

### **Applicable articles numbers**


732.12.12.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 2x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

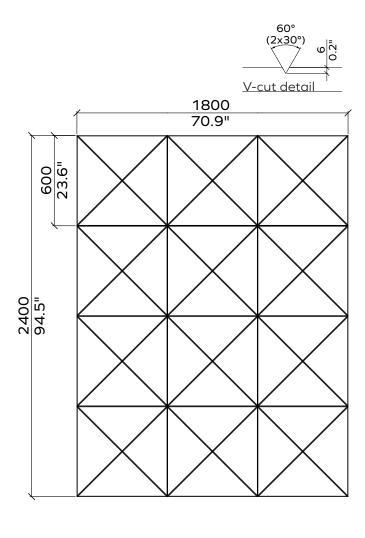

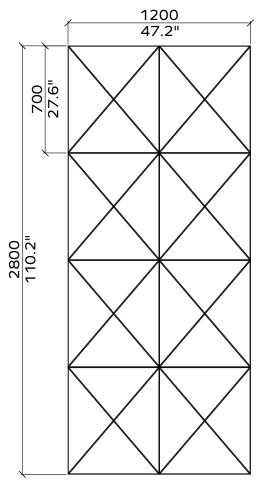

1x 1x

# Vertigo

# Custom solutions available

# Geometry Information

# Vertigo 24mm

### **Applicable articles numbers**

732.24.13.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 3x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# Vertigo 12mm

### **Applicable articles numbers**


732.12.13.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 2x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

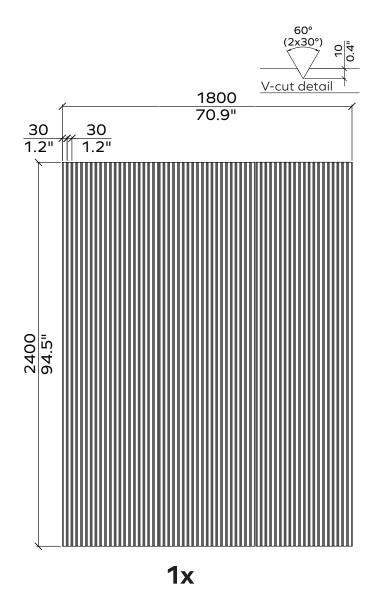

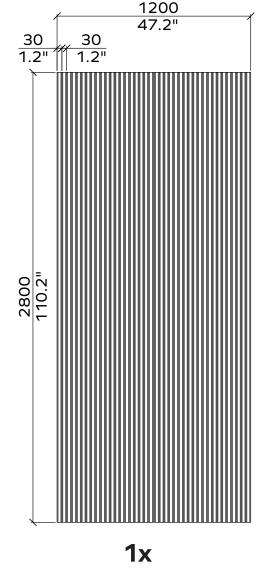

# **Vertigo Fine**

# Custom solutions available

# **Geometry Information**

# **Vertigo Fine 24mm**

### Applicable articles numbers

732.24.14.000.30 and .31

### Scope of delivery

For each 24mm item you will receive a set of 3x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# **Vertigo Fine 12mm**

### **Applicable articles numbers**


732.12.14.000.30 and .31


### Scope of delivery

For each 12mm item you will receive a set of 2x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

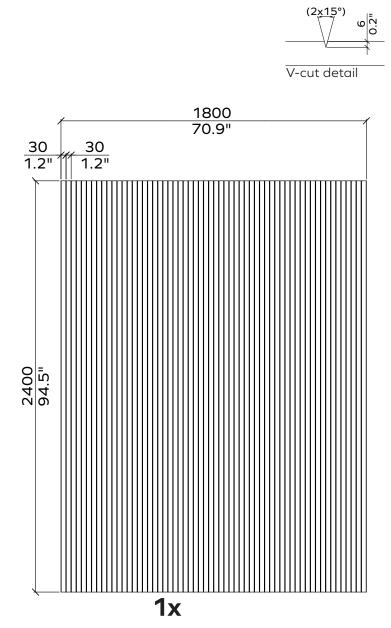

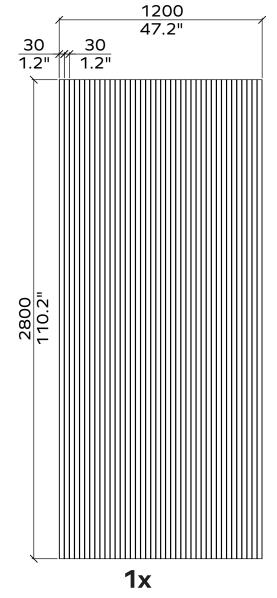

# Vertigo Wide

# Custom solutions available

# Geometry Information

# Vertigo Wide 24mm

### Applicable articles numbers

732.24.31.000.10 and .11

### Scope of delivery

For each 24mm item you will receive a set of 3x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# Vertigo Wide 12mm

### **Applicable articles numbers**

732.12.31.000.10 and .11


### Scope of delivery


For each 12mm item you will receive a set of 2x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

1200

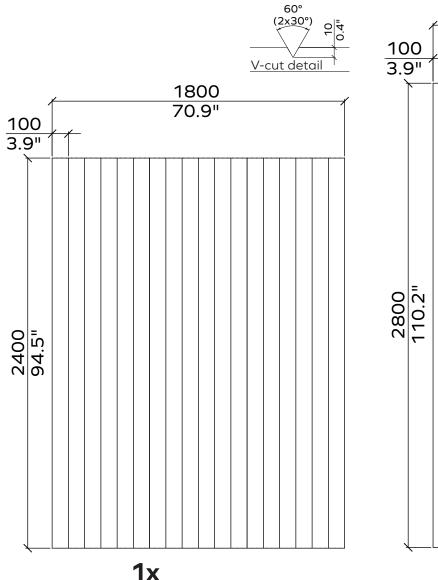

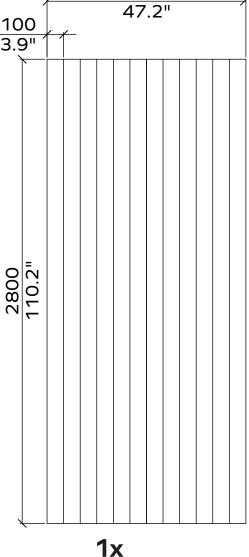

# Vertigo Irregular

# Custom solutions available

# **Geometry Information**

# Vertigo Irregular 24mm

### **Applicable articles numbers**

732.24.15.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 3x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# Vertigo Irregular 12mm

### Applicable articles numbers


732.12.15.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 2x PET panels (in the dimensions below)


### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

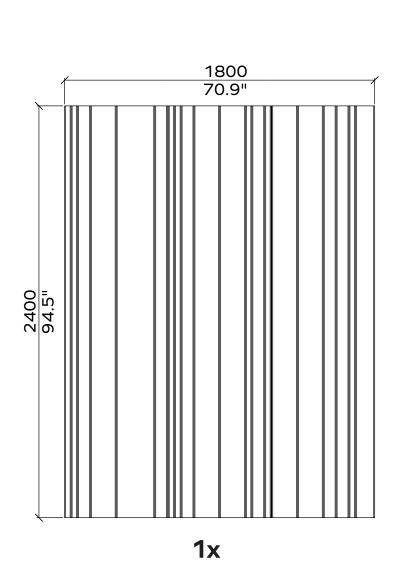

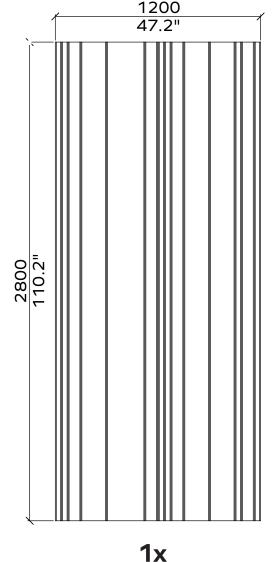

# Prisma



# Geometry Information

### Prisma 24mm

### Applicable articles numbers

732.24.16.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

### Prisma 12mm

### **Applicable articles numbers**


732.12.16.000.00 and .01

### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

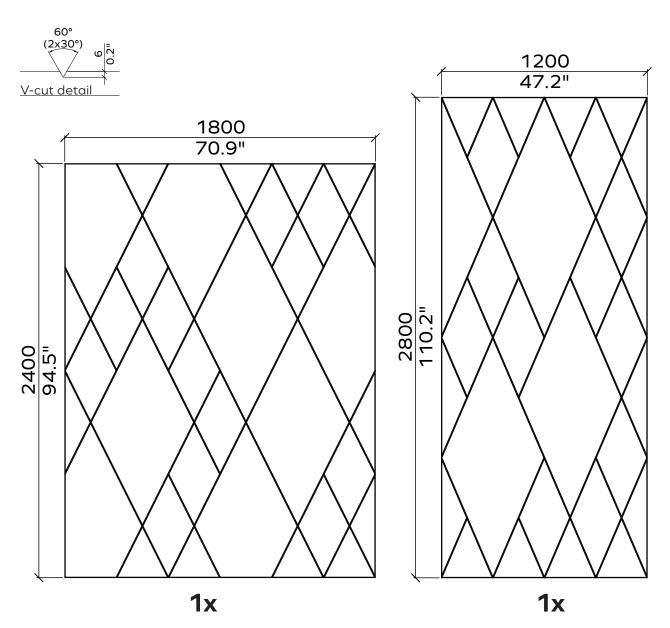

# **Facet**



# **Geometry Information**

### Facet 24mm

### Applicable articles numbers

732.24.17.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

### Facet 12mm

### Applicable articles numbers


732.12.17.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

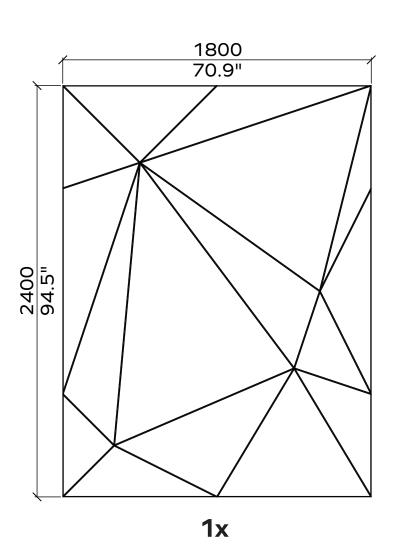

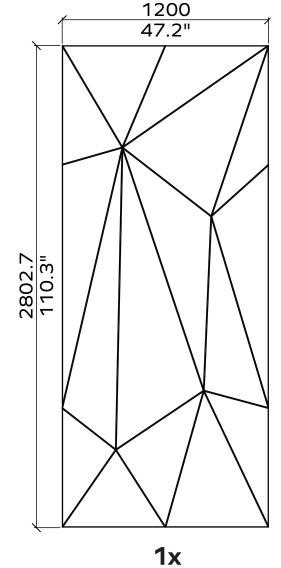

# Maze

# Custom solutions available

# **Geometry Information**

### Maze 24mm

### Applicable articles numbers

732.24.18.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

### Maze 12mm

### Applicable articles numbers


732.12.18.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

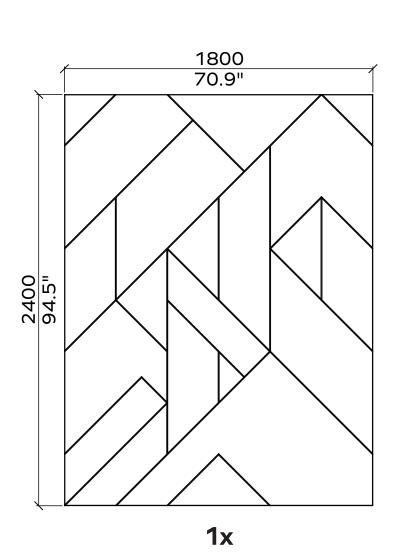

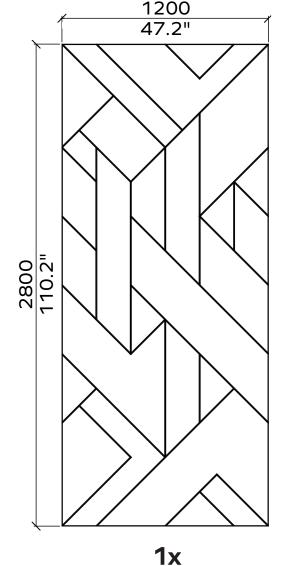

# Gatsby

# Custom solutions available

# **Geometry Information**

# **Gatsby 24mm**

### Applicable articles numbers

732.24.19.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# Gatsby 12mm

### Applicable articles numbers


732.12.19.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)


### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

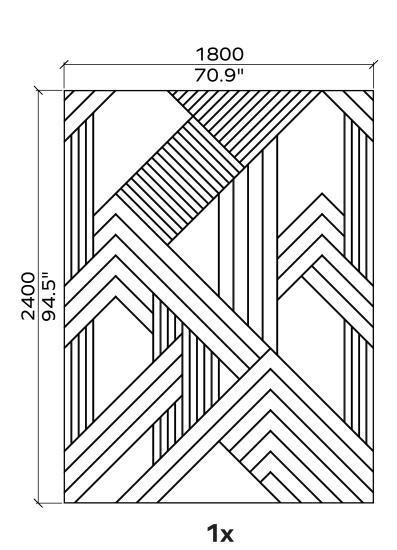

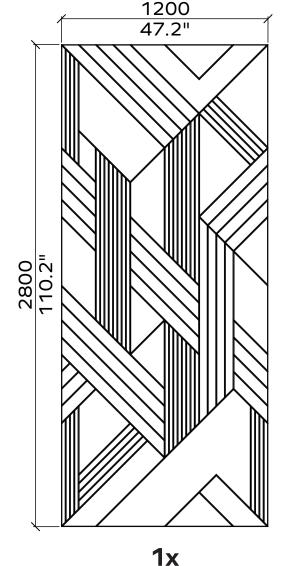

# Contour



# Geometry Information

### Contour 24mm

### Applicable articles numbers

732.24.20.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

### Contour 12mm

### **Applicable articles numbers**


732.12.20.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers


These panels are mounted with a concealed attachment system. For other options contact our consultants.

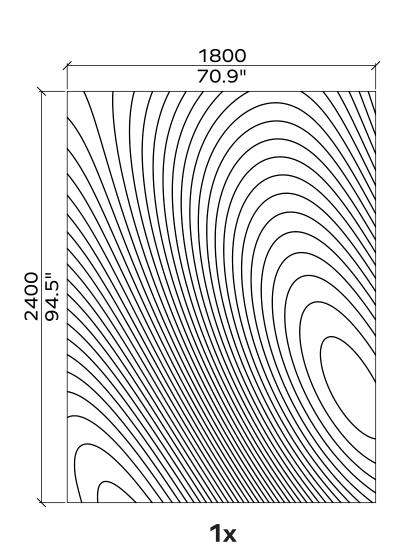

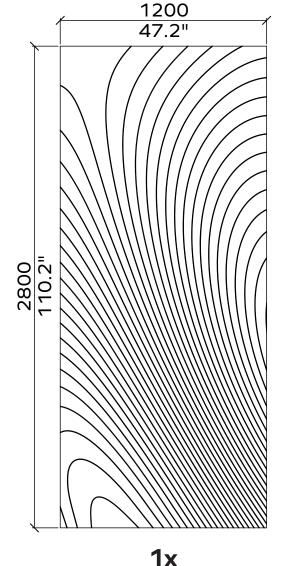


# Contour

# Patterns 24mm

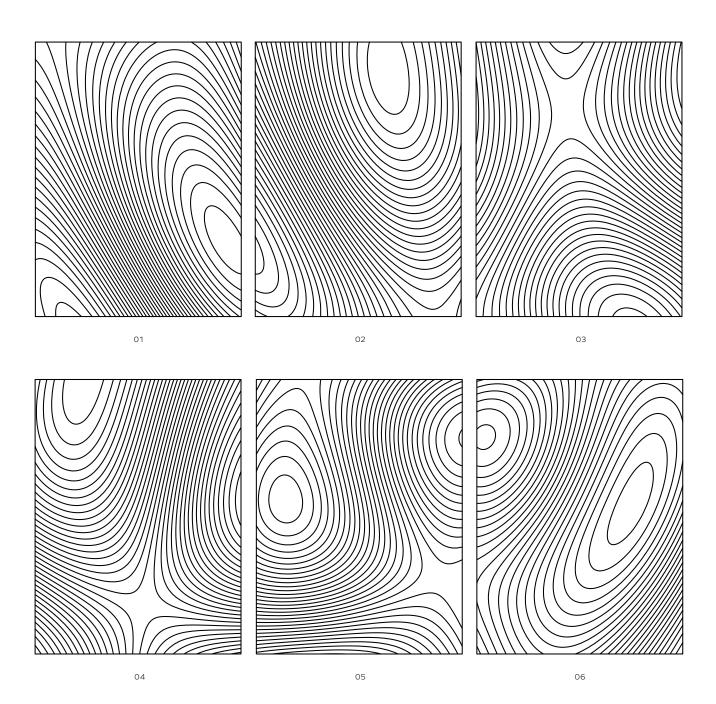

# Contour

# Patterns 12mm

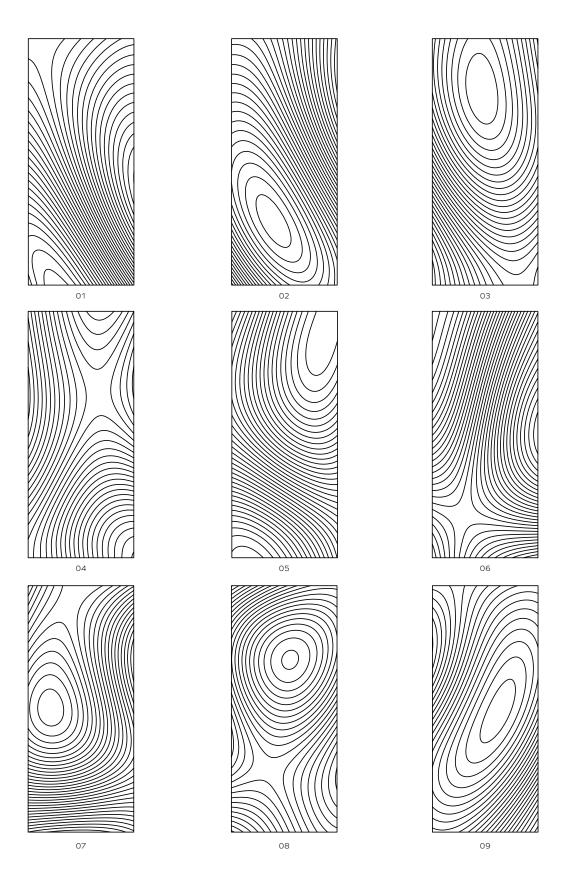

# Loop

# Custom solutions available

# Geometry Information

# Loop 24mm

### Applicable articles numbers

732.24.21.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# Loop 12mm

### **Applicable articles numbers**


732.12.21.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

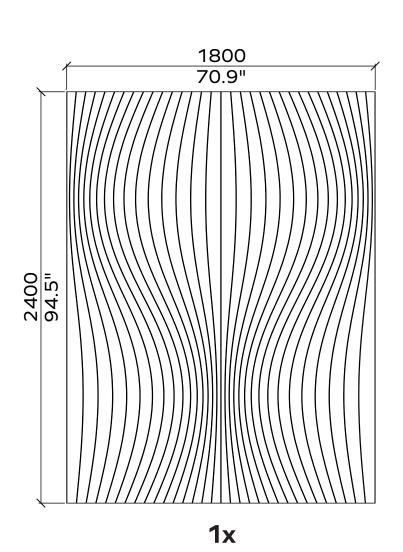

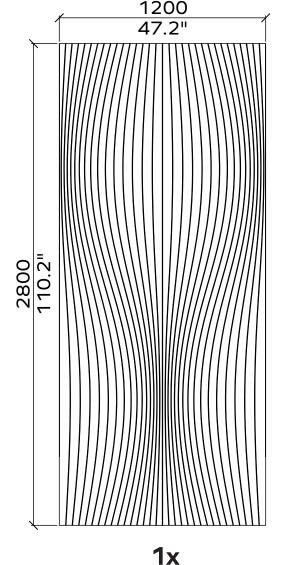

# Maya

# **Geometry Information**



# Maya 24mm

### Applicable articles numbers

732.24.22.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# Maya 12mm

### Applicable articles numbers


732.12.22.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

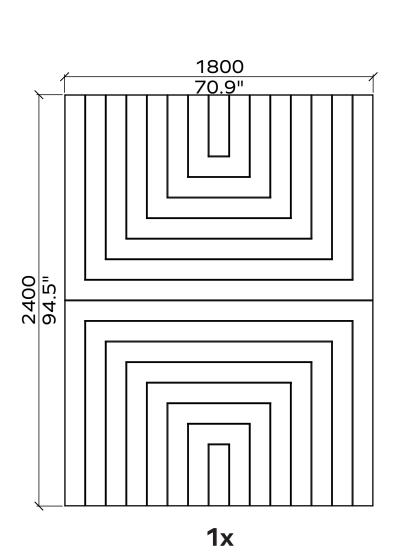

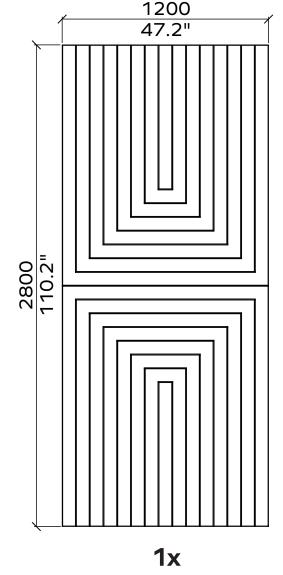

# Fylo

# Geometry Information



# Fylo 24mm

### Applicable articles numbers

732.24.23.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# Fylo 12mm

### **Applicable articles numbers**


732.12.23.000.00 and .01

### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

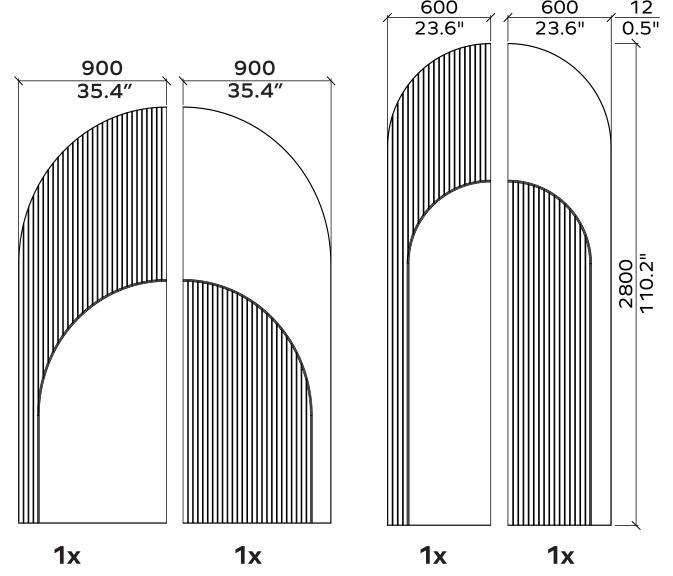

# Cottage

# Custom solutions available

# **Geometry Information**

# Cottage 24mm

### Applicable articles numbers

732.24.24.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# Cottage 12mm

### Applicable articles numbers


732.12.24.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

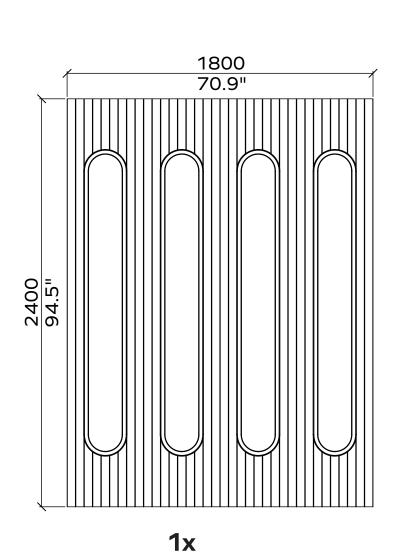

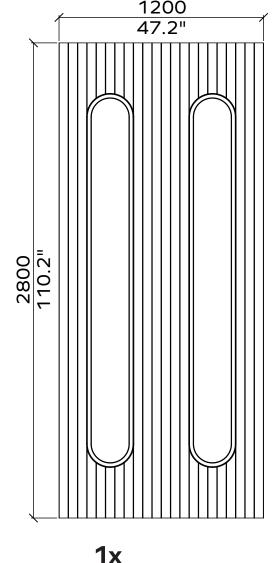

# Fon



# Geometry Information

### Fon 24mm

### **Applicable articles numbers**

732.24.25.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

### Fon 12mm

### **Applicable articles numbers**


732.12.25.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

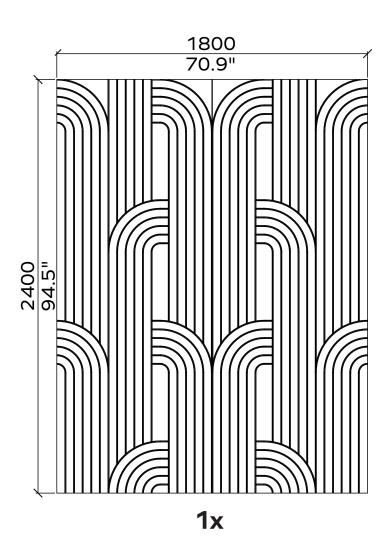

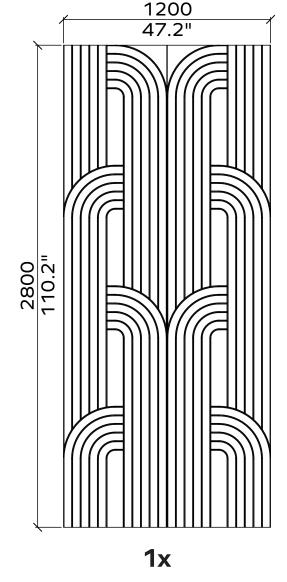

# **Pass**



# Geometry Information

### Pass 24mm

### **Applicable articles numbers**

732.24.26.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

### Pass 12mm

### **Applicable articles numbers**


732.12.26.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

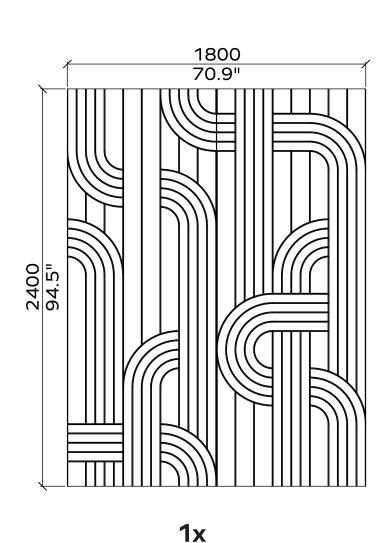

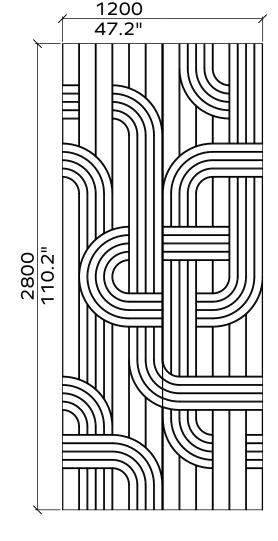

**1**x

# Bau



# **Geometry Information**

### Bau 24mm

### **Applicable articles numbers**

732.24.27.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

### Bau 12mm

### **Applicable articles numbers**


732.12.27.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

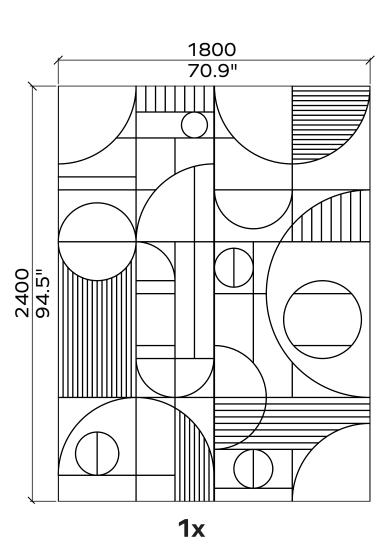

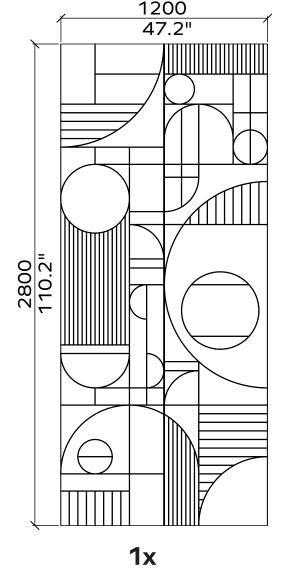

# Vela



# **Geometry Information**

# Vela 24mm

### Applicable articles numbers

732.24.28.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

### Vela 12mm

### Applicable articles numbers


732.12.28.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### **Applicable articles numbers**

These panels are mounted with a concealed attachment system. For other options contact our consultants.

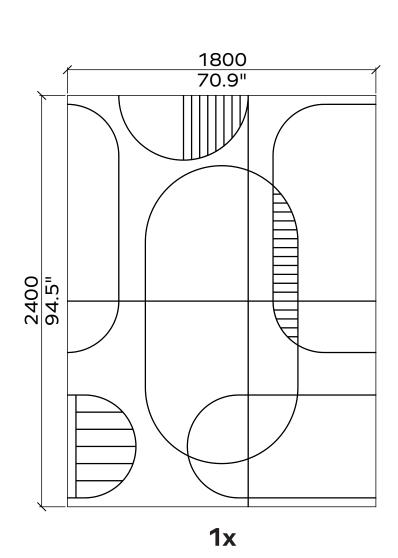

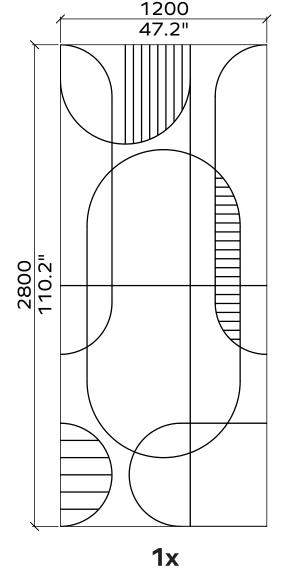

# **Tapis**

# Custom solutions available

# Geometry Information

# Tapis 24mm

### Applicable articles numbers

732.24.29.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

# Tapis 12mm

### Applicable articles numbers


732.12.29.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers


These panels are mounted with a concealed attachment system. For other options contact our consultants.

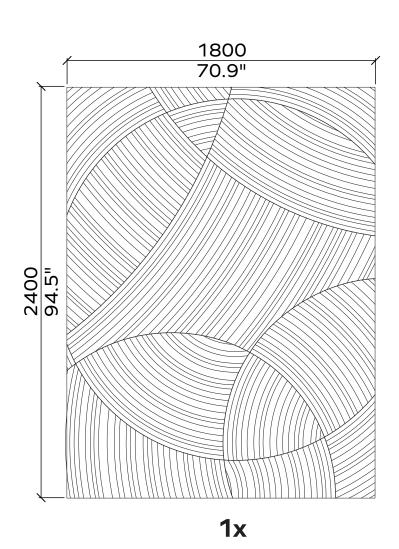


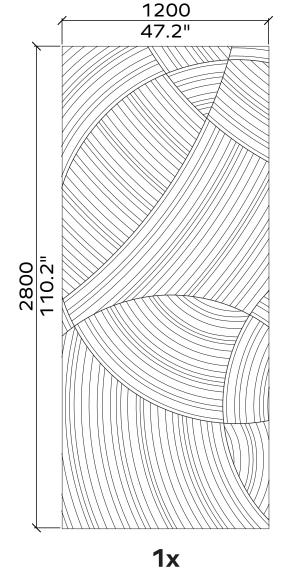


# **Tapis**


# Patterns 24mm

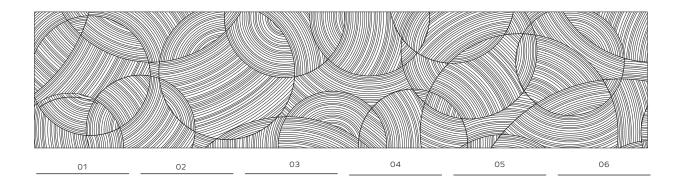


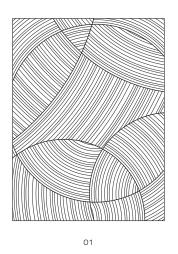




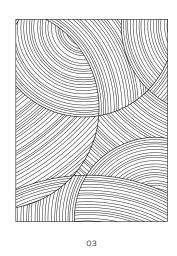

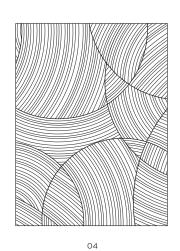


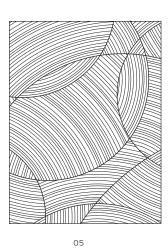

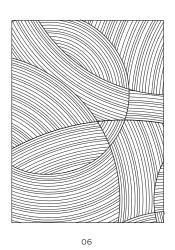

# **Tapis**

# Patterns 12mm

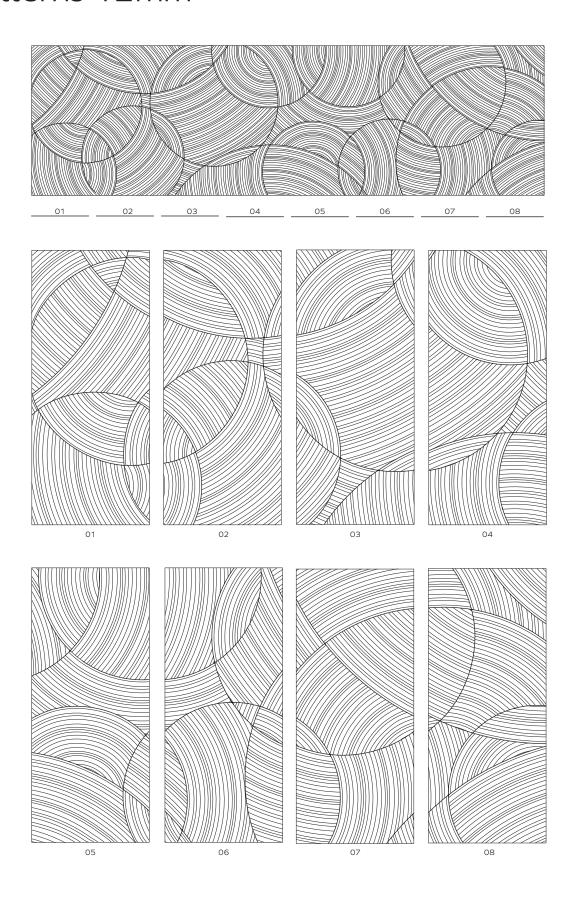

# Stream

# Custom solutions available

# Geometry Information

### Stream 24mm

### **Applicable articles numbers**

732.24.30.000.00 and .01

### Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

### Applicable articles numbers

These panels are mounted with a concealed attachment system. For other options contact our consultants.

### Stream 12mm

### **Applicable articles numbers**


732.12.30.000.00 and .01


### Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

### **Applicable articles numbers**


These panels are mounted with a concealed attachment system. For other options contact our consultants.

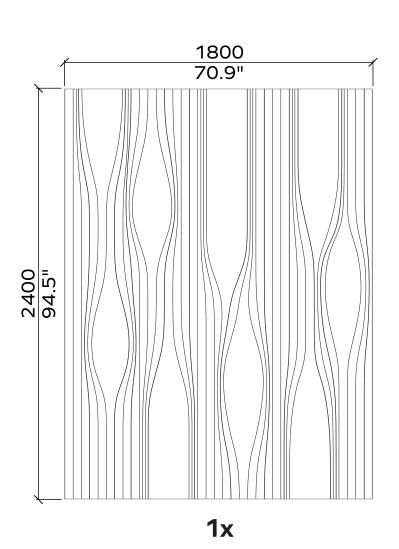


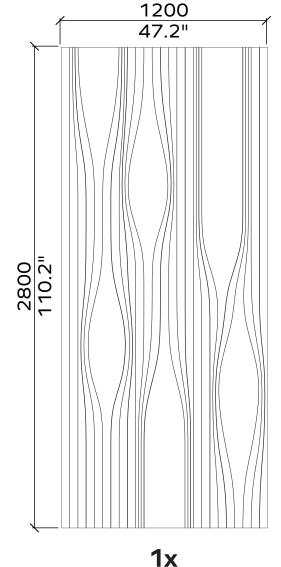



# Stream


# Patterns 24mm

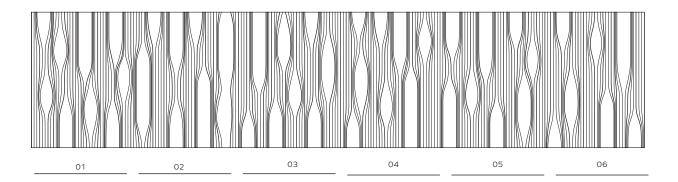


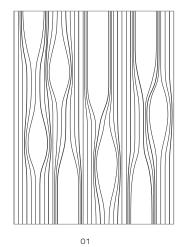


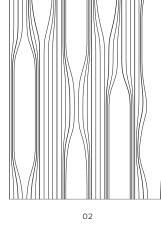

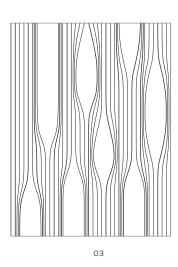

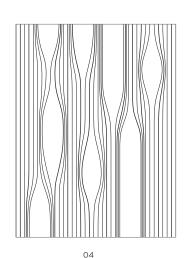


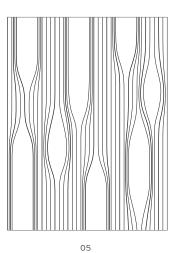

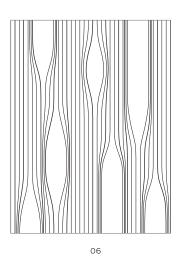


# Stream

# Patterns 12mm

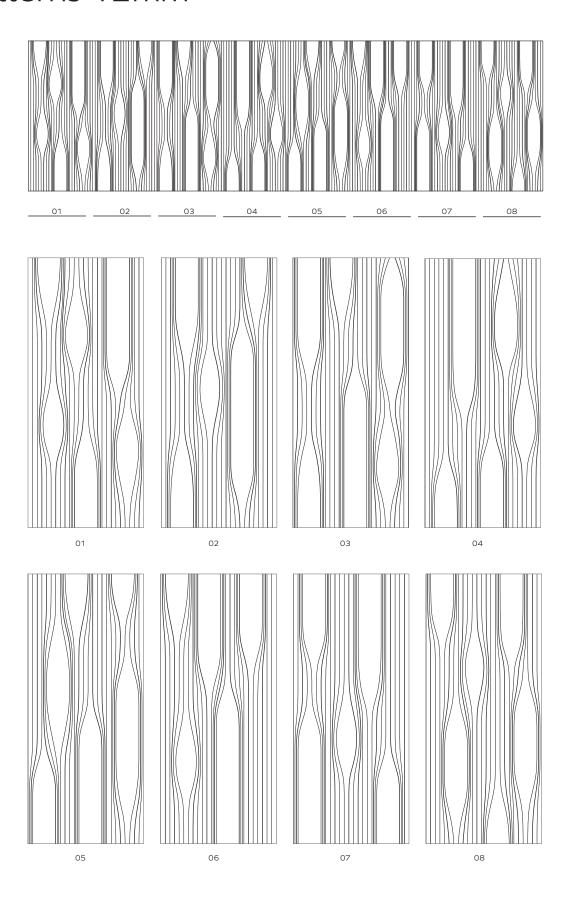

# **ARCHI**SONIC<sub>®</sub> Felt Colors



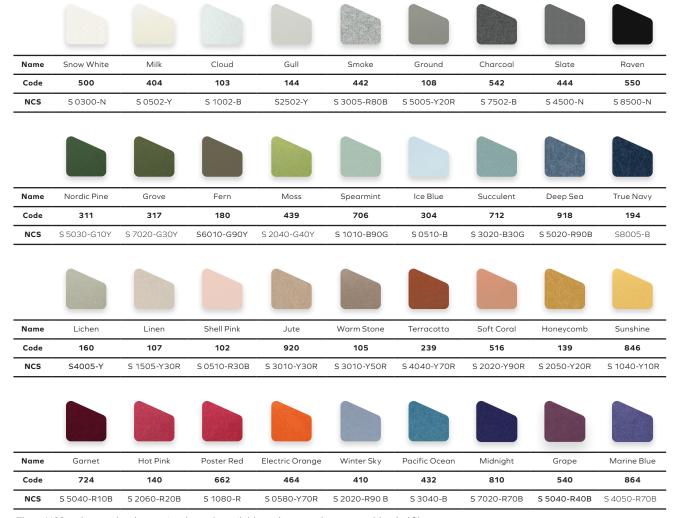

These NCS codes are the closest visual match available and may not be exact to blended fibres.

**ARCHI**SONIC®

### **Colors**

Experience our ARCHISONIC® Felt material with a stunning selection of 36 colors across 8 distinct families, thoughtfully curated by *Colour Hive* in London. Effortlessly combine colors harmoniously to suit your preferences. Discover more in our Materials brochure and order your free sample box today.

### **Color fastness**

Class 6

ISO 105-B02:A1

### Order a free sample box



# **ARCHISONIC**® Felt

# Material Specification

Product Name	Archisonic® Felt			
Content	100% PET (60% certified post-consumer content)			
Thickness <sup>1</sup>	12mm (0.47") 24mm (0.94")			
Max. Size	1200x2800mm (47"x110")	1800x2400mm (70"x94")		
Acoustic <sup>2</sup>	<b>ASTM:</b> NRC=0.6 <b>ISO</b> : αw=0.65	<b>ASTM</b> : NRC=0.9 <b>ISO</b> : αw=0.95		
Density <sup>1</sup>	2400 g/m² (0.49 lbs/ sqft)	4000 g/m² (0.82 lbs/sqft)		
Color Fastness	Class 6 ISO 105-B02:A1			
Color	36 colors (see Archisonic® Felt Color page for more information)			
Maintenance	For daily cleaning we recommend alcohol solution (75%), e.g. Pantasept. In case of contamination by dust or fluff, use feather duster or a regular vacuum cleaner. For heavy dirt, treat the material with hydrogen peroxide.			
Production Lead time <sup>3</sup>	21 days			
Fire Rating	DIN EN 13501-1: <b>B-s1, d0</b>	ASTM E84 Class A		
VOC Emission	28 Days French Regulation A+ ASTM E84 Pass Breeam® (International, UK, NL, SE, NOR) Examplary CDPH (CDPH/EHLB/Standard Method V1.2) Pass			
Certifications	Declare label, Cradle to Cradle, UL Environmental Product Declaration, Member of US Green Building Council, Ecobau 1st Priority, Climmate-KIC, VOC emissions in LEED EQ credit (low-emitting products), SCS Recycled Content			
Durability	Contract			

<sup>1 -</sup> all values are nominal 2 - measured with 300mm air cavity 3 - depending on the location and type of product

























# **Acoustic Performance**

### **Testing Standards**




ISO 354:2003	Acoustics — Measurement of sound absorption in a reverberation room
ISO 11654:1997	Acoustics — Sound absorbers for use in buildings — Rating of sound absorption
ISO 20189:2018	Acoustics — Screens, furniture and single objects intended for interior use — Rating of sound absorption
	and sound reduction of elements based on laboratory measurements
ASTM C423-17	Standard Test Method for Sound Absorption and Sound Absorption Coefficients by the Reverberation
	Room Method
ASTM E795-16	Standard Practices for Mounting Test Specimens During Sound Absorption Tests

Acoustic Test Results	αw	SAA	NRC
Archisonic 12mm (no air gap)	0.3 (MH)	0.42	0.45
Archisonic 12mm (50mm air gap)	0.5 (MH)	0.70	0.70
Archisonic 12mm (50mm insulation)	1.00	1.00	0.95
Archisonic 24mm (no air gap)	0.55 (MH)	0.70	0.70
Archisonic 24mm (50mm air gap)	0.65 (MH)	0.78	0.80
Archisonic 24mm (50mm insulation)	1.00	1.00	1.00

The NRC rating is calculated as the average of the absorption coefficients measured at frequencies of 250Hz, 500Hz, 1000Hz and 2000Hz and round to the nearest 0.05. SAA rating is calculated as the average of the sound absorption coefficients of a material for the twelve one-third octave bands from 200Hz through 2500Hz and rounded off to the nearest 0.01.

### **Acoustic Performance**

Frequency (Hz)		125	250	500	1000	2000	4000
Archisonic 12mm (no air gap)	$\alpha_{p}$	0.05	0.05	0.25	0.55	0.85	1.00
Archisonic 12mm (50mm air gap)	$\alpha_{p}$	0.10	0.30	0.60	0.90	1.00	1.00
Archisonic 12mm (50mm insulation)	$\alpha_{p}$	0.35	0.85	1.00	1.00	1.00	1.00
Archisonic 24mm (no air gap)	$\alpha_{p}$	0.05	0.25	0.55	0.90	1.00	1.00
Archisonic 24mm (50mm air gap)	$\alpha_{p}$	0.15	0.35	0.75	1.00	1.00	1.00
Archisonic 24mm (50mm insulation)	$\alpha_{p}$	0.40	0.90	1.00	1.00	1.00	1.00

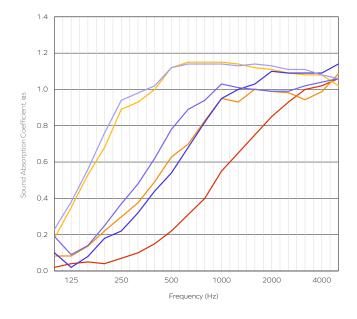

Archisonic 12mm (no air gap)

Archisonic 12mm (50mm air gap)

Archisonic 12mm (50mm insulation)


Archisonic 24mm (no air gap)

Archisonic 24mm (50mm air gap)

Archisonic 24mm (50mm insulation)

The table represents the practical sound absorption coefficient  $(\alpha_p)$  in accordance with ISO 11654. The graph represents the sound absorption coefficients (as) in the third octave band center frequencies in accordance with ISO 354. Measurement used Pink Noise as excitation signal in a reverberant room.

# Reference Projects

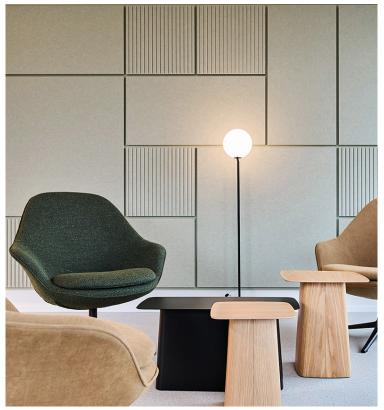





# Additional Information

### **Online Resources**

A variety of resources are available online for all of our products. Please visit the product's page for more information.



CAD files



Spec sheets and Installation Guide



Color families



Instruction videos



Associated products specs.

# **Ordering Process**

Our experienced team of Project Consultants will guide and support you throughout the order process. We fulfill the majority of our orders in as little as 21 days<sup>1</sup> from your first point of contact, allowing you to focus on what truly matters to you.















Contact our consultant

Order Confirmation

Dispach

Delivery

### **Contact Us**

Ready to make an impact? We are just an email or call away to discuss your project and answer any question.









1 - Quote and Production times may vary.

# HWe Make An Invact