




Wall Panels Ready-made

731.24.11-31.000.00 731.12.11-31.000.00 732.24.10-32.000.00 732.12.10-32.000.00

General Information

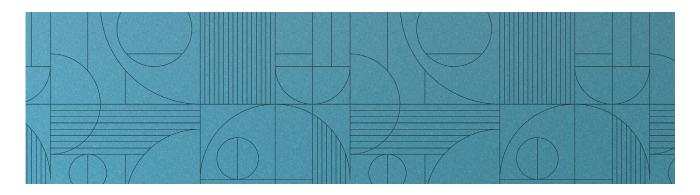

Data

Applicable article numbers

731.24.11-31.000.00 and .10 731.12.11-31.000.00 and .10 732.24.10-32.000.00 and .10 732.12.10-32.000.00 and .10

lotal Dimensions'	24mm / 12 mm	0.9" / 0.5"		
Height	2400mm / 2800mm	95" / 110"		
Width	1800mm / 1200mm	71" / 47"		



Material

Wall Covering 100% PET (60% post-consumer) in 36 colours



Weight²

24mm / 0.95"	4 kg/m2	0.82 lbs/sq.ft
12mm / 0.47"	2.4 kg/m2	0.49 lbs/sq.ft

Included



1 – all dimensions are nominal

2 - all weights are nominal

3 - Impact Acoustic warranty terms apply

IMPACT ACOUSTIC®
Wall Panels rev.01 - 10.11.25

(Switzerland) (USA) (Philippines) connect@impactacoustic.com usa@impactacoustic.com philippines@impactacoustic.com (+41) 41 244 14 00 (+1) 619 378 2100 (+63) 285 80 02 50



Specification Guide

Ensure you make the perfect choice by choosing our solutions for your next project. To get started, simply define some basic information and constraints about your space. Then explore our range of standard solutions or contact us directly for a more in-depth discussion of personalised customized options.

Prepare this information:







Project Area

Plans

Other Considerations

Specify your Wall Covering:









Material Thickness

Quantity

Colour

Mount options:







Undercover mount¹

Z-Clip profiles

Spray adhesive

732	Material Thickness ²	12	Colour	Mount type
722	24mm	10	Channa anlaum	00
732	12mm	12	Choose colour	00

Example: 732.24.12.662.00

Wall Covering - Kingscross, 2400 x 1800 x 24mm, 662 - Poster Red, 00 - Undercover mount


1 - Patent Pending No.102024000009088 2 - all dimensions are nominal

Installation methods overview


Undercover Mount (standard) Patent Pending¹

All our Wall Covering products come with pre-cut **Undercover** attachment points. Those points are distributed along the edge (10-15mm offset) of the panel. **Undercover** mounting system allows for concealed mechanical attachment of the panel to the mounting surface. The **installation hardware** (screws, bolts) needs to be selected in accordance to the surface on which panels are applied, and are **not included.**


Locate the Undercover cuts on the panel

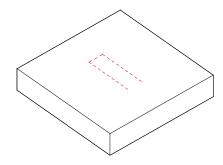


2 Pull out the edge

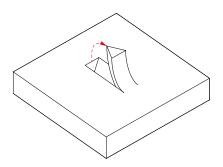

3 Install hardware

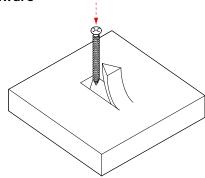

4 Close

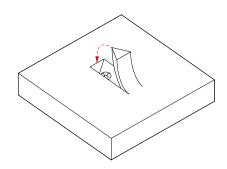

PLAID



Geometry Information

Plaid 24mm

Applicable article numbers

732.24.32.000.00 and .10


Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

$$V$$
-cut detail V -cut detail V -cut detail

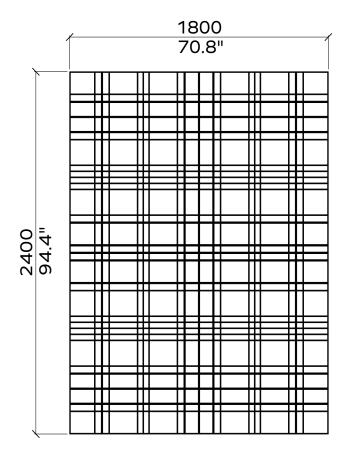

Plaid 12mm

Applicable article numbers


732.12.32.000.00 and .10

Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)


Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

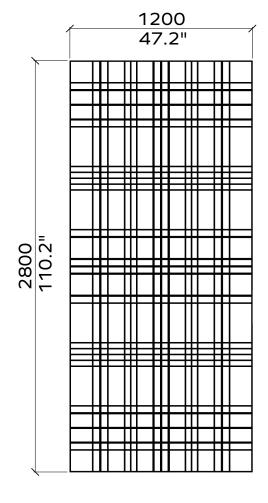

1x 1x

TABULA



Geometry Information

Tabula 24mm

Applicable article numbers

731.24.10.000.00 and .10 731.24.11.000.00 and .10 731.24.12.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set PET panels (in the dimensions below).

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Tabula 12mm

Applicable article numbers


731.12.10.000.00 and .10 731.12.11.000.00 and .10 731.12.12.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of PET panels (in the dimensions below).

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

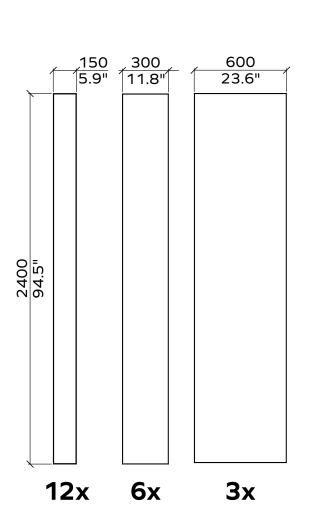

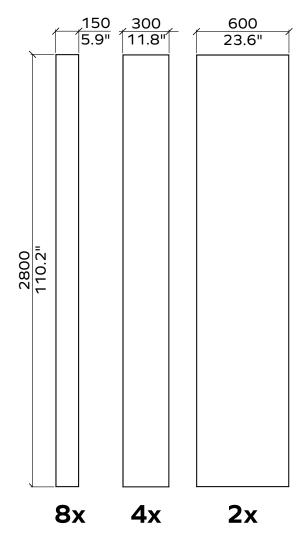

FISHBONE



Geometry Information

Fishbone 24mm

Applicable article numbers

731.24.21.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Fishbone 12mm

Applicable article numbers


731.12.21.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

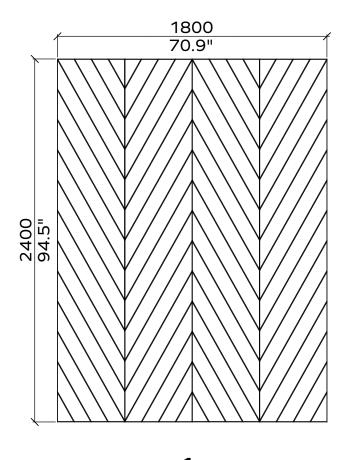

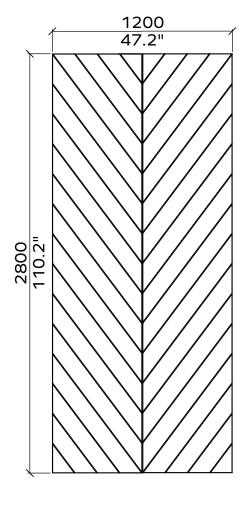

1x 1x

HEXAGON



Geometry Information

Hexagon 24mm

Applicable article numbers

731.24.20.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 65x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Hexagon 12mm

Applicable article numbers


731.12.20.000.00 and .10


Scope of delivery


For each 12mm item you will receive a set of 48x PET panels (in the dimensions below)


Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.



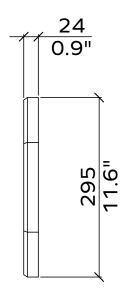

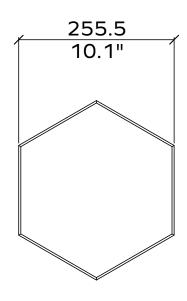

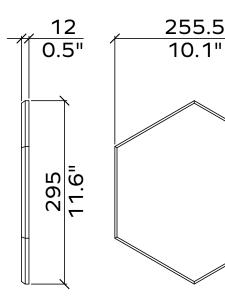

65x

48x



FLOW

Custom solutions available

Geometry Information

Flow 24mm

Applicable article numbers

732.24.11.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Flow 12mm

Applicable article numbers


732.12.11.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)


Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

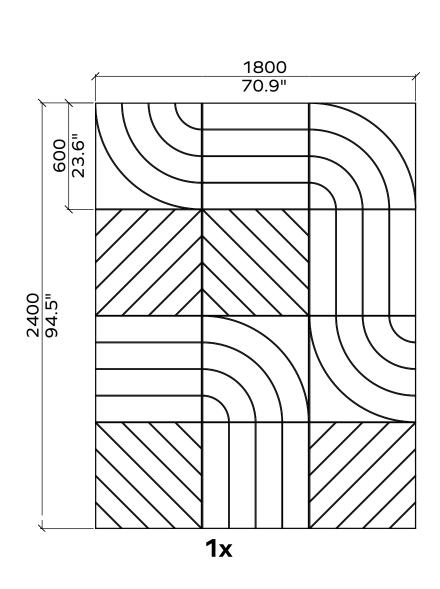

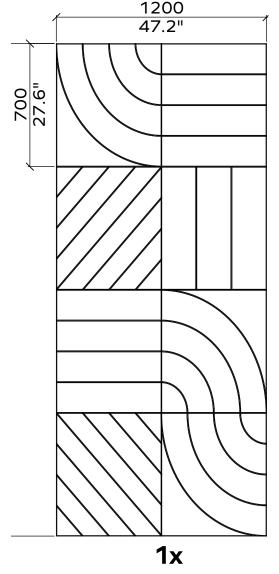

KINGSCROSS



Geometry Information

Kingscross 24mm

Applicable article numbers

732.24.12.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Kingscross 12mm

Applicable article numbers


732.12.12.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

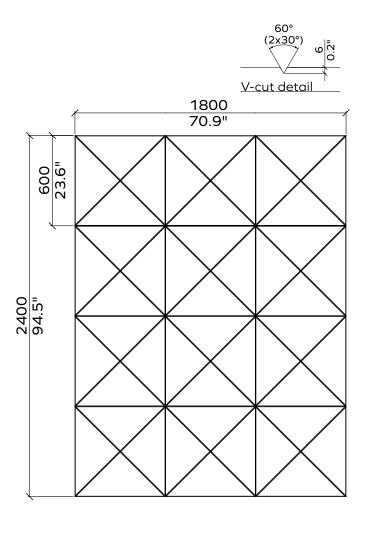

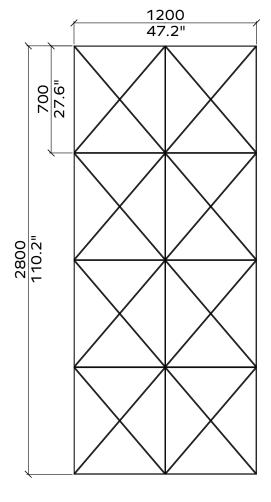


All dimensions are nominal

1x

1x

VERTIGO



Geometry Information

Vertigo 24mm

Applicable article numbers

732.24.13.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Vertigo 12mm

Applicable article numbers


732.12.13.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

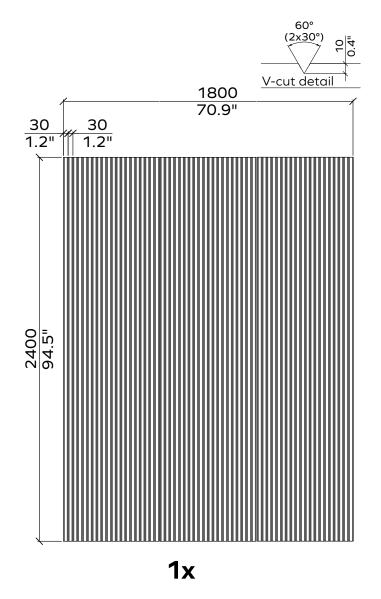

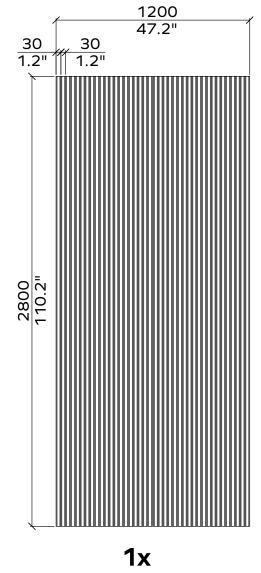

VERTIGO FINE



Geometry Information

Vertigo Fine 24mm

Applicable article numbers

732.24.14.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Vertigo Fine 12mm

Applicable article numbers


732.12.14.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

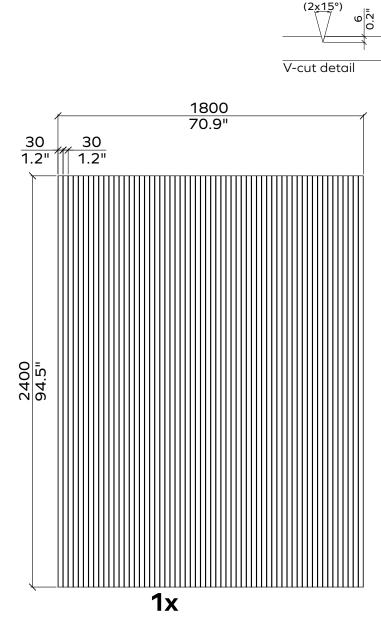

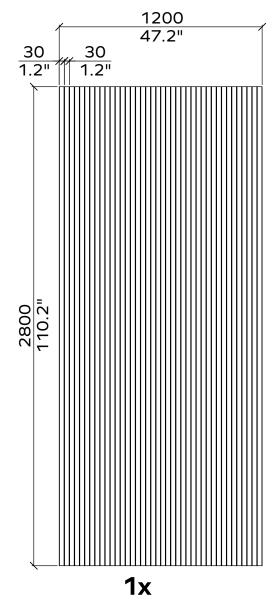

VERTIGO WIDE



Geometry Information

Vertigo Wide 24mm

Applicable article numbers

732.24.31.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Vertigo Wide 12mm

Applicable article numbers


732.12.31.000.00 and .10

Scope of delivery


For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

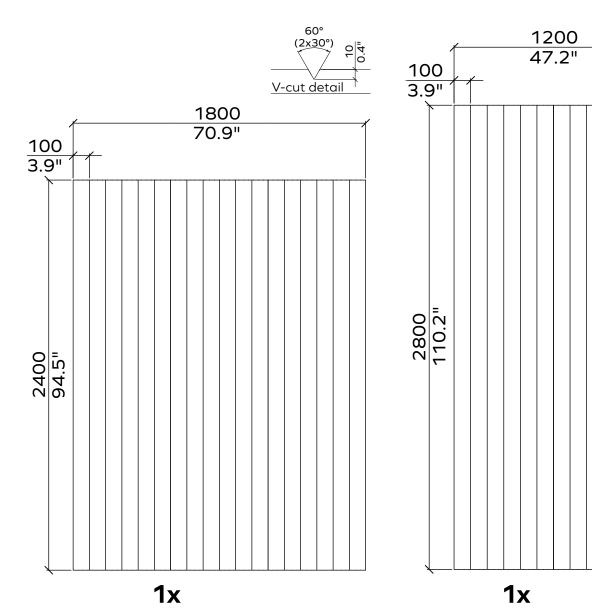

VERTIGO IRREGULAR



Geometry Information

Vertigo Irregular 24mm

Applicable article numbers

732.24.15.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Vertigo Irregular 12mm

Applicable article numbers


732.12.15.000.00 and .10

Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

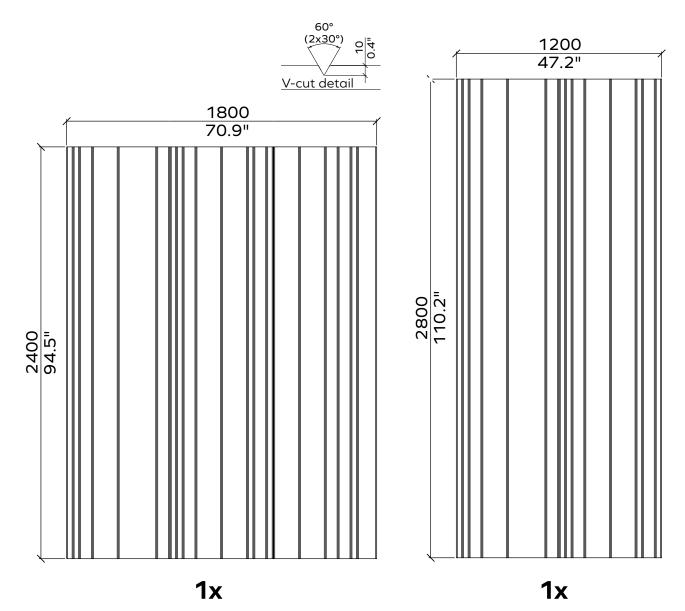

PRISMA



Geometry Information

Prisma 24mm

Applicable article numbers

732.24.16.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Prisma 12mm

Applicable article numbers


732.12.16.000.00 and .10

Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

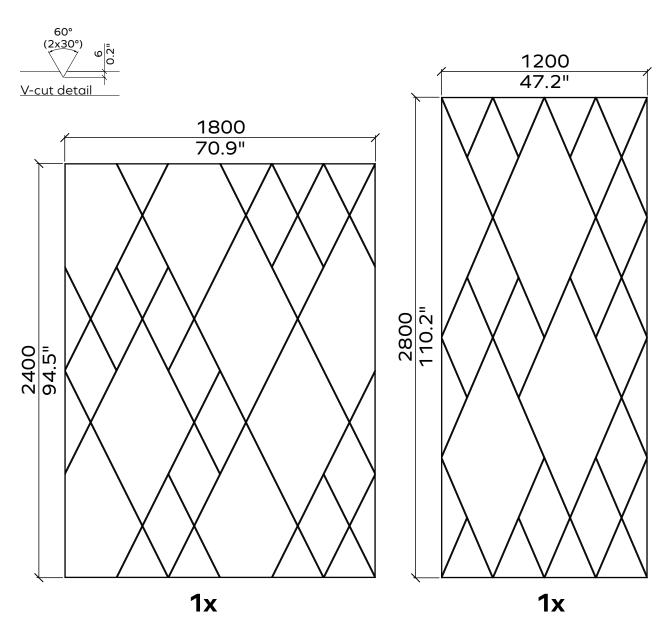



FACET



Geometry Information

Facet 24mm

Applicable article numbers

732.24.17.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Facet 12mm

Applicable article numbers


732.12.17.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

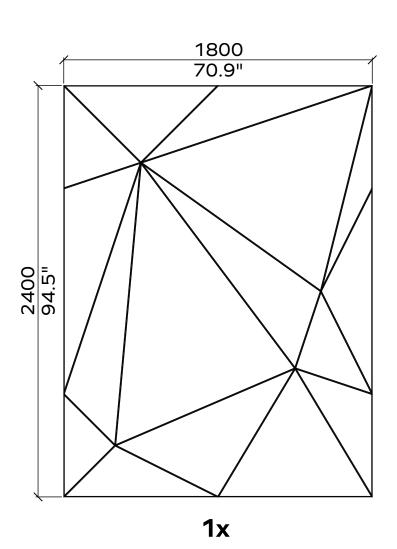

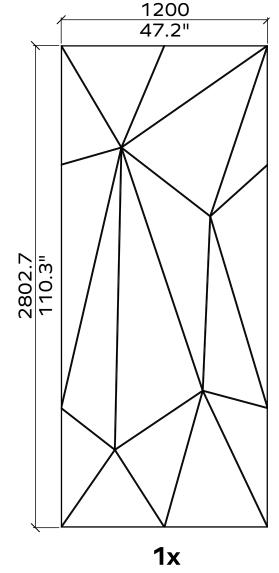

MAZE

Custom solutions available

Geometry Information

Maze 24mm

Applicable article numbers

732.24.18.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Maze 12mm

Applicable article numbers


732.12.18.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

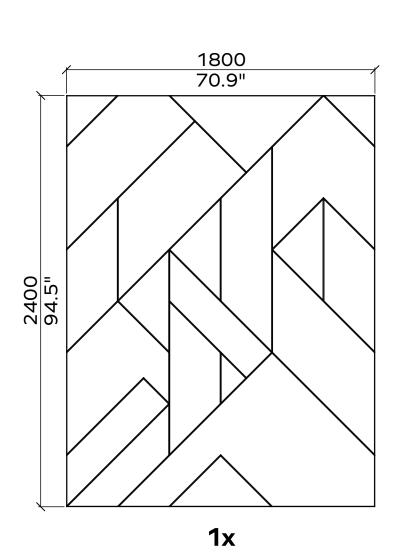

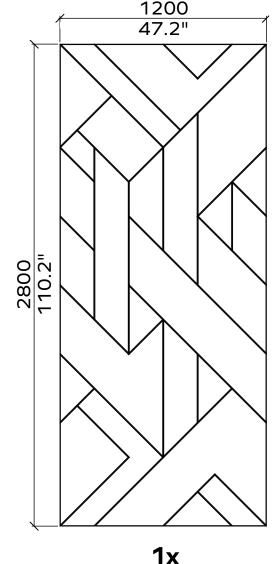

GATSBY

Custom solutions available

Geometry Information

Gatsby 24mm

Applicable article numbers

732.24.19.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Gatsby 12mm

Applicable article numbers


732.12.19.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

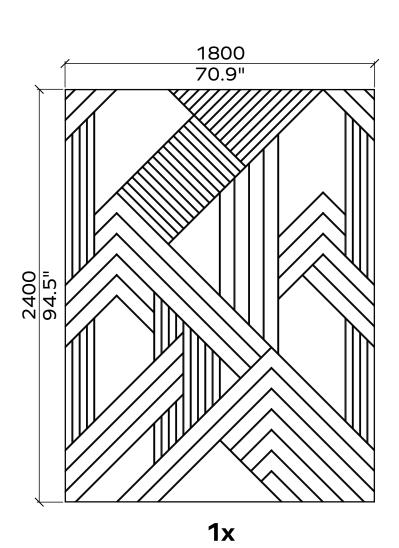

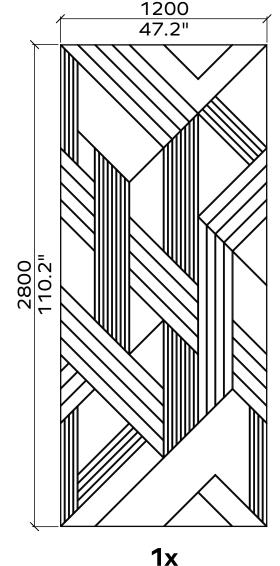

CONTOUR



Geometry Information

Contour 24mm

Applicable article numbers

732.24.20.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Contour 12mm

Applicable article numbers


732.12.20.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

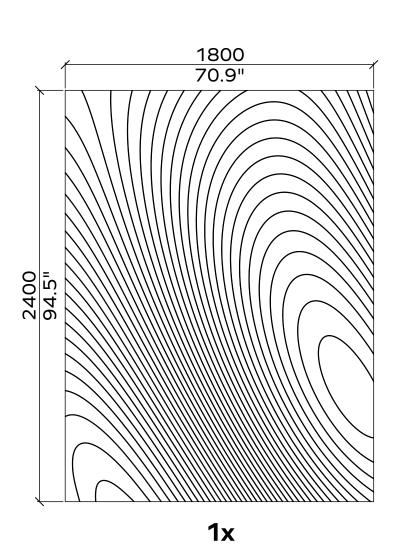

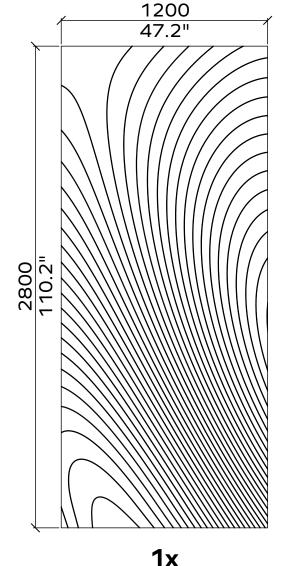

All dimensions are nominal

IMPACT ACOUSTIC®


Wall Covering rev.01 - 10.11.25

(Switzerland) (USA) (Philippines) connect@impactacoustic.com usa@impactacoustic.com philippines@impactacoustic.com (+41) 41 244 14 00 (+1) 619 378 2100 (+63) 285 80 02 50

WeMake AnImpact


CONTOUR

Patterns 24mm

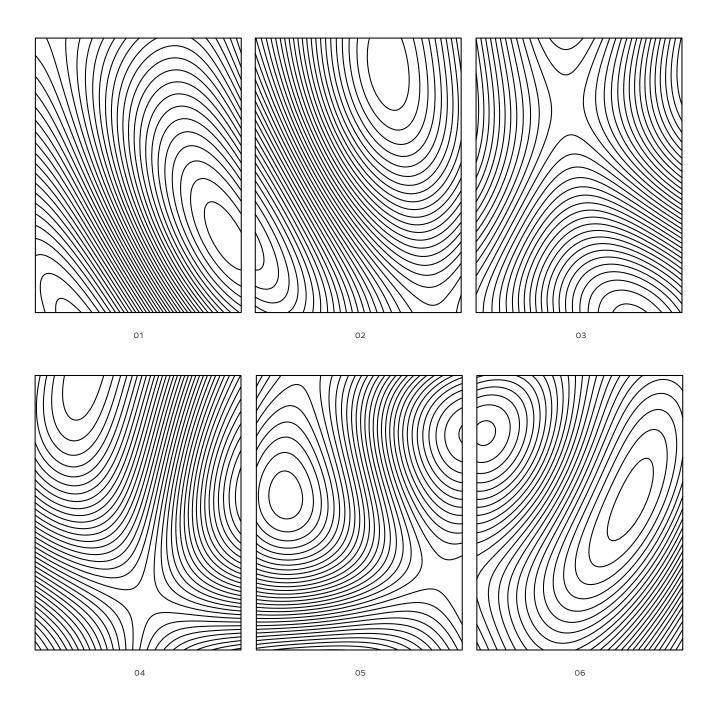

CONTOUR

Patterns 12mm

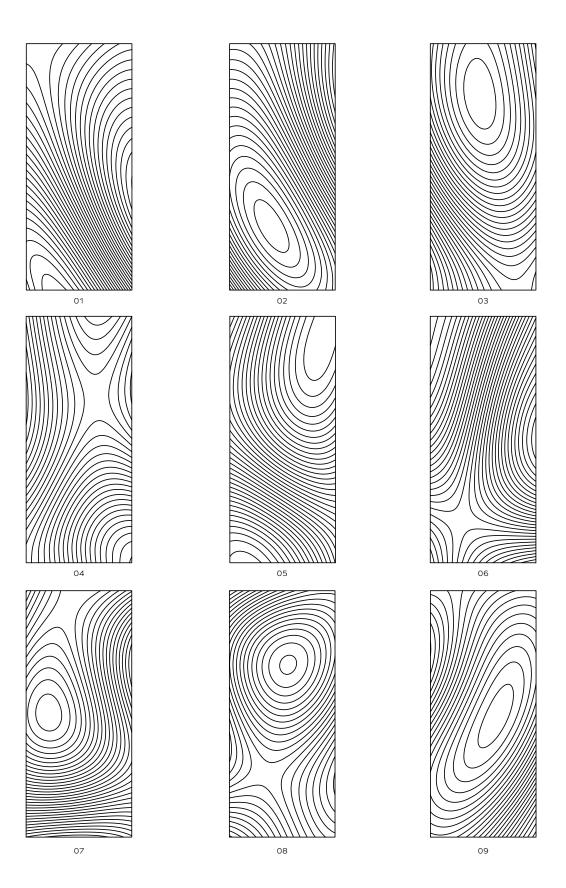

LOOP

Custom solutions available

Geometry Information

Loop 24mm

Applicable article numbers

732.24.21.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Loop 12mm

Applicable article numbers


732.12.21.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

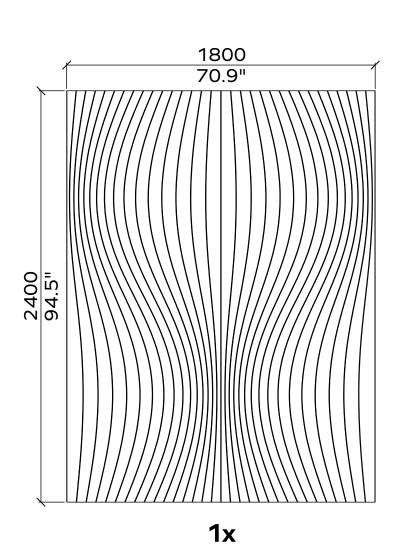

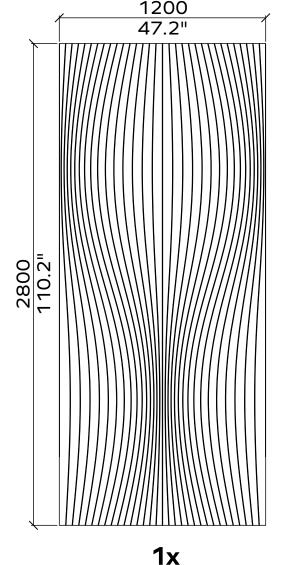

All dimensions are nominal

IMPACT ACOUSTIC®

Wall Covering rev.01 - 10.11.25

(Switzerland) (USA) (Philippines) connect@impactacoustic.com usa@impactacoustic.com philippines@impactacoustic.com (+41) 41 244 14 00 (+1) 619 378 2100 (+63) 285 80 02 50

⊭ WeMake AnImpact

MAYA

Custom solutions available

Geometry Information

Maya 24mm

Applicable article numbers

732.24.22.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Maya 12mm

Applicable article numbers


732.12.22.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

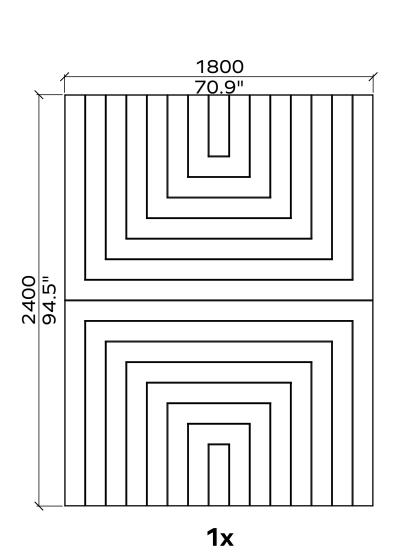

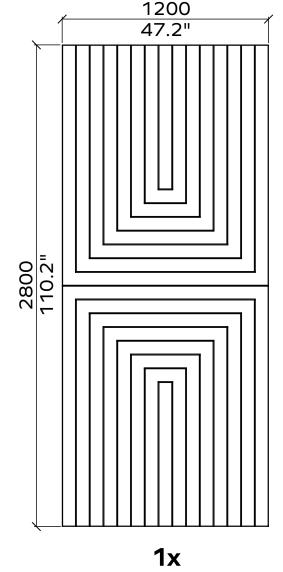

FYLO



Geometry Information

Fylo 24mm

Applicable article numbers

732.24.23.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Fylo 12mm

Applicable article numbers


732.12.23.000.00 and .10

Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

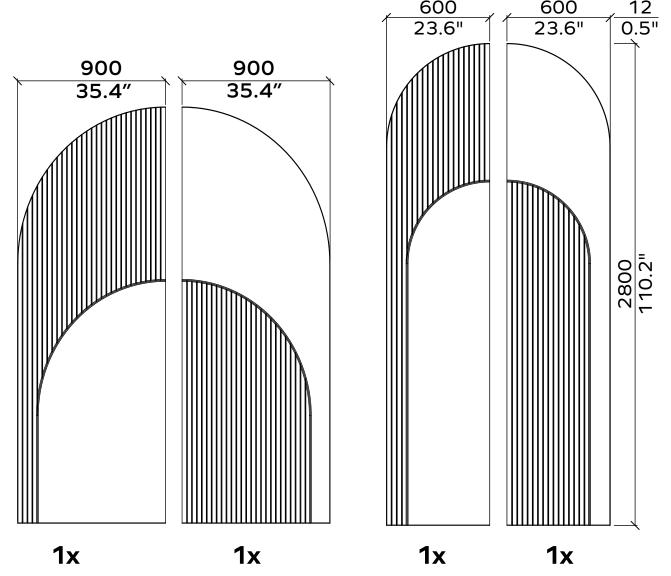

COTTAGE



Geometry Information

Cottage 24mm

Applicable article numbers

732.24.24.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Cottage 12mm

Applicable article numbers


732.12.24.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

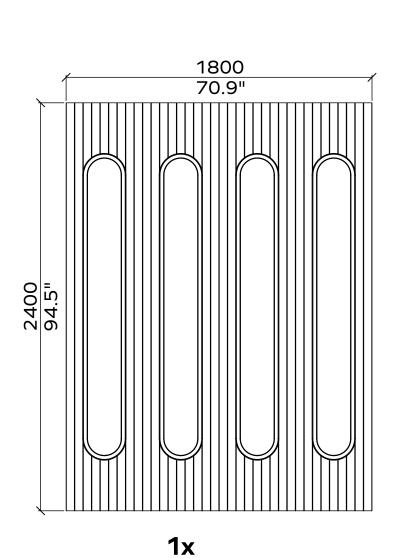

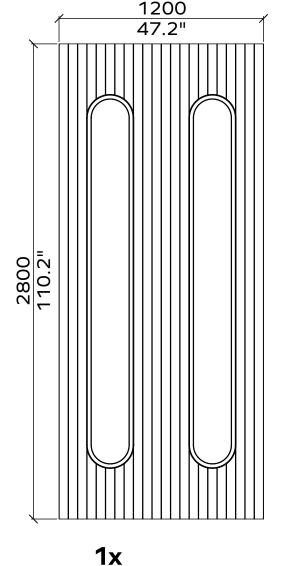

FON

Custom solutions available

Geometry Information

Fon 24mm

Applicable article numbers

732.24.25.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Fon 12mm

Applicable article numbers


732.12.25.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

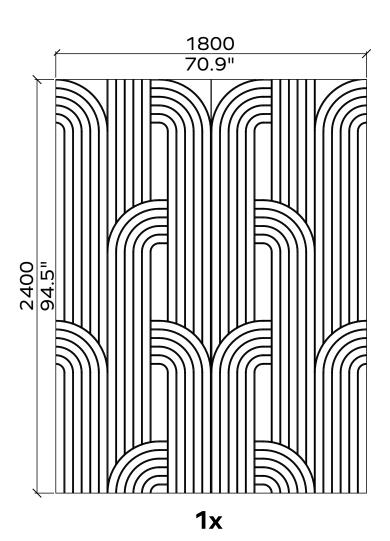

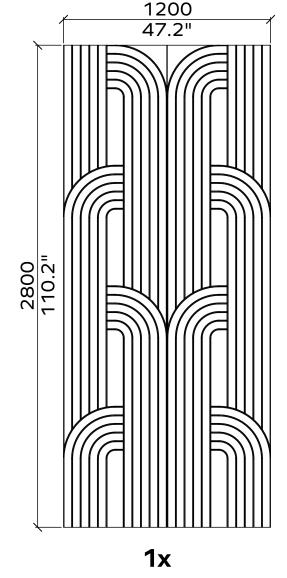

PASS



Geometry Information

Pass 24mm

Applicable article numbers

732.24.26.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Pass 12mm

Applicable article numbers


732.12.26.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

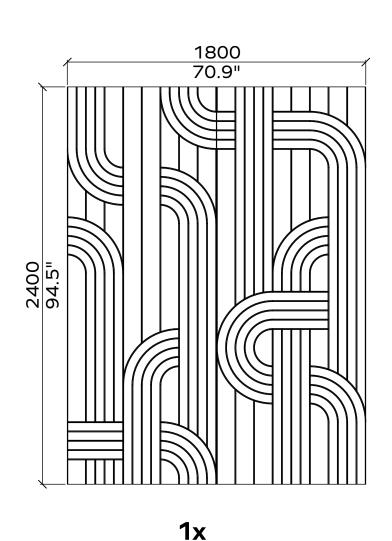

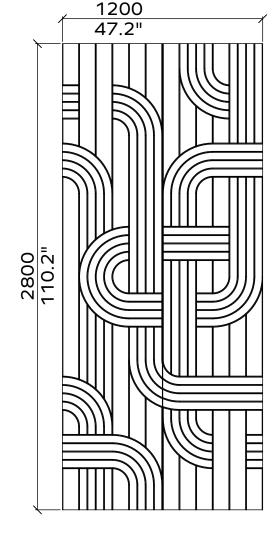

1x

All dimensions are nominal

(Switzerland) (USA) (Philippines)

connect@impactacoustic.com usa@impactacoustic.com philippines@impactacoustic.com (+41) 41 244 14 00 (+1) 619 378 2100 (+63) 285 80 02 50



BAU

Custom solutions available

Geometry Information

Bau 24mm

Applicable article numbers

732.24.27.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Bau 12mm

Applicable article numbers


732.12.27.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

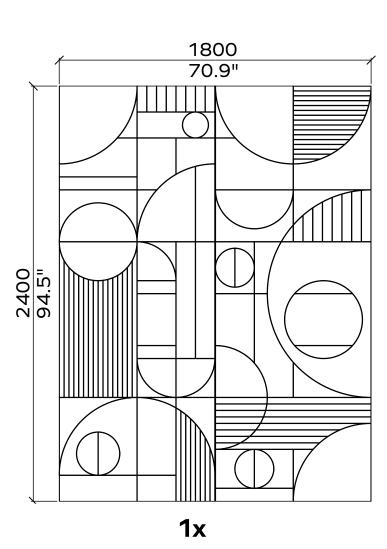

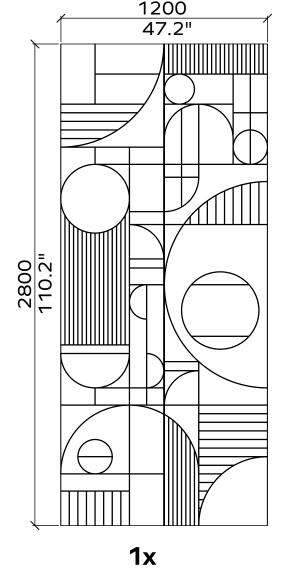

VELA

Custom solutions available

Geometry Information

Vela 24mm

Applicable article numbers

732.24.28.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Vela 12mm

Applicable article numbers


732.12.28.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

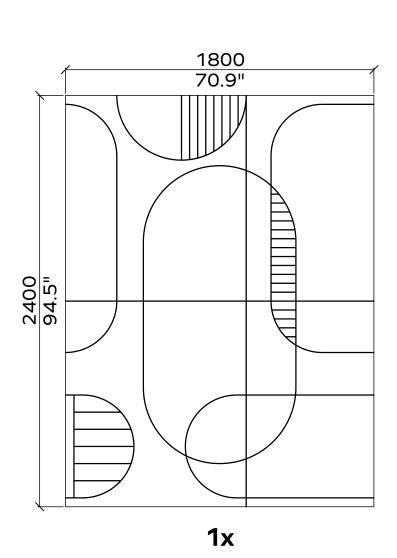

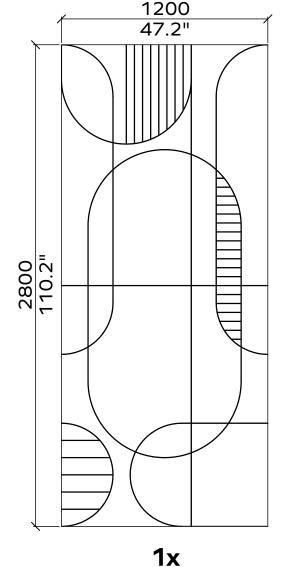

TAPIS

Custom solutions available

Geometry Information

Tapis 24mm

Applicable article numbers

732.24.29.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Tapis 12mm

Applicable article numbers


732.12.29.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation


These panels are mounted with a concealed attachment system. For other options contact our consultants.

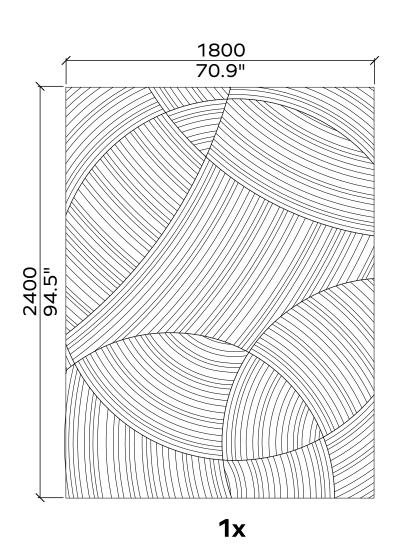


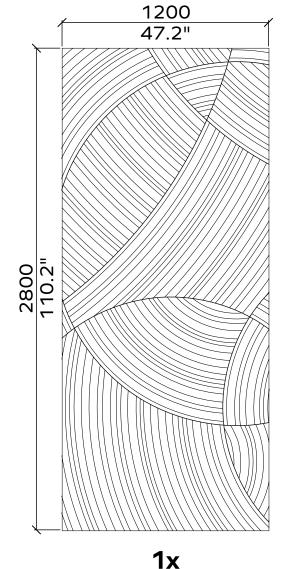



TAPIS


Patterns 24mm

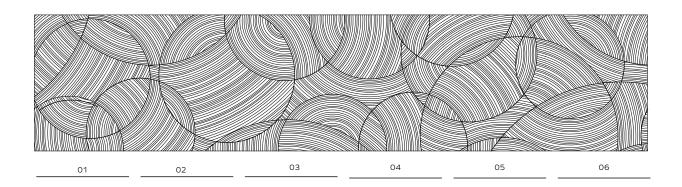


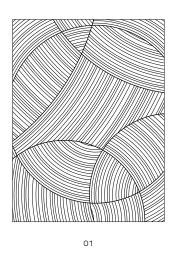


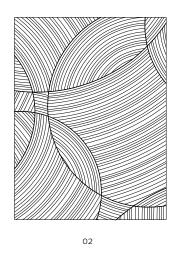

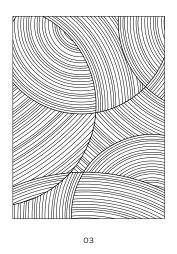

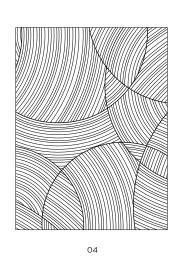


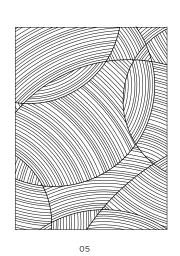

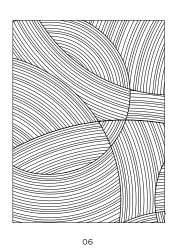

TAPIS

Patterns 12mm

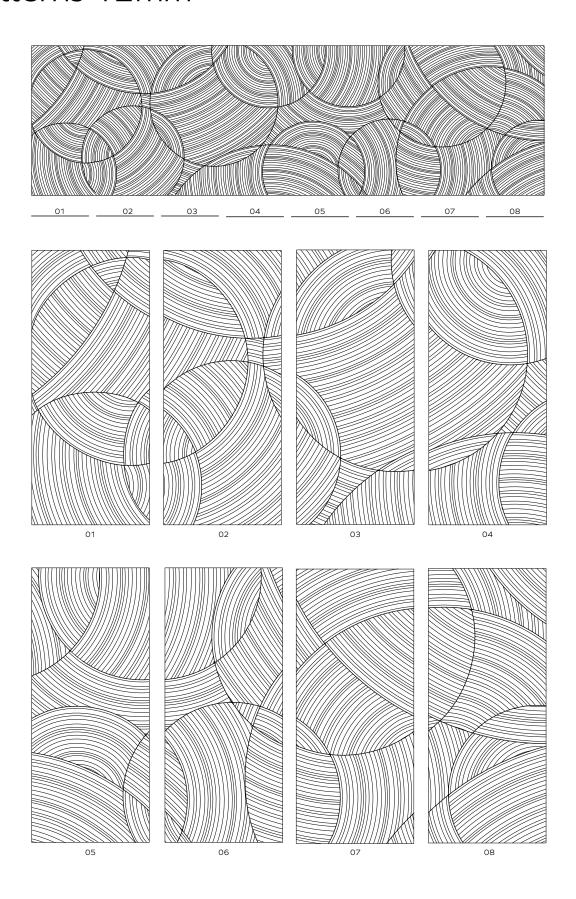

STREAM

Custom solutions available

Geometry Information

Stream 24mm

Applicable article numbers

732.24.30.000.00 and .10

Scope of delivery

For each 24mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation

These panels are mounted with a concealed attachment system. For other options contact our consultants.

Stream 12mm

Applicable article numbers


732.12.30.000.00 and .10


Scope of delivery

For each 12mm item you will receive a set of 1x PET panels (in the dimensions below)

Installation


These panels are mounted with a concealed attachment system. For other options contact our consultants.

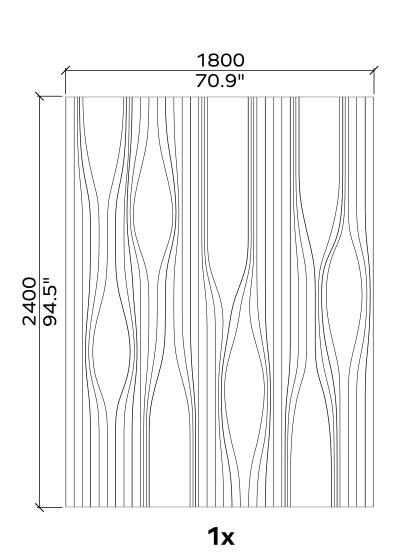


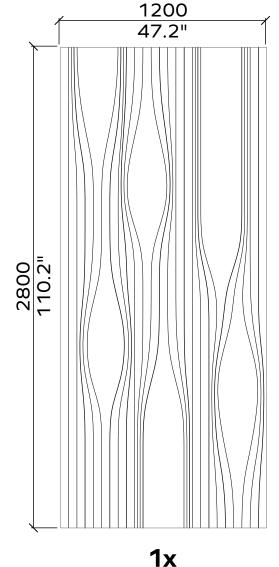


STREAM

Patterns 24mm

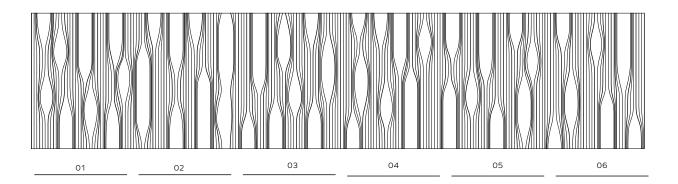


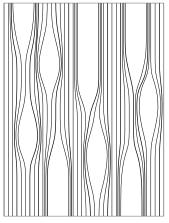




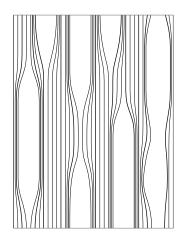


02

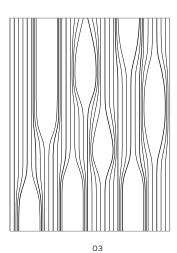



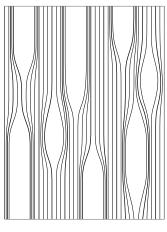


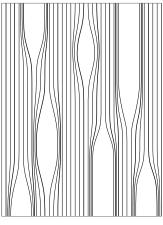

04


STREAM

Patterns 12mm

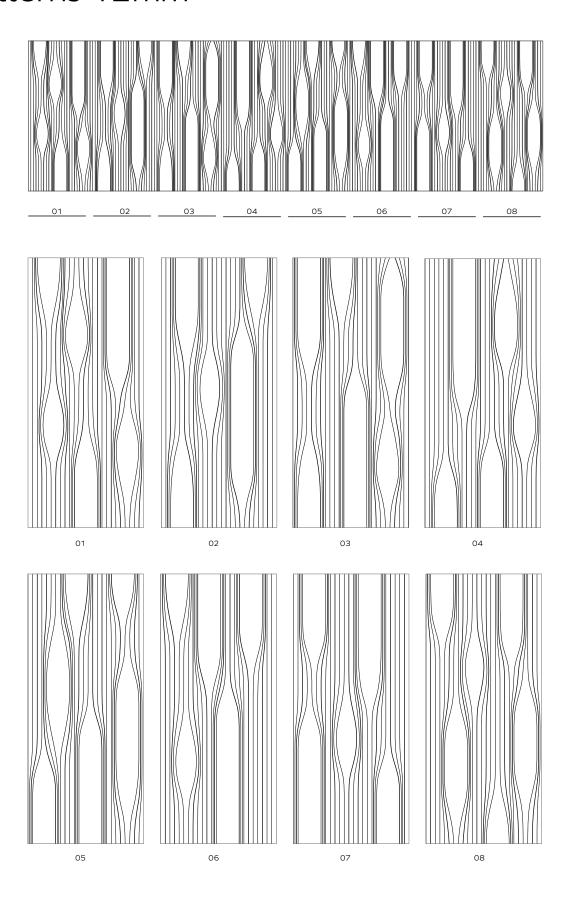

ARCHISONIC_® Felt Colours



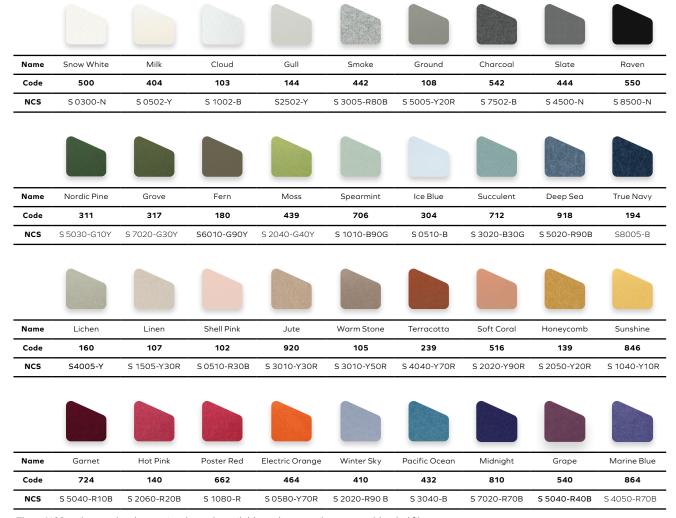

These NCS codes are the closest visual match available and may not be exact to blended fibres.

ARCHISONIC_®

Colours

Experience our ARCHISONIC® Felt material with a stunning selection of 36 colours across 8 distinct families, thoughtfully curated by *Colour Hive* in London. Effortlessly combine colours harmoniously to suit your preferences. Discover more in our Materials brochure and order your free sample box today.

Colour fastness

Class 6

ISO 105-B02:A1


Order a free sample box



ARCHISONIC® Felt Material Specification

Product Name	ARCHISONIC® Felt			
Content	100% PET (60% certified post-consumer content)			
Thickness ¹	12mm (0.47") 24mm (0.94")			
Max. Size	1200x2800mm (47"x110")	1800x2400mm (70"x94")		
Acoustic ²	ASTM: NRC=0.6 ISO : αw=0.65	ASTM : NRC=0.9 ISO : αw=0.95		
Density ¹	2400 g/m² (0.49 lbs/ sqft)	4000 g/m² (0.82 lbs/sqft)		
Colour Fastness	Class 6 ISO 105-B02:A1			
Colour	36 colours (see ARCHISONIC _® Felt Colour page for more information)			
Maintenance	For daily cleaning we recommend alcohol solution (75%), e.g. Pantasept. In case of contamination by dust or fluff, use feather duster or a regular vacuum cleaner. For heavy dirt, treat the material with hydrogen peroxide.			
Production Lead time ³	21 days			
Fire Rating	DIN EN 13501-1: B-s1, d0 ASTM E84 Class A			
VOC Emission	28 Days French Regulation A+ ASTM E84 Pass Breeam® (International, UK, NL, SE, NOR) Exemplary CDPH (CDPH/EHLB/Standard Method V1.2) Pass			
Certifications	Declare label, Cradle to Cradle, UL Environmental Product Declaration, Member of US Green Building Council, Ecobau 1st Priority, Climmate-KIC, VOC emissions in LEED EQ credit (low-emitting products), SCS Recycled Content			
Durability	Contract			

^{1 -} all values are nominal 2 - measured with 300mm air cavity 3 - depending on the location and type of product

























Acoustic Performance

Testing Standards




ISO 354:2003	Acoustics — Measurement of sound absorption in a reverberation room
ISO 11654:1997	Acoustics — Sound absorbers for use in buildings — Rating of sound absorption
ISO 20189:2018	Acoustics — Screens, furniture and single objects intended for interior use — Rating of sound absorption
	and sound reduction of elements based on laboratory measurements
ASTM C423-17	Standard Test Method for Sound Absorption and Sound Absorption Coefficients by the Reverberation
	Room Method
ASTM E795-16	Standard Practices for Mounting Test Specimens During Sound Absorption Tests

Acoustic Test Results	αw	SAA	NRC
Archisonic 12mm (no air gap)	0.3 (MH)	0.42	0.45
Archisonic 12mm (50mm air gap)	0.5 (MH)	0.70	0.70
Archisonic 12mm (50mm insulation)	1.00	1.00	0.95
Archisonic 24mm (no air gap)	0.55 (MH)	0.70	0.70
Archisonic 24mm (50mm air gap)	0.65 (MH)	0.78	0.80
Archisonic 24mm (50mm insulation)	1.00	1.00	1.00

The NRC rating is calculated as the average of the absorption coefficients measured at frequencies of 250Hz, 500Hz, 1000Hz and 2000Hz and round to the nearest 0.05. SAA rating is calculated as the average of the sound absorption coefficients of a material for the twelve one-third octave bands from 200Hz through 2500Hz and rounded off to the nearest 0.01.

Acoustic Performance

Frequency (Hz)		125	250	500	1000	2000	4000
Archisonic 12mm (no air gap)	$\alpha_{_{\mathbf{P}}}$	0.05	0.05	0.25	0.55	0.85	1.00
Archisonic 12mm (50mm air gap)	$\alpha_{_{\mathbf{P}}}$	0.10	0.30	0.60	0.90	1.00	1.00
Archisonic 12mm (50mm insulation)	$\alpha_{_{\mathbf{P}}}$	0.35	0.85	1.00	1.00	1.00	1.00
Archisonic 24mm (no air gap)	$\alpha_{_{\mathbf{P}}}$	0.05	0.25	0.55	0.90	1.00	1.00
Archisonic 24mm (50mm air gap)	$\alpha_{_{\mathbf{P}}}$	0.15	0.35	0.75	1.00	1.00	1.00
Archisonic 24mm (50mm insulation)	$\alpha_{_{\mathbf{P}}}$	0.40	0.90	1.00	1.00	1.00	1.00

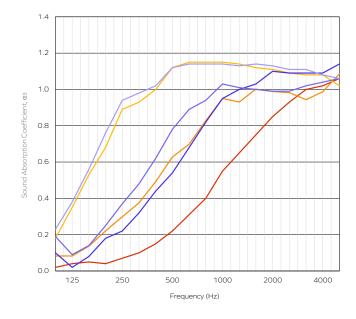

Archisonic 12mm (no air gap)

Archisonic 12mm (50mm air gap)

Archisonic 12mm (50mm insulation)


Archisonic 24mm (no air gap)

Archisonic 24mm (50mm air gap)

Archisonic 24mm (50mm insulation)

The table represents the practical sound absorption coefficient (α_p) in accordance with ISO 11654. The graph represents the sound absorption coefficients (as) in the third octave band center frequencies in accordance with ISO 354. Measurement used Pink Noise as excitation signal in a reverberant room.

Reference Projects

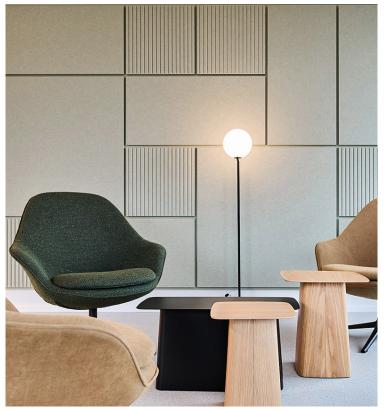





Additional Information

Online Resources

A variety of resources are available online for all of our products. Please visit the product's page for more information.



CAD files



Spec sheets and Installation Guide



Colour families



Instruction videos



Associated products specs.

Ordering Process

Our experienced team of Project Consultants will guide and support you throughout the order process. We fulfill the majority of our orders in as little as 21 days¹ from your first point of contact, allowing you to focus on what truly matters to you.















Contact our consultant

Order Confirmation

Dispach

Delivery

Contact Us

Ready to make an impact? We are just an email or call away to discuss your project and answer any question.









1 - Quote and Production times may vary.

HWE MARKEAN INDUCT