



THE TRAVEL BARS

Assembly Guide


THE TRAVEL BARS ASSEMBLY INSTRUCTION

Thank you for choosing The Travel Bars. We truly appreciate your trust in our product and are excited to support you in getting set up.

This guide is designed to walk you through the installation and assembly process step by step, ensuring a safe, secure, and proper fit. Please take a moment to review all instructions before beginning installation.


1. LAYOUT ALL PARTS

Arrange all components in a clear, open space. Confirm all parts are present before beginning assembly.

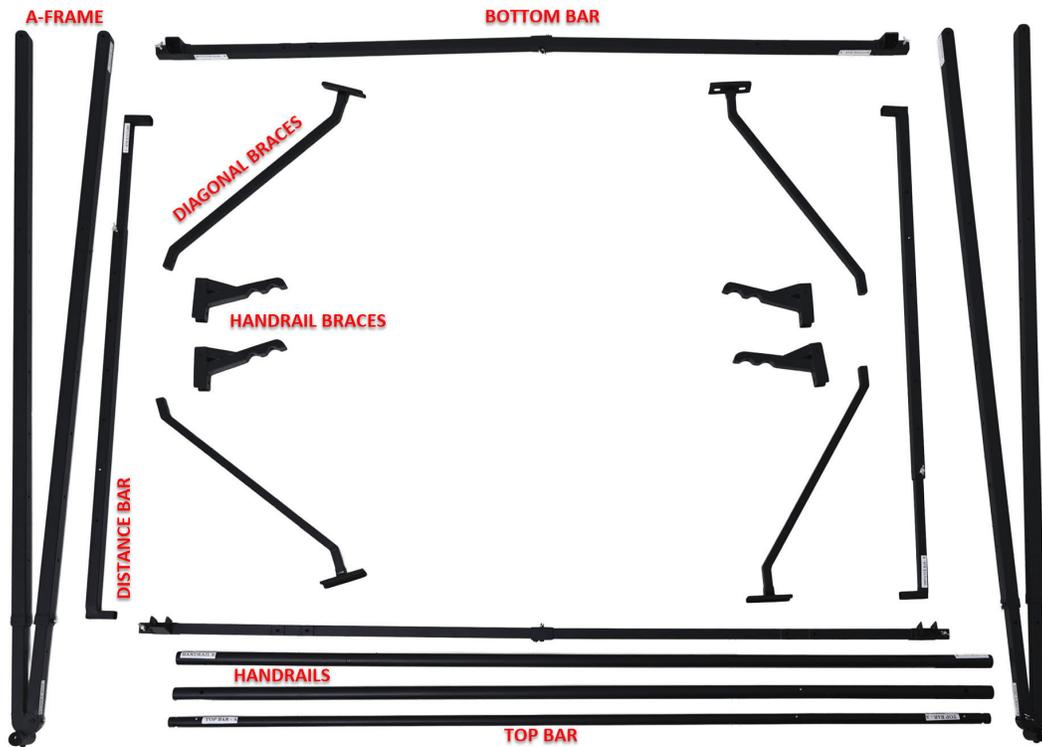

2. ASSEMBLE THE BOTTOM FRAME

Connect the bottom bars and distance bars to form a square base frame.

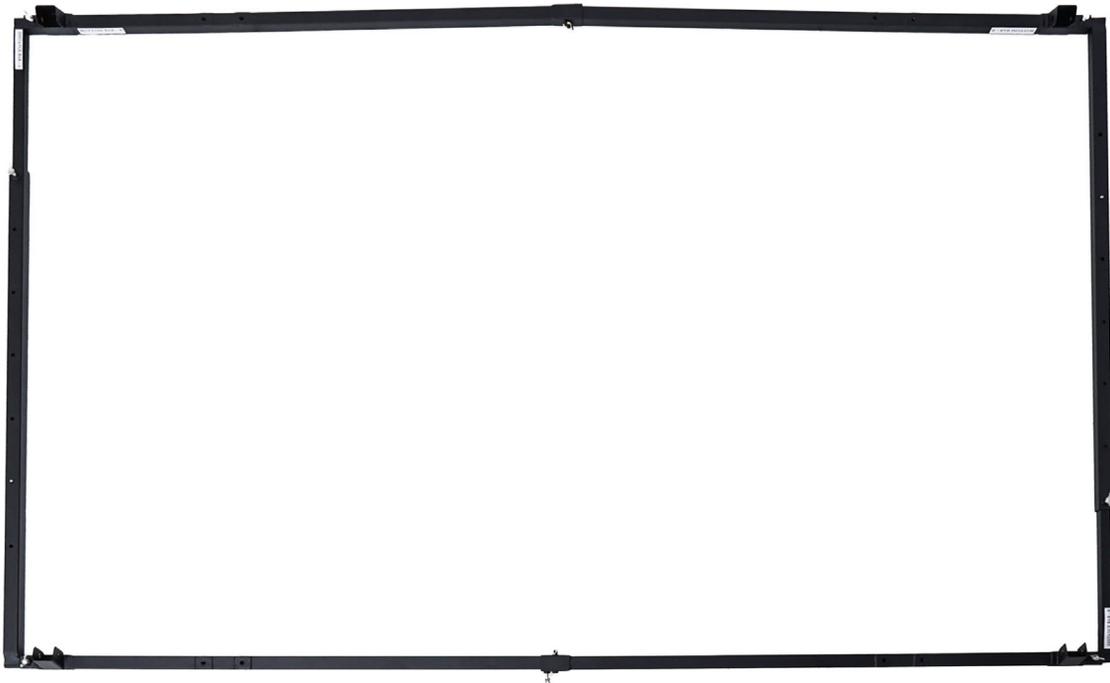

3. PREPARE THE A-FRAME LEGS

Extend the top section of each leg to reveal the pre-drilled holes. Place one temporary screw in each leg to prevent the top section from covering the diagonal brace mounting holes. Repeat for all legs.




4. ATTACH THE A-FRAME LEGS

Raise and connect each A-Frame leg to the corners of the square bottom frame using the shorter nuts and bolts. Ensure proper orientation by following the labels "THIS SIDE OUT" and "THIS SIDE UP."



5. INSTALL THE TOP BAR

Slide the skinny top bar into position. Secure both ends by inserting the spring pins into the drilled holes.

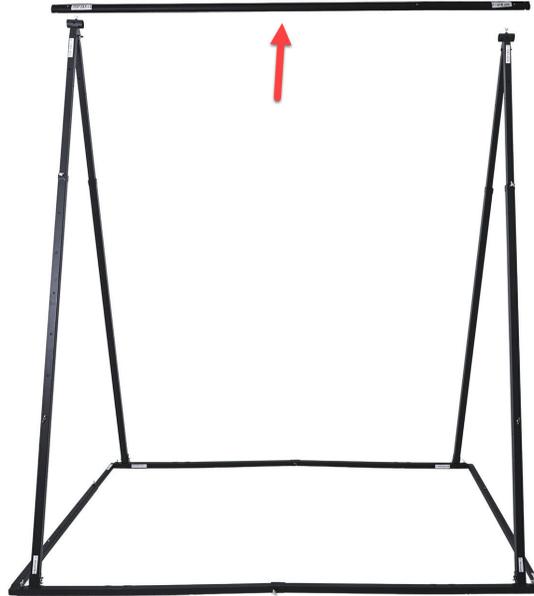

5. ATTACH THE HANDRAIL BRACKETS

Secure the handrail bracket using the shorter nuts and screws. Wing nuts may be positioned based on user preference. Repeat for all handrail brackets.




5. INSTALL THE HANDRAILS

Attach the handrails firmly to the mounted handrail brackets. Use long screws.



5. CONNECT THE DIAGONAL BRACES


Attach all diagonal braces. Keep all screws slightly loose at this stage to allow for proper alignment. Use lock bolts and long screws on the top drilled hole at each corner.

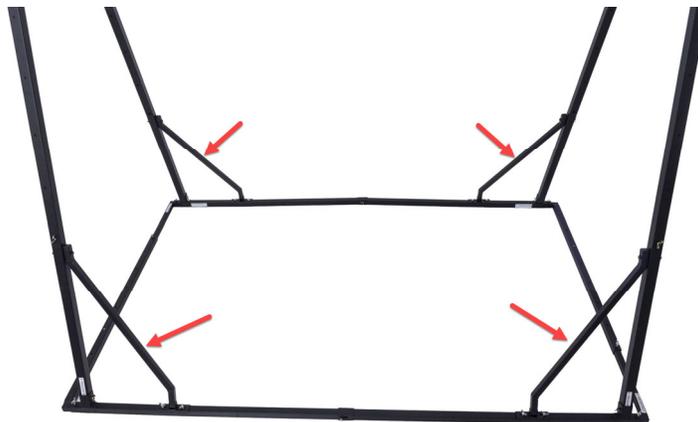

5. ADJUST HEIGHT

You may now adjust the preferred height. If assembling alone, place the pre-installed bolts one hole at a time.

With extra help, adjust height by lifting the top leg portions on both ends. Use caution when lowering the top leg sections to avoid catching your fingers.

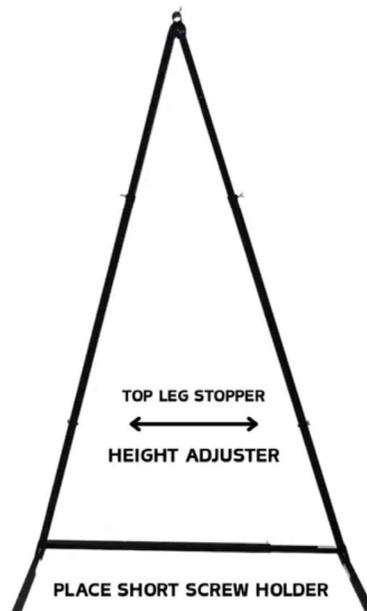

5. FINAL TIGHTENING

Insert all lock bolts, then tighten all wing nuts and remaining hardware. Confirm the frame is stable and secure before use.



6. INSTALLATION SUPPORT

We offer installation assistance upon request. Support can be requested through our website at <https://thetravelbars.webflow.io/contact-us>.

Live support may be available and is subject to availability. If video guidance is requested, please ensure you have a stable phone holder set up beforehand to provide clear visibility. This is required prior to live assistance.

 THE TRAVEL BARS TEAM 