

L I F T C O L L E C T I O N



LC. CHAIR STRAIGHT CATALOGUE Independence Collection

Contact us for more information at:
Enquiries: hello@liftcollection.com.au
Phone: 1800 940 955
Locations Serviced: NSW - & ACT

SPECIFICATIONS LC. CHAIR STRAIGHT


Model	LC. CHAIR STRAIGHT
Model Type	Chair Stairlift – Straight Run
Manufacturing Location	Uk
Drive	Electric Rack & Pinion
Speed	0.12m/s
Machine Cabinet	Integrated into the chair
Lifting Capacity	125kg
Travel Max (m)	600mm-6,750mm
Sizes	1
Stops	2 – Ground & Level 1
Headroom (mm)	1750mm
Pit (mm)	Not required
Location	Indoors & Outdoors
Installation Type	Assembly on-site
Safety Sensors	Pressure switch around the edge of the footplate
Emergency Power	Battery powered with lowering
Installation time	1 day
Servicing recommended	<p>A minimum of 1 service per 12 months is required by AS1735, the manufacturer & Safe Work Australia. Additional servicing maybe required for the following situations.</p> <ul style="list-style-type: none"> -Heavy usage -Essential mobility access -Coastal/harsh/Warmer conditions -Older lift (5+ years) -Damage from environmental factors like flooding.
Warranty	2 years
Manufacturing + Shipping Lead time	10 days
Compliance	Lift Code: AS1735-7
Power Requirements	Single Phase: 230 V, 10-amp GPO within 5m
Structural Requirements	Standard stairs are required; lift is mounted on the run of steps.
Retro-fit Requirements	Contact us for a complimentary site assessment to determine suitability for retro-fitting the lift into your home.

SIZING LC. CHAIR STRAIGHT

The following specification details are for the LC. CHAIR STRAIGHT lift. Specific plans will be provided per project; please do not build to the following specifications.

INSTALLATION DIMENSIONS	
Stairwell width required for installation (mm) *if there is a handrail on the same side add 100mm	700mm
Floorspace required at the bottom of staircase for installation (mm)	725mm wide x 725mm deep
Floorspace recommended at the top of staircase for installation & user to comfortably enter/exit (mm)	700mm wide x 100mm deep
Headroom required in stairwell (mm)	2,000mm
Maximum Rail Length (m)	6,750mm
Minimum steps (mm)	3
Maximum landings	2 (ground floor & level 1)
Inclination Standard (degrees)	15-52 degrees

CHAIR DIMENSIONS (mm)		
A	Overall Height (from floor)	970
B	Height of arms (from floor)	750
C	Height of seat (from floor)	530
D	Overall width	575
E	Width of footrest	252
F	Overall depth (from wall)	565
G	Depth of seat (to backrest)	380
H	Depth of footrest	315
I	Overall Height (when folded)	980
J	Overall depth (when folded)	295

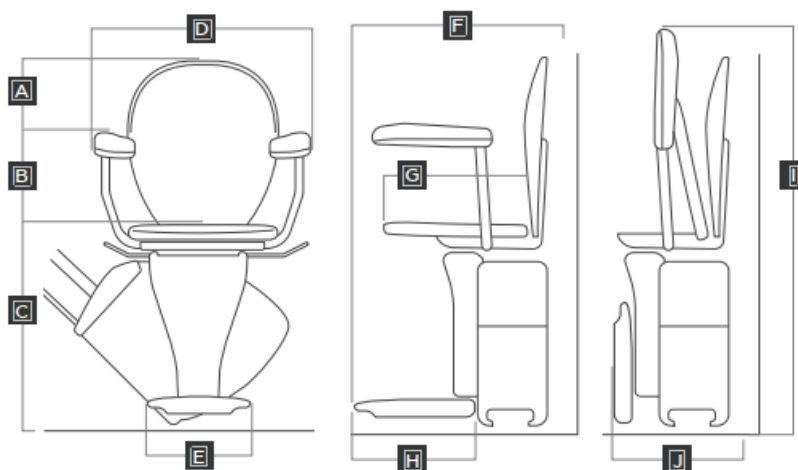

SELECTIONS LC. CHAIR STRAIGHT

Model



Included: Standard

Indoor



Upgrade

Outdoor – includes cover



Included: Standard

Natural Beige.



Included: Standard

All seat covers are removable to allow for easy cleaning to ensure the safest environment for the user




Included: Standard

Manual swivel & folding levers at the base of the seat



Upgrade – indoor only

Powered Swivel

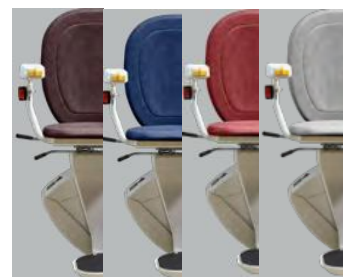

Upgrade

Seat cover colour: Brown, blue, red, grey

Controls



Included: Standard

Armrest Operating toggle on the left or right side depending on your preference



Included: Standard

Armrest keys are included for locking the stairlift in an off position, preventing unwanted use



Included: Standard

On/Off Switch & Diagnostics Display: Located on the base of the lift seat

Seatbelt - Fasteners



Included: Standard

Retractable Seatbelt: Just like a car seat belt, easy to adjust and use.

SELECTIONS LC. CHAIR STRAIGHT

Rail Type



Included: Standard

Straight run
Anodised aluminium
track



Upgrade – indoor
only

Hinged Rail: In some
instances, the rail
may run across a
doorway at the
bottom of a staircase.
A hinged rail folds up
out of the way.

Footrest



Included: Standard

Manual folding anti-
slip footrest with
grey carpet



Upgrade – indoor
only

Powered footrest -
with level under
armrest

Wall Controls



Included: Standard

Wireless wall/handheld
mounted at the bottom &
top of stairs.

HEALTH PROFESSIONALS PLANNING GUIDE

CHAIR STAIRLIFTS

*Did you know Lift Collection offers complimentary site visits & video calls? Contact us to discuss further.

Lift Collection – P: 1800 940 955 | E: hello@liftcollection.com.au

USER DETAILS

Name		Phone number	
Installation address			
Budget & funding?	NDIS / DVA / HCP / CHSP / Private / Other		

USER REQUIREMENTS ASSESSMENT

Are there any factors that might affect the client's ability to use a stairlift safely?
<i>If yes, please specify -</i>
Does the user have the cognitive ability to understand and retain instructions?
<i>If yes, please specify -</i>
Does the user have a carer?
<i>If yes, please specify -</i>
Can the client transfer independently onto the stairlift, or will assistance be required?
<i>If yes, please specify -</i>
Are there any vision, hearing, or coordination issues that may impact safe use?
<i>If yes, please specify -</i>
Does the client use any mobility aids? If so, please note the type, dimensions & weight of the mobility aid?
<i>If yes, please specify – Type:</i>
<i>weight:</i>
<i>Width:</i>
<i>Length:</i>

USER DETAILS

1) Height – Standing <i>For general reference</i>	
2) Height from floor to top of head – Seated <i>This determines the minimum head clearance to ensure there are no obstructions that could injure the user.</i>	
3) Width – seated <i>*This will ensure the lift is suitable & allows the user to be comfortable</i>	
4) Weight <i>*This will ensure the lifting capacity of the lift is suitable</i>	

INSTALLATION DETAILS

Please take wide shot photos at every step, provide a walk-through video or call Lift Collection for a complimentary video call/site visit.

P: 1800 940 955 | E: hello@liftcollection.com.au

1] Inside or outside installation?	Inside / Outside – Exposed / Outside – Under Cover
2] Overall length of staircase in mm?	
3] Number of steps?	
4] Width (w) & height (h) of stairs in mm?	W: x H:
5] Number of landings?	
6] Width (w) & depth (d) of landings in mm?	W: x D:
7] Are there any overhead obstructions or height restrictions?	
8] Space at the bottom & top of stairs width (w) & depth (d) in mm?	Bottom - W: x D : / Top - W: x D:
9] Staircase configuration? Please circle one	Straight / Curved
10] Material of steps? Please circle one	Timber / Tile / Concrete / Marble / Steel / Other - Specify
11] Material of wall? Please circle one	Timber / Concrete / Brick / Steel / Core filled block / Concrete filled dintel

The LC. CHAIR STRAIGHT is a part of our INDEPENDENCE COLLECTION which has been curated for the following:

Private homeowners

Occupational Therapists

Home Modifications Builders

Providing visitors & family members the freedom to access their home

NDIS recipients

My Age Care recipients

DVA recipients

Insurance claims

Compliance

Lift Code: AS1735.7

CONTACT US FOR MORE INFORMATION AT:

Enquiries: hello@liftcollection.com.au

Phone: 1800 940 955

Locations Serviced: Australia Wide

