

Option suitable for:

SIGMA

WILLMES


Specialists in
Pressing Technology

Cleaning program

for the tank interior



rapid
cleaning

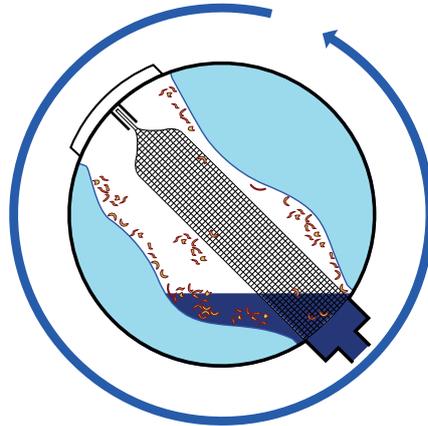

small amount
Water of
consumption

Short description

The cleaning program is designed for fast, effective and resource-saving cleaning of the press after the pomace has been emptied.

Features and benefits

The cleaning program sequence includes the following editable steps:

- the membrane is slightly inflated to release all pomace residues and prevent wrinkling of the membrane;
- water or a cleaning solution is added to the tank via the filling cover(s);
- the cover is closed & a rinse cycle begins.
- The cleaning fluid can be discharged later via the filling cover(s) or the juice drain valve.

The cleaning program runs for 5 to 15 minutes, depending on the type of machine, plus the time required for filling in the water or cleaning fluid.