


Option suitable for:

SIGMA & MERLIN

WILLMES

Specialists in
Pressing Technology

Flow measurement

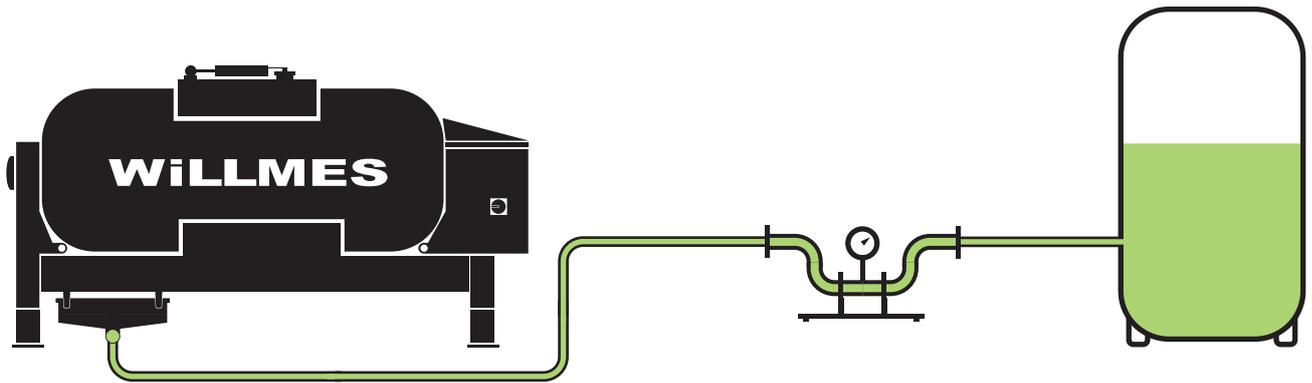

Short description

Due to the use of the flow measurement there is a wide range of parameters for process monitoring. For example, the amount of juice already drained is displayed in litres. If required, additional parameters can be added to flow measurement.

Features and benefits

The flow measurement option is used for process monitoring. A volume flow measurement in litres per minute is displayed, as well as the amount of juice already drained in litres. The number of displayed values can be extended on request. Other optional parameters are the density, temperature and conductivity of the juice.

In principle, flow measurement can take place directly after the juice exits the press or downstream of the must pump, for example, to monitor the amount of juice introduced into the storage vats. All requested data can be read on the press display.

Stand 09/2021; Version 1.0