
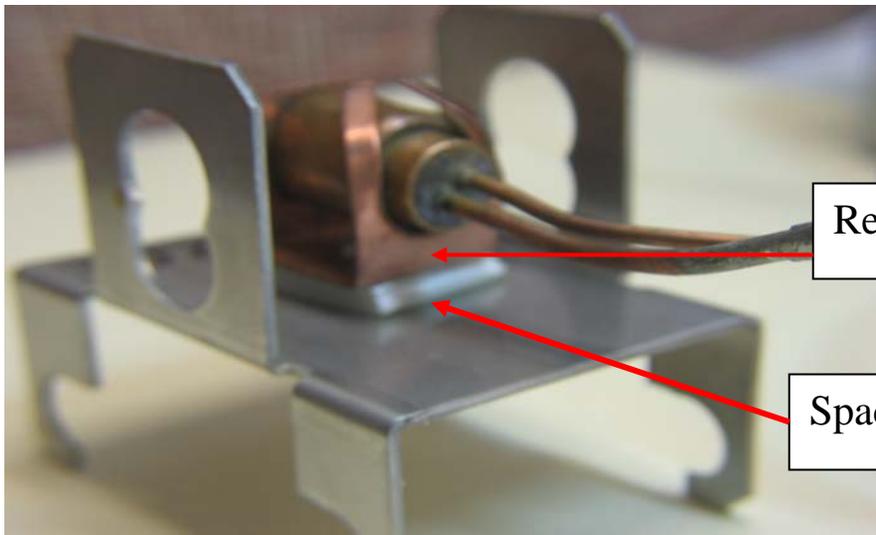
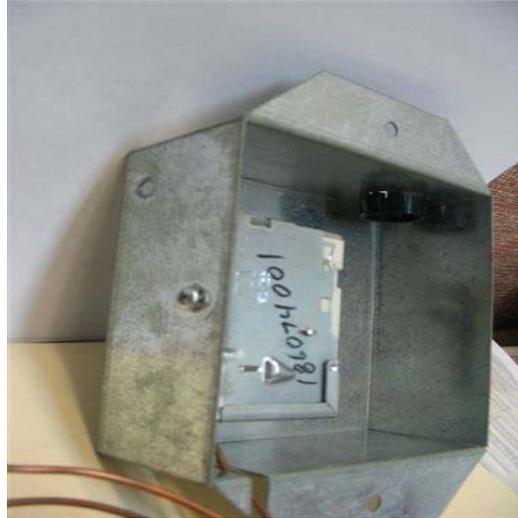


Chiller Department – Process Sheet

Universal 750

Ice Bank Controller replacement

629094962INS, Revision B; 12-18-2008

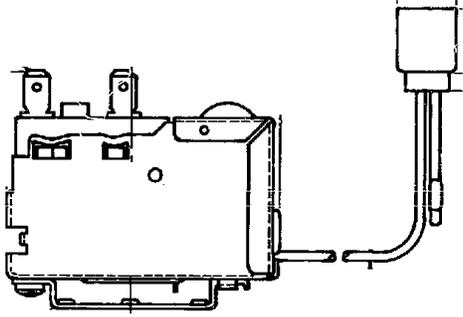

Assembly instructions


- 1) The new ice bank controller 186074001 (used in other applications) will replace controller 620314427
- 2) The mounting holes for the controller will align with an existing hole on the present electric box. Only one screw is needed due to the size and location of the controller
- 3) The sensing bulb will be affixed to the bracket using a spacer and retainer

Chiller Department – Process Sheet

Universal 750

Ice Bank Controller replacement

629094962INS, Revision B; Revision 12-18-2008

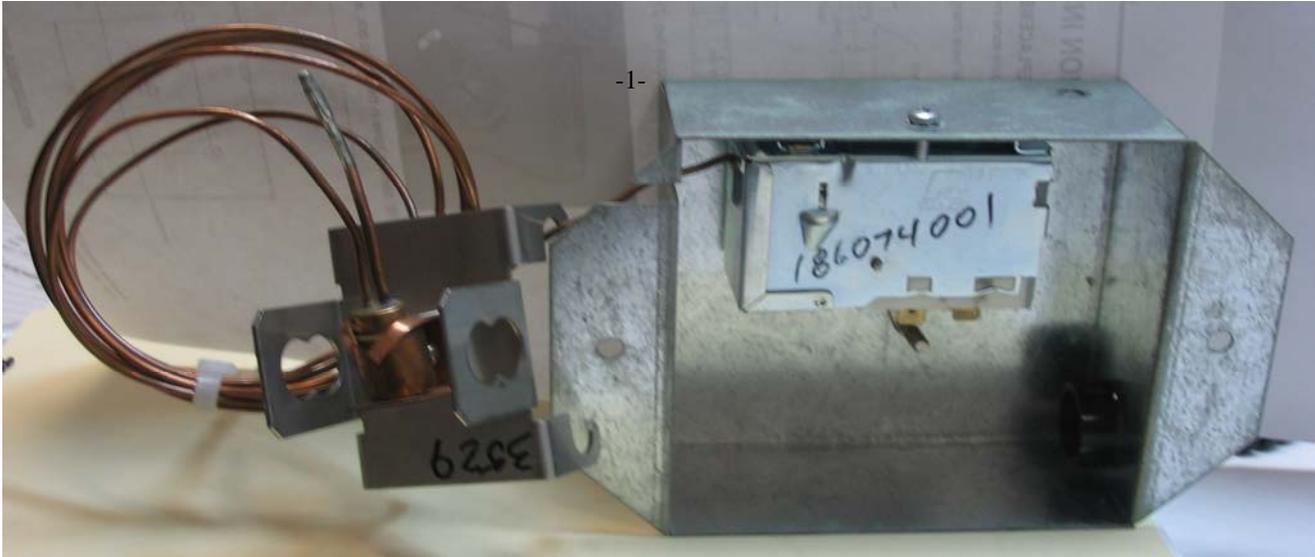

Assembly instructions

- 4) Disconnect power before servicing.
- 5) Remove the old controller and bulb, replace with the new controller.
- 6) Secure the bulb using the retainer, spacer, nut, and screw provided
- 7) The new bulb and bracket will locate at the same location as before.