




QUEST 2000

Service Manual

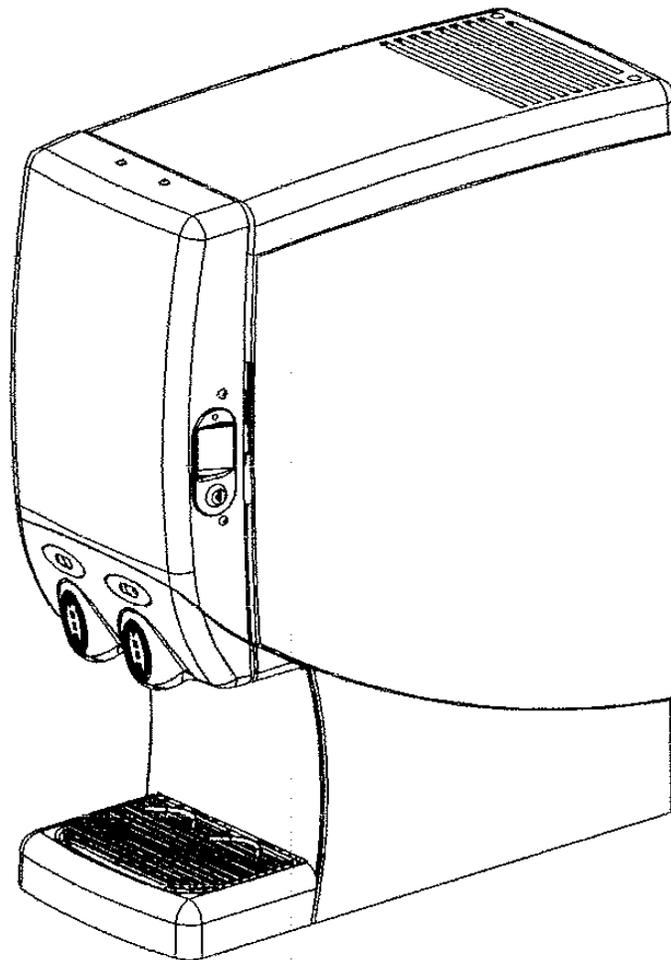

Release Date: March 18, 2004

Publication Number: 720529901SER

Revision Date: April 25, 2014

Revision: D

Visit the Cornelius web site at www.cornelius.com for all your Literature needs.



The products, technical information, and instructions contained in this manual are subject to change without notice. These instructions are not intended to cover all details or variations of the equipment, nor to provide for every possible contingency in the installation, operation or maintenance of this equipment. This manual assumes that the person(s) working on the equipment have been trained and are skilled in working with electrical, plumbing, pneumatic, and mechanical equipment. It is assumed that appropriate safety precautions are taken and that all local safety and construction requirements are being met, in addition to the information contained in this manual.

This Product is warranted only as provided in Cornelius' Commercial Warrant applicable to this Product and is subject to all of the restrictions and limitations contained in the Commercial Warranty.

Cornelius will not be responsible for any repair, replacement or other service required by or loss or damage resulting from any of the following occurrences, including but not limited to, (1) other than normal and proper use and normal service conditions with respect to the Product, (2) improper voltage, (3) inadequate wiring, (4) abuse, (5) accident, (6) alteration, (7) misuse, (8) neglect, (9) unauthorized repair or the failure to utilize suitably qualified and trained persons to perform service and/or repair of the Product, (10) improper cleaning, (11) failure to follow installation, operating, cleaning or maintenance instructions, (12) use of "non-authorized" parts (i.e., parts that are not 100% compatible with the Product) which use voids the entire warranty, (13) Product parts in contact with water or the product dispensed which are adversely impacted by changes in liquid scale or chemical composition.

Contact Information:

To inquire about current revisions of this and other documentation or for assistance with any Cornelius product contact:

www.cornelius.com

800-238-3600

Trademarks and Copyrights:

This document contains proprietary information and it may not be reproduced in any way without permission from Cornelius.

Printed in U.S.A.



TABLE OF CONTENTS

Safety Instructions	1
Read and Follow ALL Safety Instructions	1
Safety Overview	1
Recognition	1
Different Types of Alerts	1
Safety Tips	1
Qualified Service Personnel	1
Safety Precautions	2
Shipping And Storage	2
Mounting in or on a Counter	2
Unit Specifications	3
Concentrate Handling & Loading	4
Loading Concentrate	4
Changing Concentrate Containers:	4
Brixing Procedure	5
Supplies	5
Checking/Adjusting the Brix Setting	5
Planned Maintenance Schedule	7
Daily	7
Weekly	7
Step 1 - Rinse With Hot Water	7
Step 2 - Sanitize Pump System	7
Step 3 - Prepare Dispenser for Use	8
Semi-Annual	8
Clean Water Inlet Strainer:	8
Clean Chassis Interior:	8
Annually	8
Trouble-Shooting Guide	10
Assembly Drawings	13
System Wiring Diagram QST 2000	13
Main Electrical Box Wiring Diagram QST 2000	14

SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

Safety Overview

- Read and follow **ALL SAFETY INSTRUCTIONS** in this manual and any warning/caution labels on the unit (decals, labels or laminated cards).
- Read and understand ALL applicable OSHA (Occupational Safety and Health Administration) safety regulations before operating this unit.

Recognition

<i>Recognize Safety Alerts</i>
 <p><i>This is the safety alert symbol. When you see it in this manual or on the unit, be alert to the potential of personal injury or damage to the unit.</i></p>

DIFFERENT TYPES OF ALERTS

DANGER:

Indicates an immediate hazardous situation which if not avoided **WILL** result in serious injury, death or equipment damage.

WARNING:

Indicates a potentially hazardous situation which, if not avoided, **COULD** result in serious injury, death, or equipment damage.

CAUTION:

Indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury or equipment damage.

SAFETY TIPS

- Carefully read and follow all safety messages in this manual and safety signs on the unit.
- Keep safety signs in good condition and replace missing or damaged items.
- Learn how to operate the unit and how to use the controls properly.
- **Do not** let anyone operate the unit without proper training. This appliance is **not** intended for use by very young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.
- Keep your unit in proper working condition and do not allow unauthorized modifications to the unit.

QUALIFIED SERVICE PERSONNEL

WARNING:

Only trained and certified electrical, plumbing and refrigeration technicians should service this unit. **ALL WIRING AND PLUMBING MUST CONFORM TO NATIONAL AND LOCAL CODES. FAILURE TO COMPLY COULD RESULT IN SERIOUS INJURY, DEATH OR EQUIPMENT DAMAGE.**

SAFETY PRECAUTIONS

This unit has been specifically designed to provide protection against personal injury. To ensure continued protection observe the following:

WARNING:

Disconnect power to the unit before servicing following all lock out/tag out procedures established by the user. Verify all of the power is off to the unit before any work is performed.

Failure to disconnect the power could result in serious injury, death or equipment damage.

CAUTION:

Always be sure to keep area around the unit clean and free of clutter. Failure to keep this area clean may result in injury or equipment damage.

SHIPPING AND STORAGE

CAUTION:

Before shipping, storing, or relocating the unit, the unit must be sanitized and all sanitizing solution must be drained from the system. A freezing ambient environment will cause residual sanitizing solution or water remaining inside the unit to freeze resulting in damage to internal components.


MOUNTING IN OR ON A COUNTER

WARNING:

When installing the unit in or on a counter top, the counter must be able to support a weight in excess of 140 lbs. (63.5 kg.) to insure adequate support for the unit. **FAILURE TO COMPLY COULD RESULT IN SERIOUS INJURY, DEATH OR EQUIPMENT DAMAGE.**

NOTE: Many units incorporate the use of additional equipment such as icemakers. When any addition equipment is used you must check with the equipment manufacturer to determine the additional weight the counter will need to support to ensure a safe installation.

UNIT SPECIFICATIONS

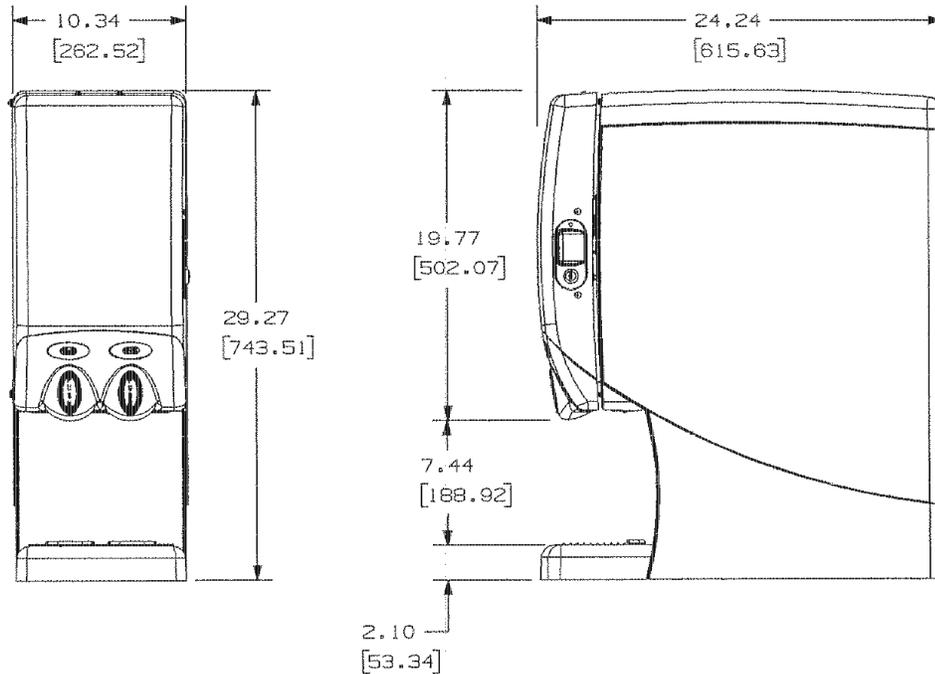
Nameplate Data:

Model QST 2000, 115 VAC, 4.5 amps, 1 phase 60 hertz, 6.25 oz. (177g) R-134a refrigerant. Test press: High side 400 psi (27.6 bar). Low side 100 psi (6.9 bar).

Model QST 2000, 230 VAC, 2.25 amps, 1 phase 50 hertz, 6.25 oz. (177g) R-134a refrigerant. Test press: High side 400 psi (27.6 bar). Low side 100 psi (6.9 bar).

Concentrate Storage:

Two 0.8 gallon (3.0 liter) disposable bottles.

Clearance Recommended:

12" (30.48 cm) on top and 4" (10.16 cm) required in back for air circulation.

Electrical Connection:

6 ft. long (1.83 m) power cord with 3-prong plug attached to dispenser. Export models have line cord less plug.

Power Supply:

15 amps at 120 volts dedicated power supply.
20 amps at 230 volts dedicated power supply.

Water Connection:

3/8 in. (0.95 cm) SAE male flare fitting on dispenser.

Water Supply Requirements:

60 psi (413.7 kilopascals) (4.1 bar) maximum static pressure. 30 psi (206.8 kilopascals) (2.1 bar) minimum dynamic pressure; i.e., flowing pressure measured at dispenser water inlet with 3.0 (88.7 ml) per second water flow. Optimum recommended pressure 50 psi (344.7 kilopascals) (3.5 bar) dynamic pressure.

Ice Bank/Pull Down:

Weight 7-8 lbs. (4.1-4.5 kg.). Pull Down: 3 hours at 75°F (24°C)

CONCENTRATE HANDLING & LOADING

It is recommended that the concentrate be thawed in a refrigerated 35°F-40°F (1.6°C-4.4°C) compartment for a minimum of 48 hours prior to loading into the Quest Juice Dispenser.




WARNING: Concentrate must be completely thawed and within the temperature range of 35°F-40°F (1.6°C-4.4°C) prior to loading. Failing to supply concentrate inside the recommended temperature range, especially below 35°F (1.6°C), will cause an out of brix drink (refer to the Brixing Procedure section for details).

LOADING CONCENTRATE

The Quest Juice Dispenser is designed to use either disposable juice concentrate containers or the optional Cornelius generic refillable container sold separately.

1. Thoroughly shake concentrate prior to use.
2. Place concentrate containers on the dispensing platform shelf inside the refrigerated cabinet.
3. Engage the concentrate container by pressing it downward into the bottle adapter opening on the dispensing platform.

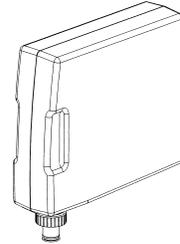

NOTE: Be sure to lubricate the o-ring seal on the container nozzle. This will ensure a good seal and allow the pumps to draw concentrated from the containers more easily. Failure to create a good seal at this connection may result in weak drinks and/or seepage of concentrate.

4. Prime each pump by closing the cabinet door and press each dispense button until concentrate flows from the dispense nozzles.

CHANGING CONCENTRATE CONTAINERS:


1. Open the cabinet door and move the valve handle from “Dispense” to “Flush”
2. Close the door. Depress and hold the dispense button until clear water flows from the dispense nozzle.
3. Open the cabinet door and return the handle to “Dispense”.
4. Depress and hold the dispense button for 1-2 seconds. This will relieve water pressure from the concentrate pump system.
5. Load concentrate container (see *Loading Concentrate*).

BRIXING PROCEDURE

NOTE: If concentrate is not properly thawed, it will adversely affect the amount of concentrate dispensed. Thawed product should be between 35°F/1.6°C to 40°F/4.4°C.

SUPPLIES

- 1-Small 12 oz. cup (354.8 ml)
- 1-Large 21 oz. cup (621.1 ml)
- 1-Straw
- Paper Toweling
- 1-Thermometer
- 1-Refractometer

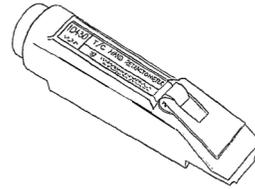

You will also need a flat blade screwdriver to turn a screw if brix adjustments are required.

NOTE: The refractometer shown above, P/N 511004000, is available through your local Cornelius Distributor.

CHECKING/ADJUSTING THE BRIX SETTING

The following instructions are for use with a refractometer.

1. Dispense approximately 8 oz. (236 ml) of drink and discard. Now draw a second 8 oz. drink.
2. Check drink temperature with a reliable thermometer (target is 35-45°F, or 1.6-7.2°C). Discard this drink after checking temperature.

NOTE: If drink temperature is not within the target range, refer to the basic troubleshooting section.

3. Dispense a 12 oz (354.8 ml) drink sample into a clean, dry cup. Thoroughly stir the sample using a straw.
4. Using a straw, transfer a small sample of finished drink to the refractometer lens (refer to operating instructions supplied with your refractometer). Check the brix reading against the brix chart below.

NOTE: The following brix chart is generic and intended for reference use only. Contact your frozen concentrate supplier for specific brix readings.

Brix Reference Chart		
Flavor	Ratio	Brix
Orange Juice	4+1	11.8
Grapefruit Juice	5+1	10.6
Cranberry Cocktail	4+1	13.5
Apple Juice	5+1	12.0
Grape	5+1	13.0
Lemonade	5+1	10.5
Tropical Punch	5+1	11.8
Sweetened Iced Tea	7+1	6.0
Pineapple Juice	4+1	12.8
Prune Juice	2+1	16.0

5. To change the brix setting, simply readjust the water flow rate. Located on each of the valve assemblies inside the refrigerated compartment are the adjusting screws for the water flow rate (one per valve).


If the brix reading is too high or low, rotate the appropriate water flow control according to the diagram below. Repeat steps 1-5 until the brix setting is achieved.



Lowers Brix by increasing water



Raises Brix by reducing water

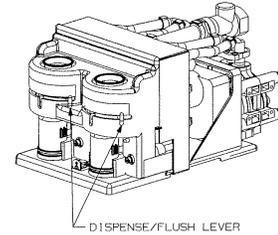

IMPORTANT: When making changes to the water flow control, do not rotate more than 1/4 turn per adjustment. Additionally, prior to taking your next brix reading, “tap” the corresponding dispense button several times prior to drawing a sample. This will clear remnant drink from the dispense nozzle AND help move the flow control to its new setting.



PLANNED MAINTENANCE SCHEDULE

DAILY

Flush System:

1. Move Dispense/Flush levers located on the platform assembly in the refrigerated cabinet to the “Flush” position. Place an empty cup on the drip tray below each dispense nozzle.
2. Close the door and depress each dispense button for 2-3 seconds or until clear water flows from each dispense nozzle.
3. Return the Dispense/Flush levers to the “Dispense” position.
4. Press each dispense button for 1-2 seconds to release the water pressure present in the concentrate pump system.
5. Clean Splash Zones & Dispense Nozzles:
6. On a daily basis, clean the external cabinet and splash areas using a clean damp cloth. Remove and wash the cup rest and drip tray using a mild dish soap.
7. Remove the dispense nozzles and static mixers by rotating each 90° and pulling down. Remove the mixing chambers by pulling straight forward. Wash using a mild dish soap.

IMPORTANT: DO NOT wash nozzles, static mixers, or mixing chambers in a dish washer. This will distort the plastic and damage the o-rings. Additionally, do not soak them in sanitizing solution longer than 2 minutes.

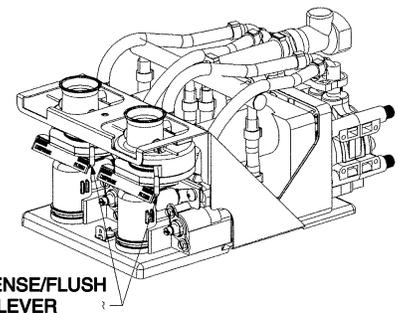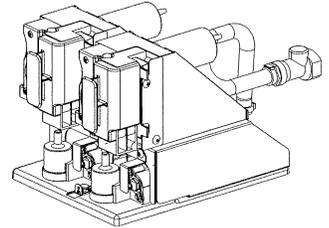

WEEKLY

Check concentrate to water brix ratio (refer to the Brixing Procedure in this manual).

Sanitize the Juice Dispenser:

Step 1 - Rinse With Hot Water

1. Prepare two 2 oz. packets of Stera-Sheen® Green Label sanitizing solution (or similar brand) by dissolving each packet in 1 gallon (3.8L) of potable water to insure 200 ppm of available chlorine.

IMPORTANT: Use potable water at 80°F-100°F (26.7°C-37.8°C). Water above this range will breakdown the chlorine count and minimize sanitation.

2. Remove the juice concentrate containers and place them in separate refrigerated compartment.
3. “Flush” the system by following the instructions in the Daily Section.
4. Fill a clean empty concentrate container with one quart of extremely hot tap water, approximately 140°F (60°C) and place into unit. Dispense all of the hot water into a large container. Repeat for the remaining dispense valves.
5. Remove the mixing chambers, nozzles, and static mixers. Rinse in hot water to remove excess pulp and concentrate.
6. Place the mixing chambers, nozzles, and static mixers in a separate container of sanitizing solution and agitate vigorously. Allow the parts to soak for two minutes. Rinse thoroughly with fresh tap water.
7. Reinstall the static mixer, nozzles, and mixing chambers.

Step 2 - Sanitize Pump System

1. Fill a clean concentrate container with 2 quarts (1.9L) of fresh sanitizing solution.

2. Place handles in the “dispense” position and close the door.
3. Press and hold the dispense button for 90 seconds then stop. Allow sanitizing solution to remain in the lines for 5 minutes.
4. After 5 minutes, dispense the remaining sanitizing solution.

Step 3 - Prepare Dispenser for Use

1. Replace sanitizing solution container with a concentrate container and close the door.
2. Press and hold the dispense button until juice appears from the nozzle. Next dispense and discard at least two 8 oz. (236.6ML) cups of juice in order to prime the system and prepare it for operation.


SEMI-ANNUAL

CAUTION:

The following procedures require removal of the dispenser side panel(s). Disconnect the power cord from the receptacle prior to proceeding.

Clean Water Inlet Strainer:

1. Remove the right side panel from the dispenser.
2. Turn off the water supply to the dispenser.
3. Remove the access port from the “Y” shaped water inlet solenoid located on the right side of the dispenser.
4. Clean and reinstall the stainless steel water strainer.

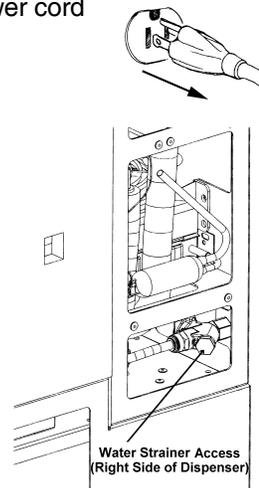

Clean Chassis Interior:

1. Clean the condenser cooling fins.
2. Clean the air inlet grilles located on the rear and top panels of the dispenser.
3. Clean the interior base.
4. Wipe the fan blade clean.
5. Reinstall the right side panel, turn on the water supply, and plug the dispenser into the power receptacle.

Check and Top-Off Water Ice Bath:

1. Remove the drip tray and lower splash panel.
2. If the Ice bath level is below the “Full” indicator, top it off with water. Refer to the Filling the Ice Bath procedure in the Installation section of this manual.


ANNUALLY

Replace Pump Tubing:


A replacement pump tubing kit, part#45098, is available. The kit consists of one pre-cut length of pump tubing, two white plastic hose clamps, and instructions.

Removing Pump Platform(s):

1. Remove the concentrate containers from the dispenser and place them in a refrigerator.
2. Remove the cabinet shelf that the concentrate containers sit on.



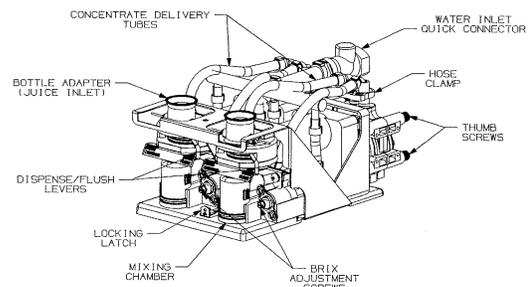


3. Flush the system prior to removing the pump platform (refer to the Daily section located at the beginning of the Planned Maintenance Schedule). Remove the dispense nozzles and static mixers.
4. Unplug the water line quick disconnect by pressing the gray button (see Fig. 1&2).
5. Slide the locking latch forward. Lift the platform slightly and pull forward to gain access to the electrical connector (see Fig. 1).
6. Unplug the electrical connector by squeezing the locking tabs on either side and pulling out the connector. Lift and remove the pump platform (see Fig. 1).

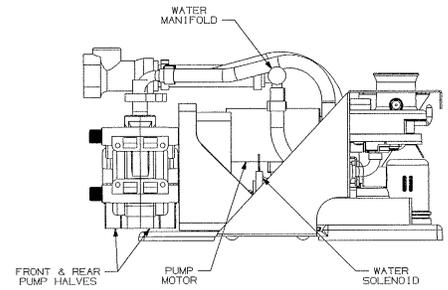

Replacing Pump Tubing:

1. Remove pump platform (refer to the Removing Pump Platform(s) procedure located earlier in this section).
2. Remove the two white plastic hose clamps from the pump tube connections (see Fig. 1&2). Remove the concentrate delivery tubes from the hose ends.
3. Loosen and remove the four thumb screws from the pump body.
4. Remove the rear pump body half **only** to reveal the pump tube and rollers.
5. Remove the old pump tube from the pump body. If the roller assembly comes out with the tubing, place it back into the pump housing being sure to align the roller assembly shaft keyway to the motor shaft so that the two interlock.
6. Firmly press the new hose into the pump body around the roller assembly, being sure to keep the protruding ends even with each other.
7. Once the tubing is in place, hold the tubing with one hand, capture the lower part of the tubing with the outer housing, then proceed to capture the shaft of the roller assembly and push the rear pump housing into place. Make sure to capture the tubing within the body and not pinch it between the halves. Do not use any tool other than your finger tips to manipulate the tubing into the housing or you may damage the tube.
8. While holding the pump halves together with your hand, reinsert the four thumb screws and tighten using a criss-cross pattern as shown. The thumb screws should be tightened about 1/4 turn beyond snug.
9. Insert the two concentrate delivery tubes into the pump tubing ends and secure them using the new hose clamps supplied in the kit. Be sure to use pliers to squeeze and tighten the hose clamps.

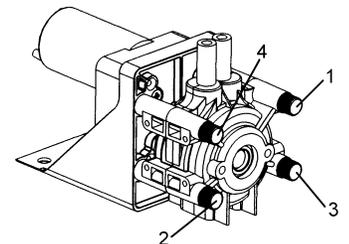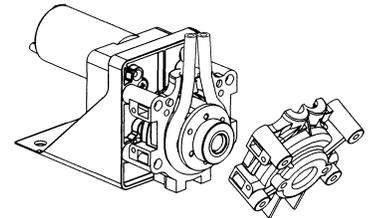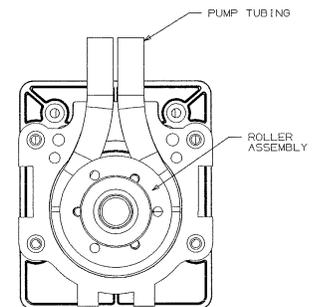



TROUBLE-SHOOTING GUIDE

The following pages contain trouble-shooting information intended to aid an experienced service person in diagnosing operational problems that may occur. For further assistance, contact the Cornelius Technical Services department at 1-888-248-5568 (763) 421-6120 outside the United States) between the hours of 7:30A.M. and 5:00P.M. Central Standard Time. You must have the model and serial number (Located on the right side of the dispenser) prior to calling.

PROBLEM	PROBABLE CAUSE	REMEDY
Totally Inoperative	<ul style="list-style-type: none"> No power to dispenser due to tripped circuit breaker 	<ul style="list-style-type: none"> Reset circuit breaker. Confirm that breaker is correct size and no other equipment is operating on the same circuit. Also confirm that supply voltage is +/- 10% of nameplate specifications.
	<ul style="list-style-type: none"> Loose or broken power supply connection inside dispenser. 	<ul style="list-style-type: none"> Repair connection.
No cooling	<ul style="list-style-type: none"> Line voltage is not within +/- 10% of nameplate specifications causing compressor overload to trip 	<ul style="list-style-type: none"> Contact an electrician
	<ul style="list-style-type: none"> No water in water ice bath or water level extremely low exposing the ice bank sensing probe 	<ul style="list-style-type: none"> Fill ice bath to proper water level
	<ul style="list-style-type: none"> Defective Ice Bank Control or sensing probe 	<ul style="list-style-type: none"> Replace
	<ul style="list-style-type: none"> Cabinet fan is inoperative resulting in warm concentrate (water continues to cool) 	<ul style="list-style-type: none"> Replace
	<ul style="list-style-type: none"> Compressor short cycles on overload 	<ul style="list-style-type: none"> Excessively high discharge pressure due to restricted condenser or inoperative condenser fan motor
	<ul style="list-style-type: none"> Compressor starts but hums and trips overload 	<ul style="list-style-type: none"> Seized or shorted compressor, replace
	<ul style="list-style-type: none"> Defective compressor overload or start capacitor 	<ul style="list-style-type: none"> Test and replace
	<ul style="list-style-type: none"> Compressor starts but does not switch off of start winding 	<ul style="list-style-type: none"> Relay or compressor is defective. Test and replace faulty item
	<ul style="list-style-type: none"> Refrigerant leak 	<ul style="list-style-type: none"> Repair leak, evacuate and recharge system
No water dispensed, concentrate only	<ul style="list-style-type: none"> No water to dispenser 	<ul style="list-style-type: none"> Restore Water
	<ul style="list-style-type: none"> Water supply line inside refrigerated cabinet disconnected from pump platform 	<ul style="list-style-type: none"> Reconnect
	<ul style="list-style-type: none"> Water solenoid located on pump platform clogged or defective 	<ul style="list-style-type: none"> Disassemble and clean solenoid. Replace if necessary.
	<ul style="list-style-type: none"> Main water solenoid/strainer located at the rear of dispenser is clogged, binding or defective 	<ul style="list-style-type: none"> Remove and clean strainer. Confirm 28VDC is present at solenoid during dispense. Confirm solenoid coil is not open. Disassemble and clean solenoid.
	<ul style="list-style-type: none"> Water supply pressure is greater than 80 psi (5.5 bar) forcing the brix flow control closed 	<ul style="list-style-type: none"> Add external regulator and lower pressure to 50 psi (3.5 bar)




PROBLEM	PROBABLE CAUSE	REMEDY
	<ul style="list-style-type: none"> Freeze-up of water coil in ice bath 	<ul style="list-style-type: none"> Unplug dispenser and allow 2-4 hours to thaw. Check operation of agitator motor and ice bank control.
	<ul style="list-style-type: none"> 	<ul style="list-style-type: none"> Refrigeration system may be low on charge resulting in a deformed ice bank and freeze-up of the water coil in the ice bath.
No water and no concentrate, refrigeration is working	<ul style="list-style-type: none"> Black service switch located on the rear of the cabinet door in OFF position 	<ul style="list-style-type: none"> Turn on switch
	<ul style="list-style-type: none"> White door switch open 	<ul style="list-style-type: none"> Door switch must be closed in order to dispense. Check switch operation and replace if necessary.
	<ul style="list-style-type: none"> 6.25 amp fuse inside front electrical box blown 	<ul style="list-style-type: none"> Replace with 6.25, 250VAC slow blow fuse and test
	<ul style="list-style-type: none"> No output from Transformer 	<ul style="list-style-type: none"> Confirm transformer output by of 26VAC +/- 2. Replace transformer if necessary.
	<ul style="list-style-type: none"> Defective voltage regulator board (VRB) located inside front electrical box 	<ul style="list-style-type: none"> Measure across the VDC output of the board. There should be 28VDC present when the dispense button is pressed. Replace VRB if necessary.
	<ul style="list-style-type: none"> Defective dispense push button or portion control board 	<ul style="list-style-type: none"> Test and replace if necessary
No concentrate dispensed, water only	<ul style="list-style-type: none"> Concentrate container not fully engaged into receptacle on pump platform 	<ul style="list-style-type: none"> Refer to Concentrate Loading section of this manual
	<ul style="list-style-type: none"> Dispense/Flush lever in FLUSH position 	<ul style="list-style-type: none"> Move lever to DISPENSE position
	<ul style="list-style-type: none"> Concentrate too cold, not properly thawed 	<ul style="list-style-type: none"> Concentrate should be 35-40°F (1.7-4.5°C) prior to loading
	<ul style="list-style-type: none"> Defective pump motor 	<ul style="list-style-type: none"> Replace pump motor
Warm Drink	<ul style="list-style-type: none"> Ambient air around dispenser is too warm 	<ul style="list-style-type: none"> Relocate dispenser
	<ul style="list-style-type: none"> Excessive demand on dispenser 	<ul style="list-style-type: none"> Add water pre-cooler or second dispenser
	<ul style="list-style-type: none"> Dirty condenser coil 	<ul style="list-style-type: none"> Clean condenser coil
	<ul style="list-style-type: none"> Inoperative condenser fan 	<ul style="list-style-type: none"> Replace condenser fan motor
	<ul style="list-style-type: none"> Defective Ice Bank Control 	<ul style="list-style-type: none"> Test and replace if necessary
	<ul style="list-style-type: none"> Loss of refrigerant charge due to leak in system 	<ul style="list-style-type: none"> Repair leak and recharge system
Water continuously drips from nozzle when in OFF mode	<ul style="list-style-type: none"> Main water solenoid at base of unit or water solenoid on pump platform not shutting off tightly 	<ul style="list-style-type: none"> Clean solenoid(s), replace parts as necessary (refer to the Planned Maintenance Section)
Concentrate warm, water cold	<ul style="list-style-type: none"> Cabinet fan inoperable 	<ul style="list-style-type: none"> Check/replace fan
	<ul style="list-style-type: none"> Agitator motor/pump inoperable or restricted 	<ul style="list-style-type: none"> Check/replace agitator motor
	<ul style="list-style-type: none"> Loss of refrigerant charge due to leak in system 	<ul style="list-style-type: none"> Repair leak and recharge system




PROBLEM	PROBABLE CAUSE	REMEDY
Brix Problem	<ul style="list-style-type: none"> Water supply pressure too low, less than 20 psi (1.4 bar) flowing water pressure fluctuates sharply 	<ul style="list-style-type: none"> Correct water supply problem to ensure a constant 50 psi (3.5 bar) flowing to the dispenser
	<ul style="list-style-type: none"> Water flow control binding or spring is defective 	<ul style="list-style-type: none"> Clean and/or replace parts as necessary
	<ul style="list-style-type: none"> Improperly thawed concentrate. Brix changes as the concentrate temperature changes (concentrate becomes thinner as temperature rises) 	<ul style="list-style-type: none"> Concentrate should be 35-40°F (1.7-4.5°C) prior to loading
Pump Inoperative	<ul style="list-style-type: none"> Pump motor defective 	<ul style="list-style-type: none"> 28VDC should be present at pump motor during dispense. If voltage is present and motor does not start, replace pump motor
	<ul style="list-style-type: none"> No power to transformer or no 28VAC output from transformer 	<ul style="list-style-type: none"> Confirm transformer has line voltage present on primary side. If no 28VAC output from the secondary replace transformer
	<ul style="list-style-type: none"> Defective voltage regulator board (VRB) located inside front electrical box 	<ul style="list-style-type: none"> Confirm board produces 28VDC present when the dispense button is pressed (refer to the Electrical Box Wiring Diagram for VDC output location). Replace VRB if necessary
	<ul style="list-style-type: none"> Defective dispense control board (Push button or portion control) 	<ul style="list-style-type: none"> Test and replace if necessary
Machine continues to dispense after dispense button is released or dispenses without operator input	<ul style="list-style-type: none"> Push button or portion control pad stuck in on position 	<ul style="list-style-type: none"> Disconnect the wire harness from the rear of the portion control and close the door. If unit does not dispense on its own the dispense control board is bad (stuck on)
	<ul style="list-style-type: none"> Relay on voltage regulator board (VRB) stuck on. 	<ul style="list-style-type: none"> Disconnect the 4-wire harness from the lower right corner of the VRB. If the unit continues to dispense on its own the VRB is defective (relay stuck on)

ASSEMBLY DRAWINGS

SYSTEM WIRING DIAGRAM QST 2000

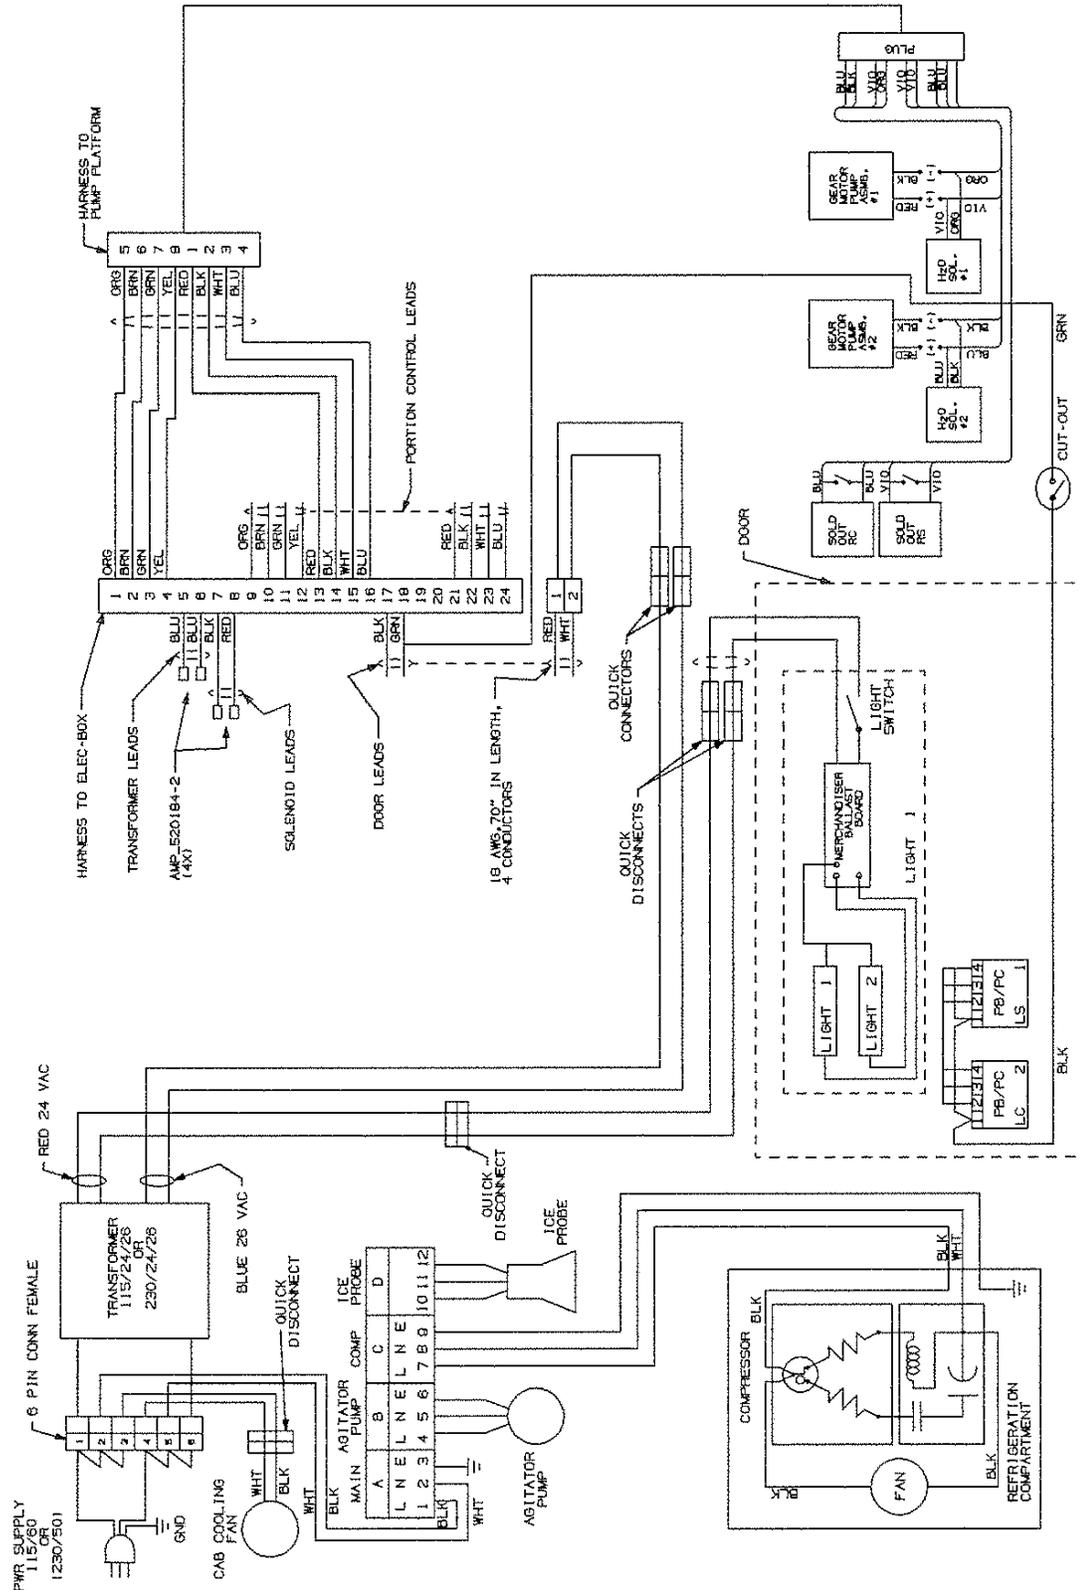

MAIN ELECTRICAL BOX WIRING DIAGRAM QST 2000

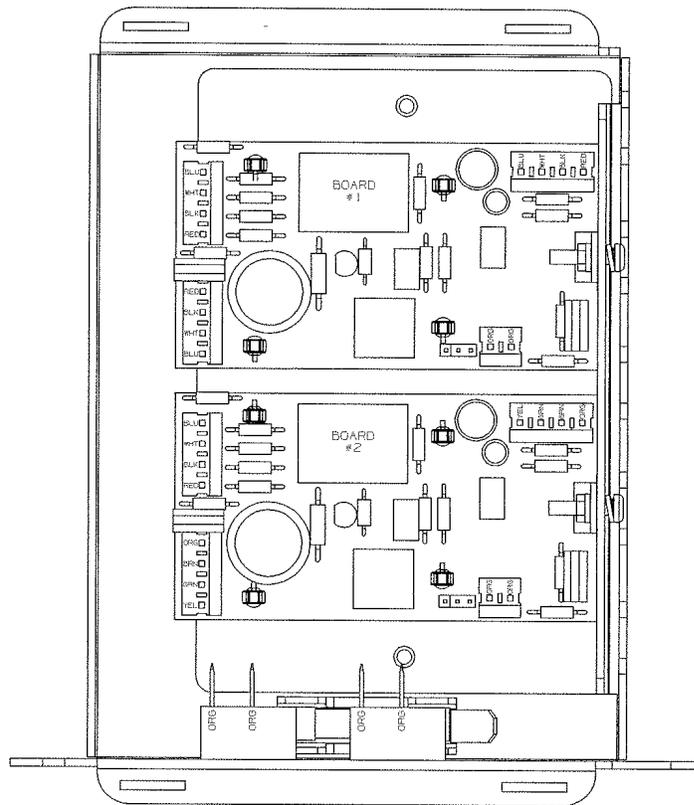

PIN#	COLOR	SIGNAL	BOARD#
1	ORG	P1-4	2
2	BRN	P1-3	2
3	GRN	P1-2	2
4	YEL	P1-1	2
5	BLU	FUSE-S	
6	BLU	P2-4	1,2
7	RED	P2-1	1,2
8	BLU	P2-2	1,2
9	ORG	P3-4	2
10	BRN	P3-3	2
11	GRN	P3-2	2
12	YEL	P3-1	2
13	RED	P1-4	1
14	BLK	P1-3	1
15	WHT	P1-2	1
16	BLU	P1-1	1
17	BLU	FUSE-R	
18	WHT	P2-3	1,2
19			
20			
21	RED	P3-4	1
22	BLK	P3-3	1
23	WHT	P3-2	1
24	BLU	P3-1	1

ELECTRICAL BOX WIRING

P/N 720901002

PIN#	COLOR	SIGNAL	NAME	BOARD#
1	ORG	J1-4	P2(+)	2
2	BRN	J1-3	P2(-)	2
3	GRN	J3-2	S02(+)	2
4	YEL	J3-1	S02(-)	2
5	BLU	J3-3	POWER	1,2
6	BLU	FUSE-S		
7	RED	J1-2	H20+	1,2
8	BLU	J1-1	H20-	1,2
9	ORG	J4-1	SW2+	2
10	BRN	J4-2	2LED-	2
11	GRN	J4-3	2LED+	2
12	YEL	J4-4	SW2-	2
13	RED	J1-4	P1(+)	1
14	BLK	J1-3	P1(-)	1
15	WHT	J3-2	S01(+)	1
16	BLU	J3-1	S01(-)	1
17	BLU	J3-4	GND	1,2
18	WHT	FUSE-R		
19				
20				
21	RED	J4-1	SW1+	1
22	BLK	J4-2	1LED-	1
23	WHT	J4-3	1LED+	1
24	BLU	J4-4	SW1-	1

ELECTRICAL BOX WIRING, SLJ P/N 720901003

Cornelius Inc.
www.cornelius.com