



INSTALLATION INSTRUCTIONS

FOR ICE MAKER ADAPTER KIT (P/N 629085001)

This ice maker adapter kit (P/N 629085001) is for the following units:

Table 1. Applicable Models

Dispenser Model	Ice Maker Model
ED200/250	Wilshire WCC500/700

Table 2. Adapter Kit Parts

Item No.	Part No.	Name	Qty.
1	620032802	Ice Maker Adapter Lid	1
2	22128	Bracket, Ice Maker Mounting	2
3	50904	RTV, 3-Oz. Tube	1
4	620032804	Cover, Manual Ice Fill	1
5	70226	#10 Sheet Metal Screw	12
6	70188	Thumb Screw, #8-32X3/8-in. Long	1
7	620913501	Installation Instructions	1

**WARNING:**

Disconnect power to the unit before installing the adaptor following all lockout/tag out procedures established by the user. Verify that all the power is off to the unit before performing any work.

Failure to comply could result in serious injury, death or damage to the equipment.

**WARNING:**

All ice baffle plates and bin stats, if included or recommended in this kit, must be installed as directed in this manual or the equipment manufacturer's instructions.

Failure to comply could result in serious injury, death or damage to the equipment.

**WARNING:**

All of the attachment screws and plates must be installed as directed in this manual.

Failure to comply could result in serious injury, death or damage to the equipment.

Perform the following procedure to install the adapter kit.

1. Remove merchandiser from the dispenser by lifting up on both the right and the left sides to disengage the merchandiser from slots in the dispenser cabinet. Tilt the merchandiser forward from the top and lift off.

NOTE: Disregard Step 2 if the ice diverter has been factory installed.

2. Refer to Figure 4 for the following:
 - A. Remove the ice chute cover (snap-fit) and ice chute (4 nuts).
 - B. Remove the gate restrictor and discard.
 - C. Install the ice diverter as shown.
 - D. Replace the ice chute and cover.
3. Refer to Figure 3 for adjusting the automatic agitation timer.
 - A. Loosen/rotate the center mounting screw that secures the white reflector panel/electrical control box cover in place and lower the cover to expose the automatic agitation timer.
 - B. Adjust the timer to 2 seconds "ON" and 1 hour "OFF" as shown in Figure 3.



C. Reinstall the white reflector panel and the merchandiser.

NOTE: Disregard Steps 4, 5, and 6 if the dispenser has the ice maker adapter lid factory installed.

4. Remove the plastic ice storage hopper lid and discard.
5. Place the lid assembly supplied with the kit on top of the dispenser and position it flush with the back and sides of the dispenser as shown in Figure 1.
6. Using the slotted holes in the lid as a template, drill four 0.136" diameter (#29 drill size) holes at the bottom of the slots (see Figure 1, detail A) into the dispenser cabinet. Use care not to drill into the ice storage hopper. Fasten the cover to the dispenser with four #10 sheet metal screws, two on each side.
7. Seal the ice maker to the dispenser lid as follows (see Figure 2):
 - A. Run a bead of RTV around the opening in the lid and inside the perimeter of the ice maker outline so that the ice maker will set on the RTV.
 - B. Set the ice maker onto the lid and position it as shown in Figure 2
 - C. Wipe away any excessive RTV.
8. Install the ice maker mounting brackets (item 2) as shown in Figure 2. Using the brackets as a template, drill 0.136 diameter (#29 drill size) holes into the ice maker cabinet and the dispenser lid (item 1). Use care not to drill into any ice maker components (condenser, tubing, etc.). Secure the brackets using the #10 sheet metal screws provided.
9. Follow the ice maker manufacturer's instructions to complete the installation of the ice maker including the bin thermostat.
10. Secure the manual ice fill cover in position on the lid over the rear hopper access opening with the thumb screw (item 6). Note that the gasket should be compressed to form a seal against the ice maker cabinet with the cover secured in position.

DRILL .136 DIA. HOLES USING
BOTTOM OF SLOTTED HOLES
AS A TEMPLATE.

DETAIL "A"
ENLARGED

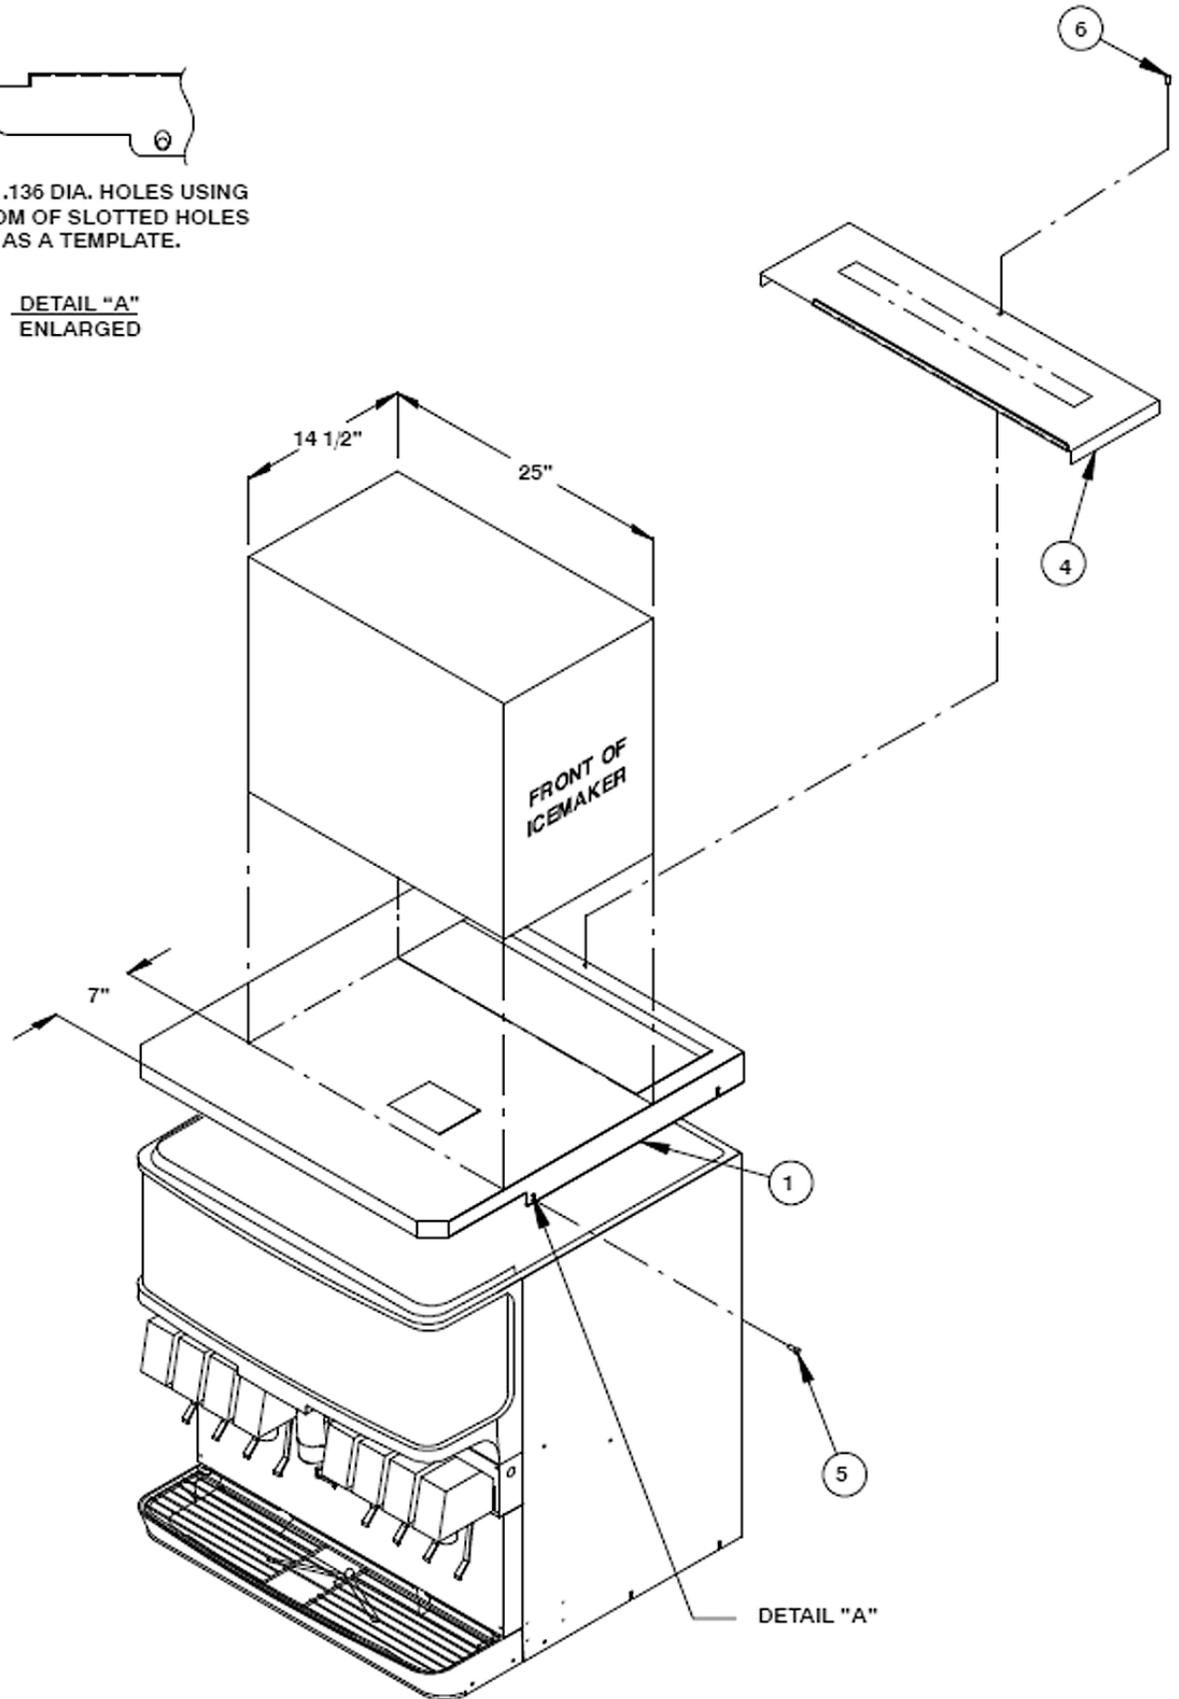


Figure 1.

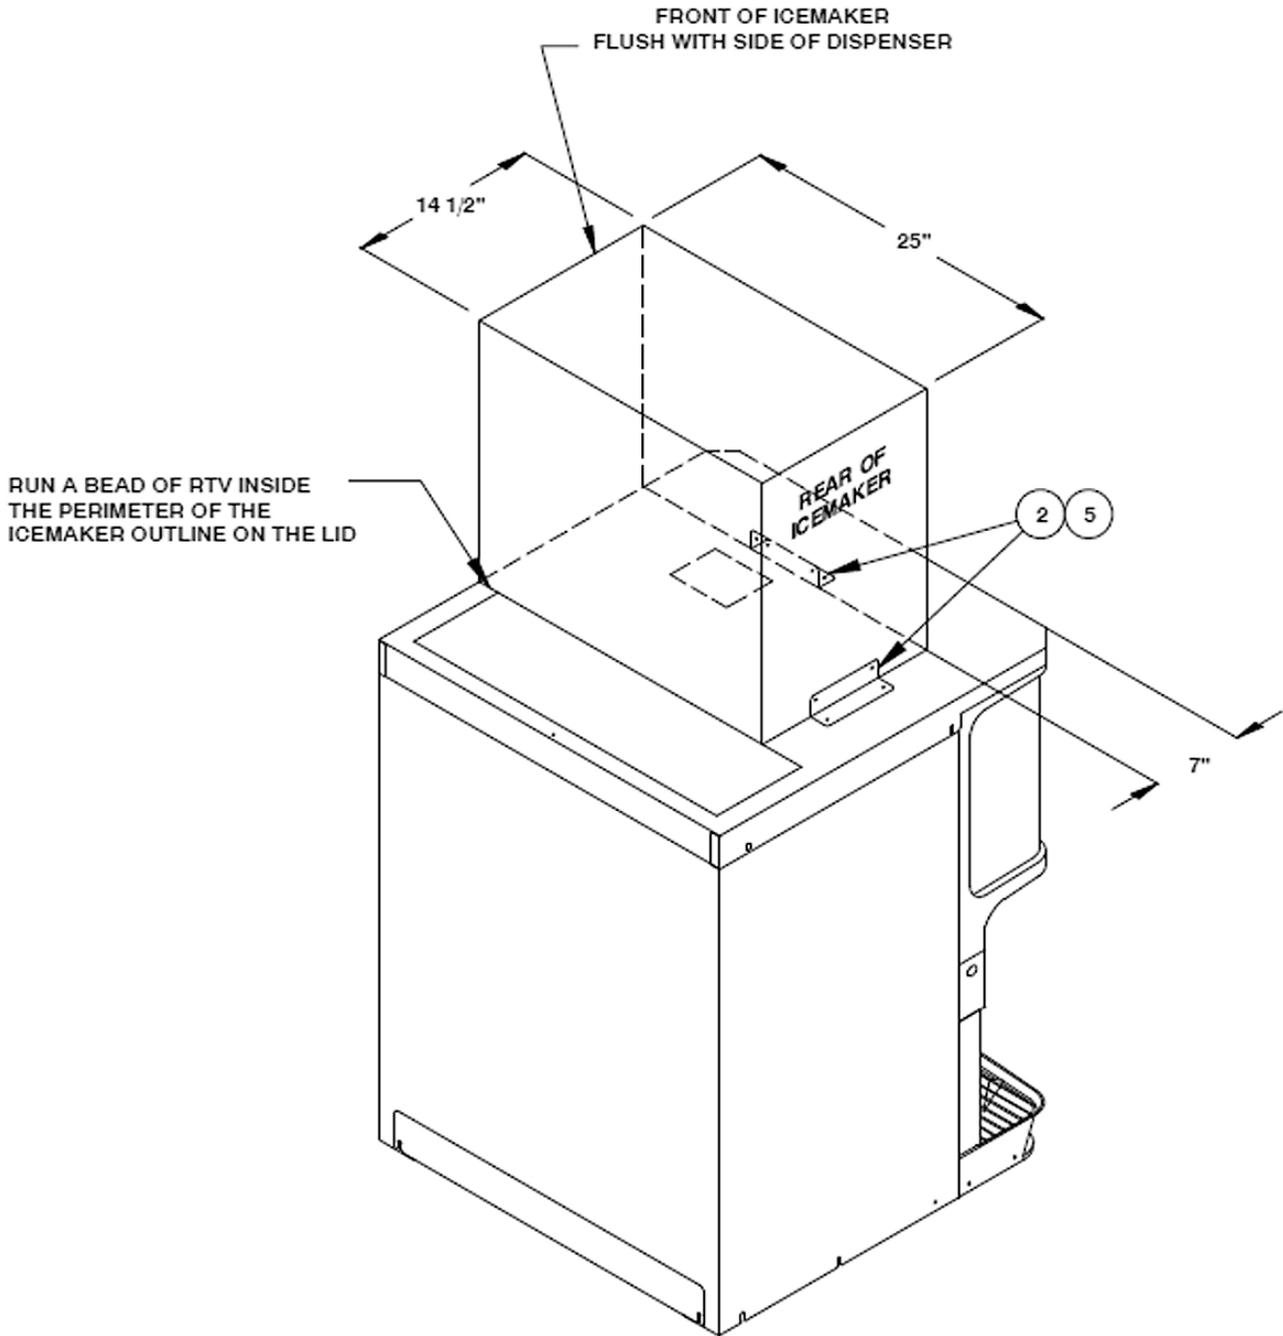


Figure 2.

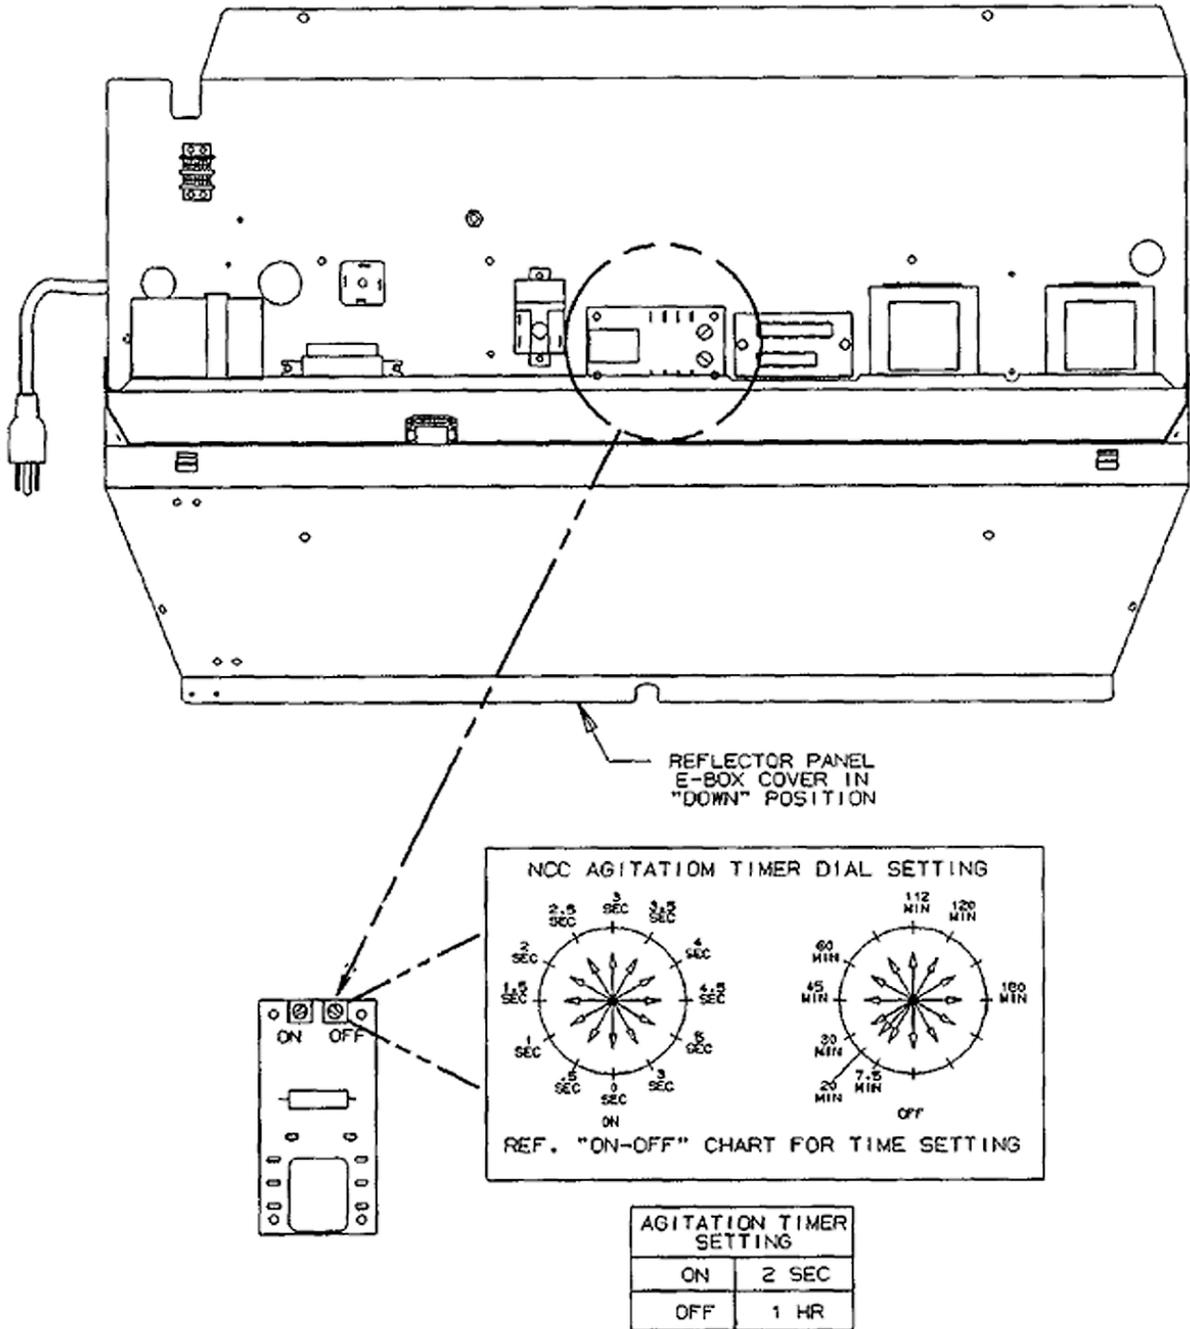


Figure 3.

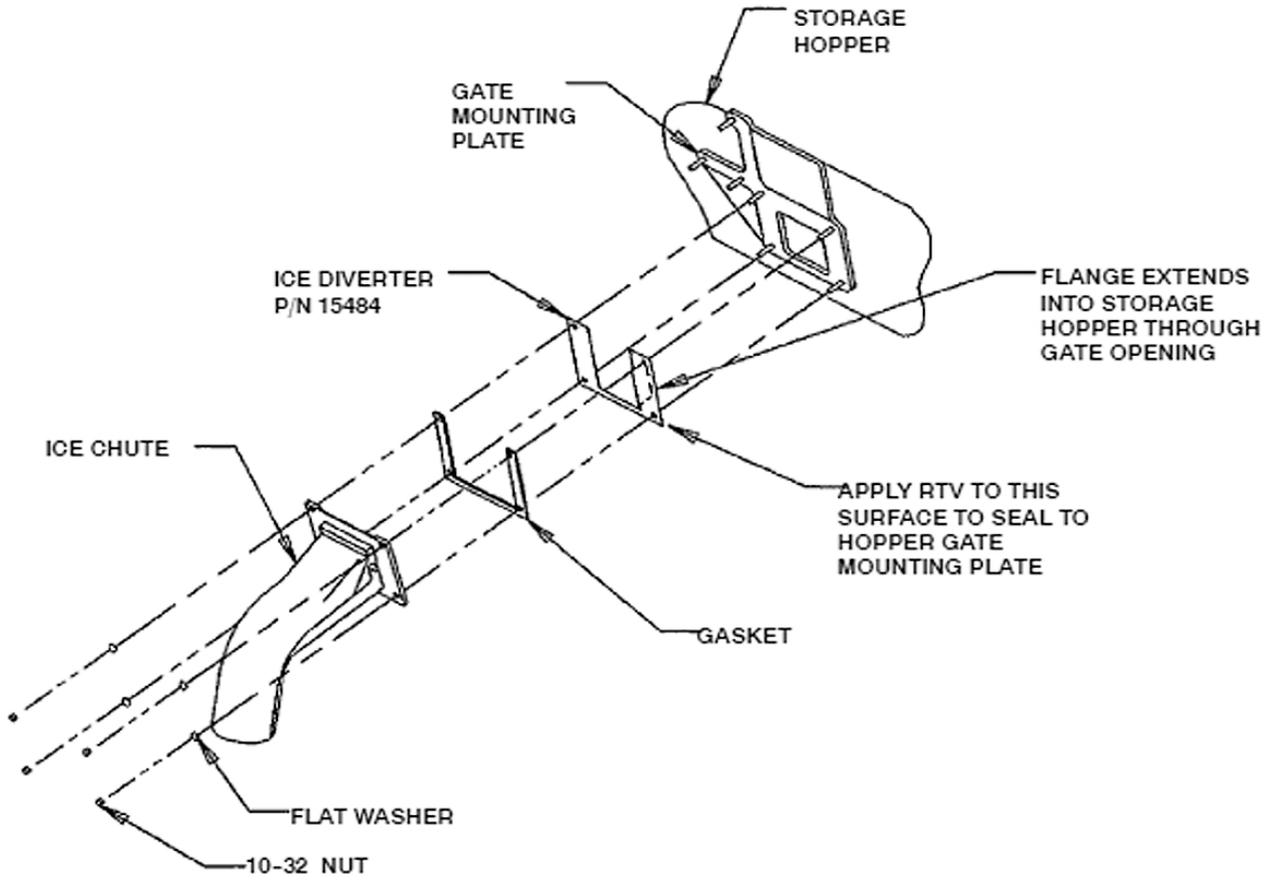


Figure 4.