



# Replacement Adapter Lid Installation Instructions

## Kit P/N 629096977

1. The kit includes: Lid (1), Screws with Nylok (2), Washers (2), Screw Cap (2), Gasket (2).
2. Use flat blade screwdriver to pry open screw caps (figure 2), to expose the screw (figure 3).
3. Remove & discard screws, caps, washers, & lid.
4. Install new lid with new screws, caps & washers.
5. Install each gasket \* on top of the merchandiser meeting the following conditions:
  1. Edge of gasket abuts the inside edge of the top flange (Figure 4).
  2. The gaskets align with the pull cups (Figure 5)

\* Note: Top of merchandiser must be clean for gasket to adhere.

Figure 1

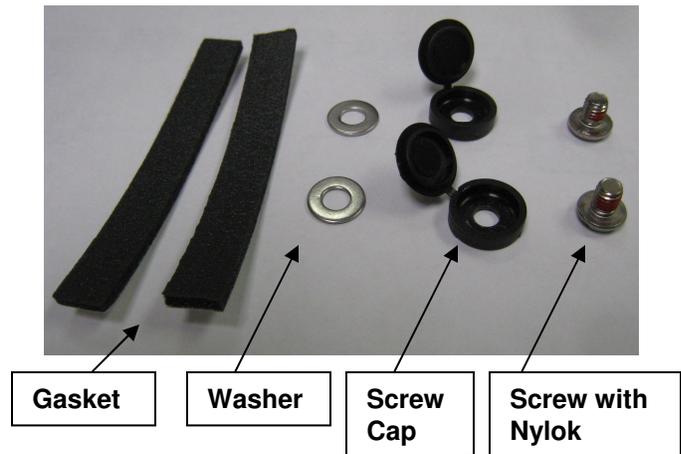


Figure 2



Figure 3

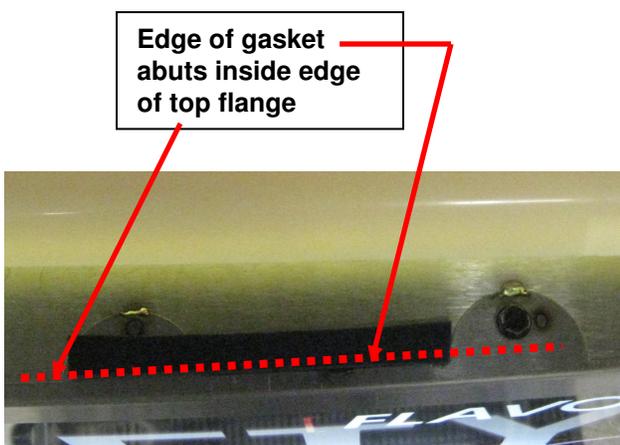


Figure 4

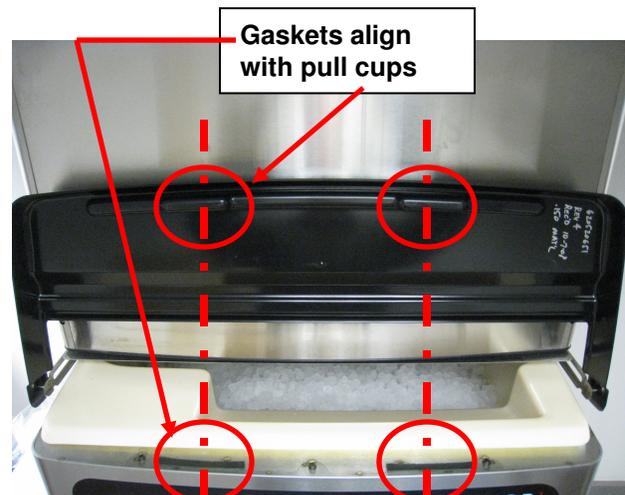


Figure 5