


02039 KIT

MODEL TJ90-BC/AGITATION TIMER INSTALLATION

1. Disconnect electrical power to unit.
2. Remove the upper front panel and electrical control box cover.
3. Mount the timer to the L-shaped bracket with (4) #6-32 screws and nuts.
4. Check setting of cycle time dials on the timer (adjustable "on" and "off" times) as shown in the attached sketch.
5. Connect the black, white, and pink wires provided in the kit to the timer as shown in the attached wiring diagram.
6. Mount the timer bracket assembly to the electrical box with the (2) #8 sheet-metal screws.
7. Disconnect the red wire at the capacitor and connect to the timer as shown on the wiring diagram. Complete the remaining wire hook-up per the wiring diagram.
8. Check for proper operation of the unit. Note that when power is connected to the unit, an agitation cycle will occur.

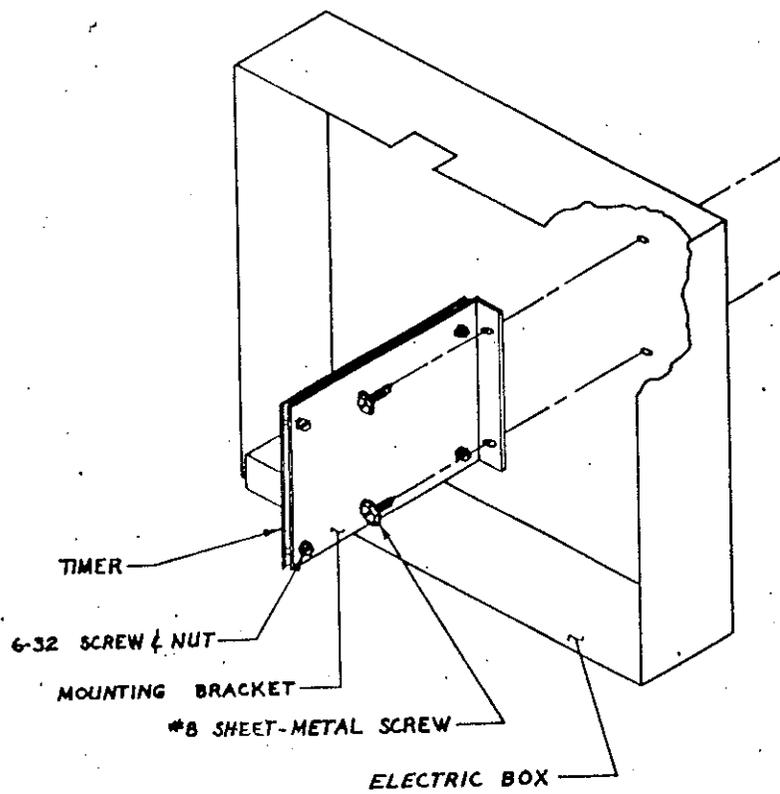

MODEL	CYCLE DIAL SETTING	
	"ON" (SECONDS)	"OFF" (MINUTES)
TJ90-BC	1/2 (2)	3/4 (120-180)

