
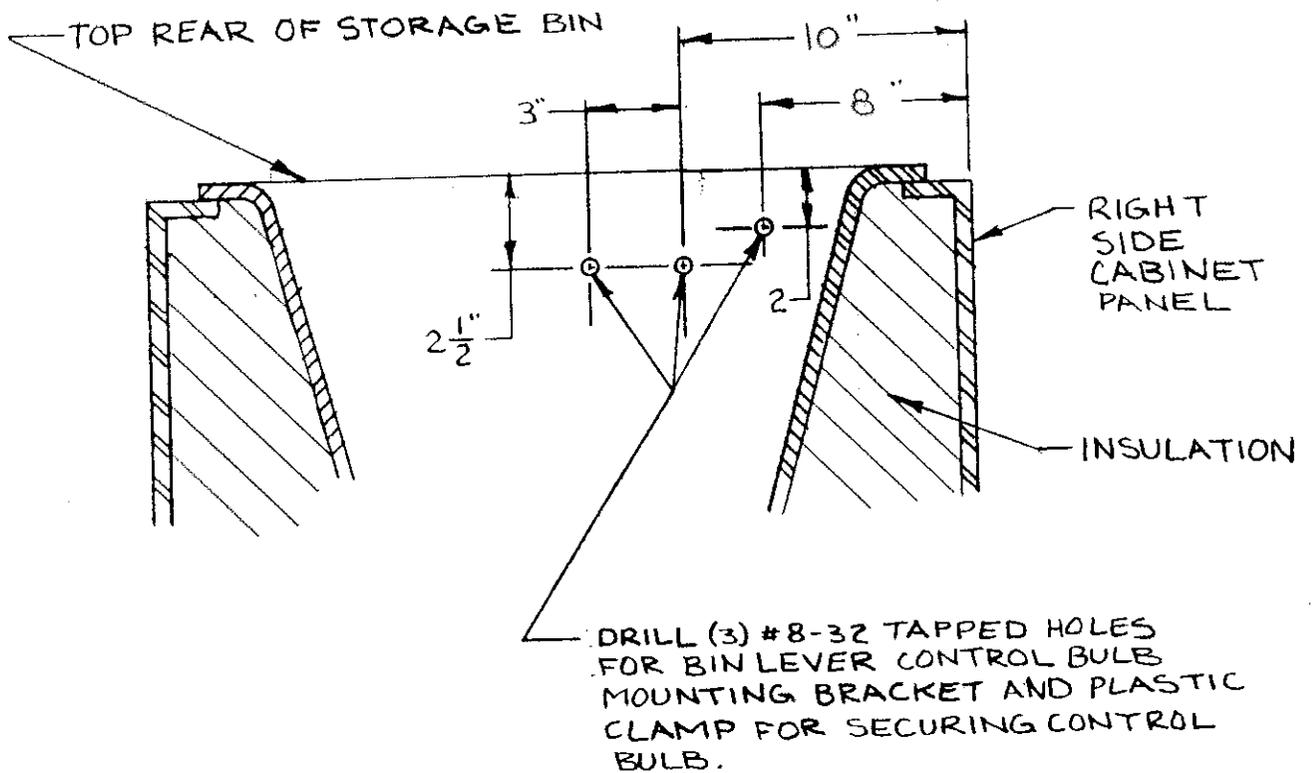


## KIT 02142

### INSTALLATION INSTRUCTIONS

For installing a Kold-Draft Model Series V450/650 Cuber on a REMCOR® TJ300 Dispenser:

1. Refer to Figure 1 and locate mounting holes for securing the mounting bracket for the Bin Level Control Bulb to the Dispenser Storage Bin Wall. Drill and tap for #8 - 32 screws.
2. Seal ice maker to top of dispenser as follows (Refer to Figure 2):
  - A. Locate gasket around opening on dispenser top cover.
  - B. Set ice maker on dispenser cover.
  - C. Locate mounting brackets on ice maker and dispenser. Drill .136 diameter holes into ice maker and dispenser sheet metal for securing brackets.
3. Route the Bin Level Control Bulb and secure to the mounting bracket as shown in Figure 3.
4. Set the agitation timer located in the dispenser electrical control box for 2 seconds on/60 minutes off (See Figure 4).
5. Follow Kold draft's instructions to complete the installation of the ice maker.

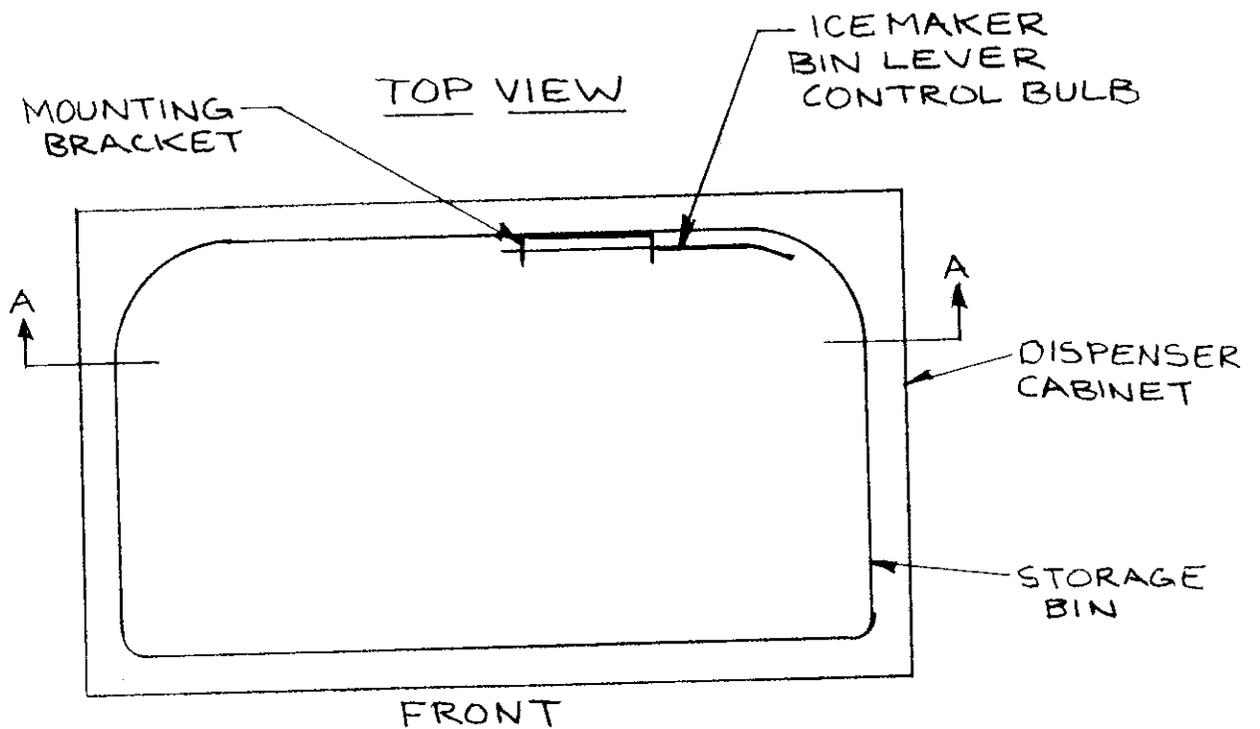

SECT A-A

FIGURE 1

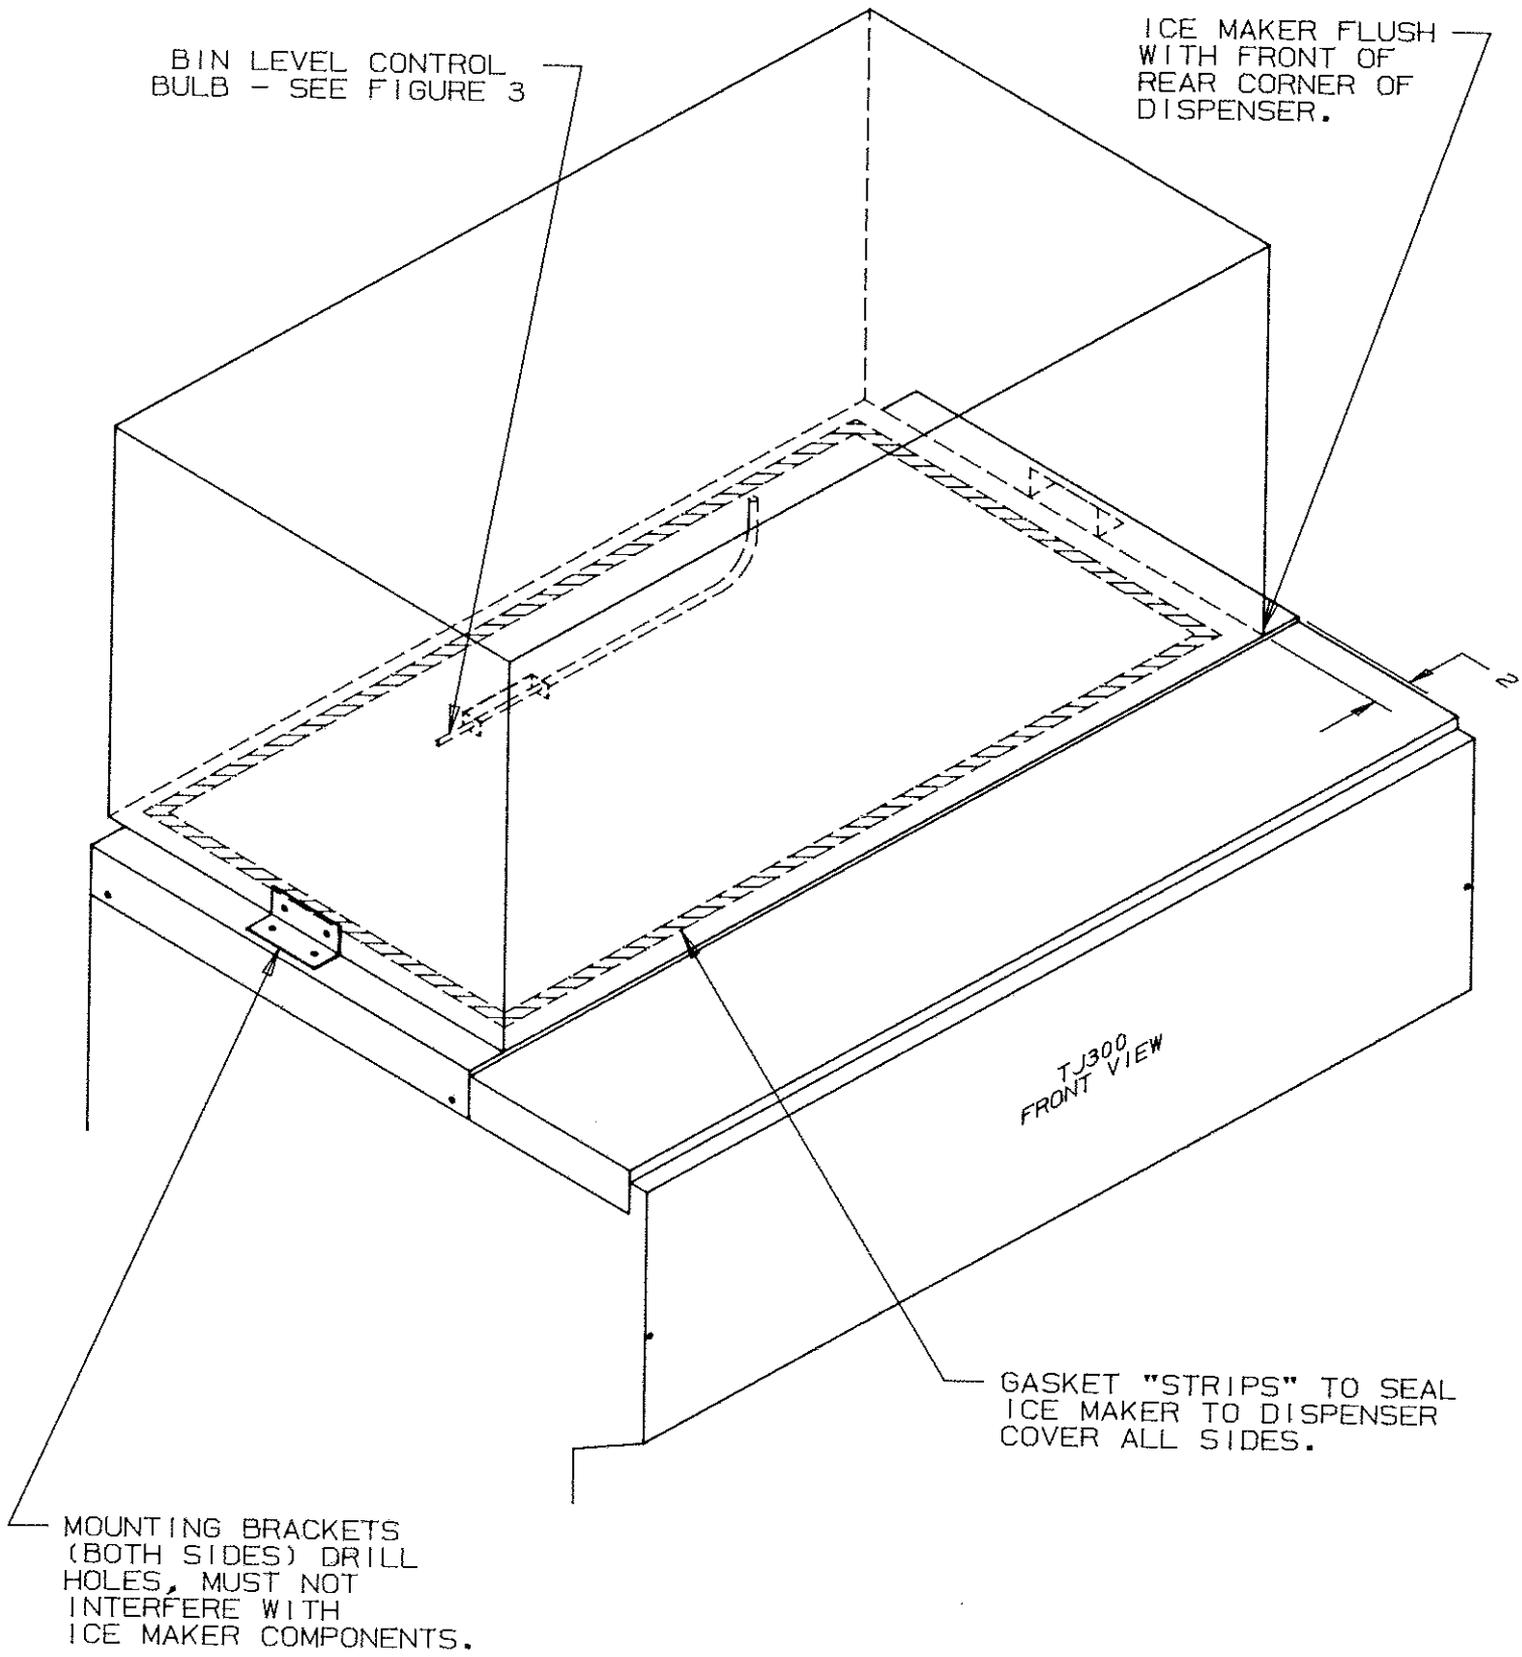


FIG. 2


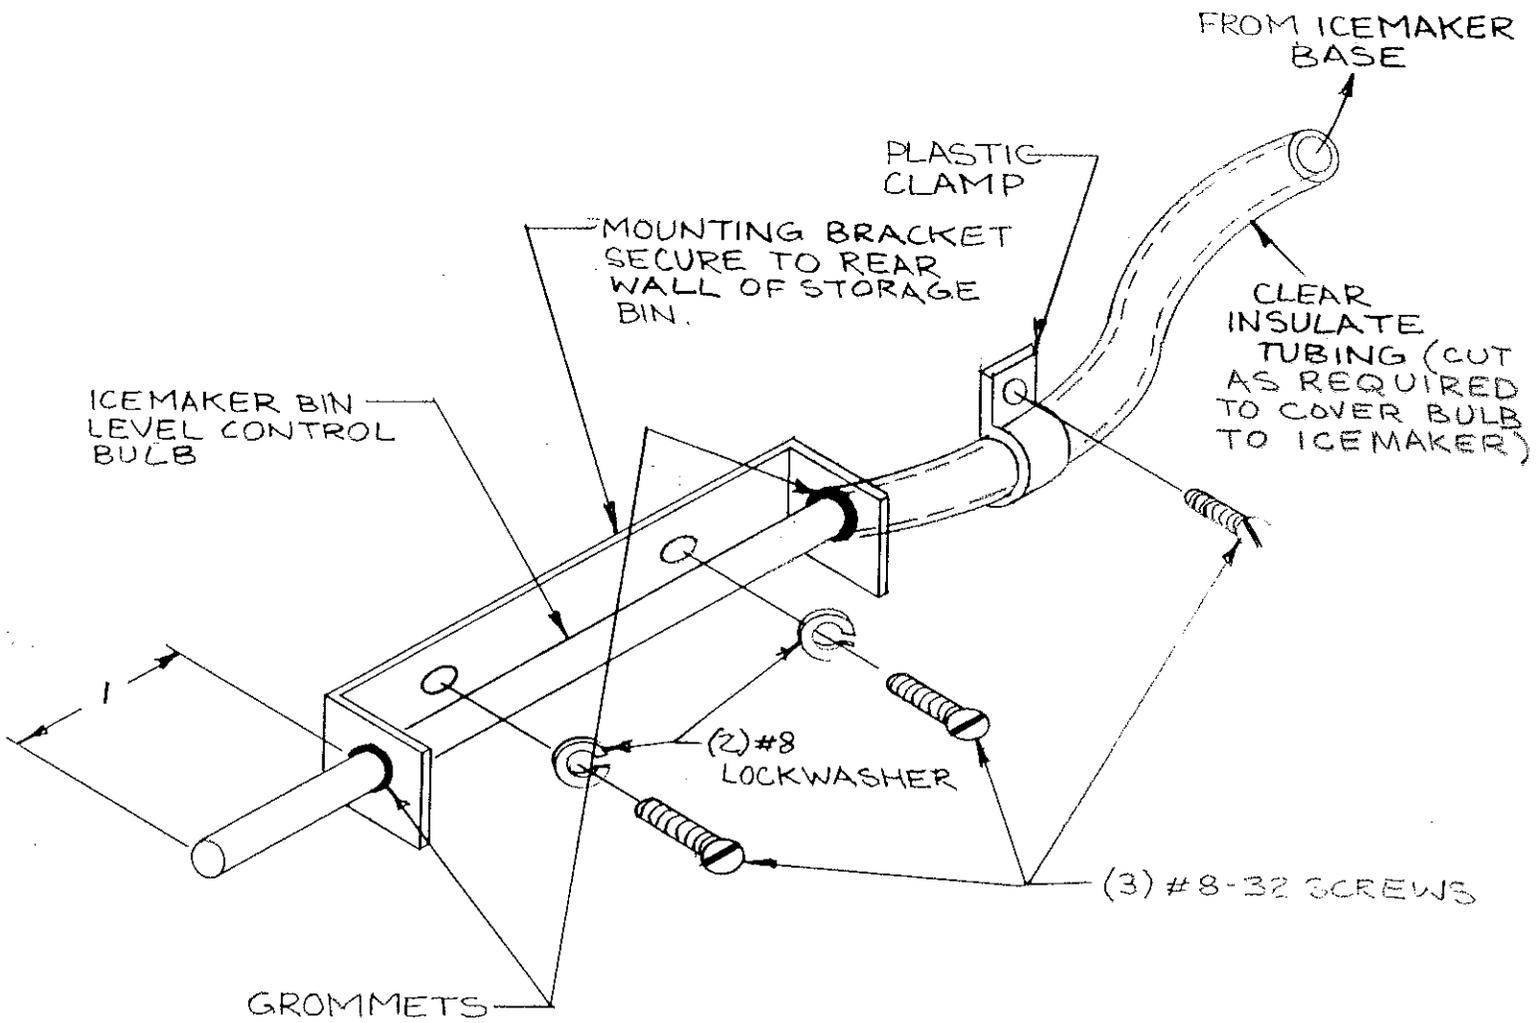


FIGURE 3

# FIG. 4 AGITATION TIMER SETTING

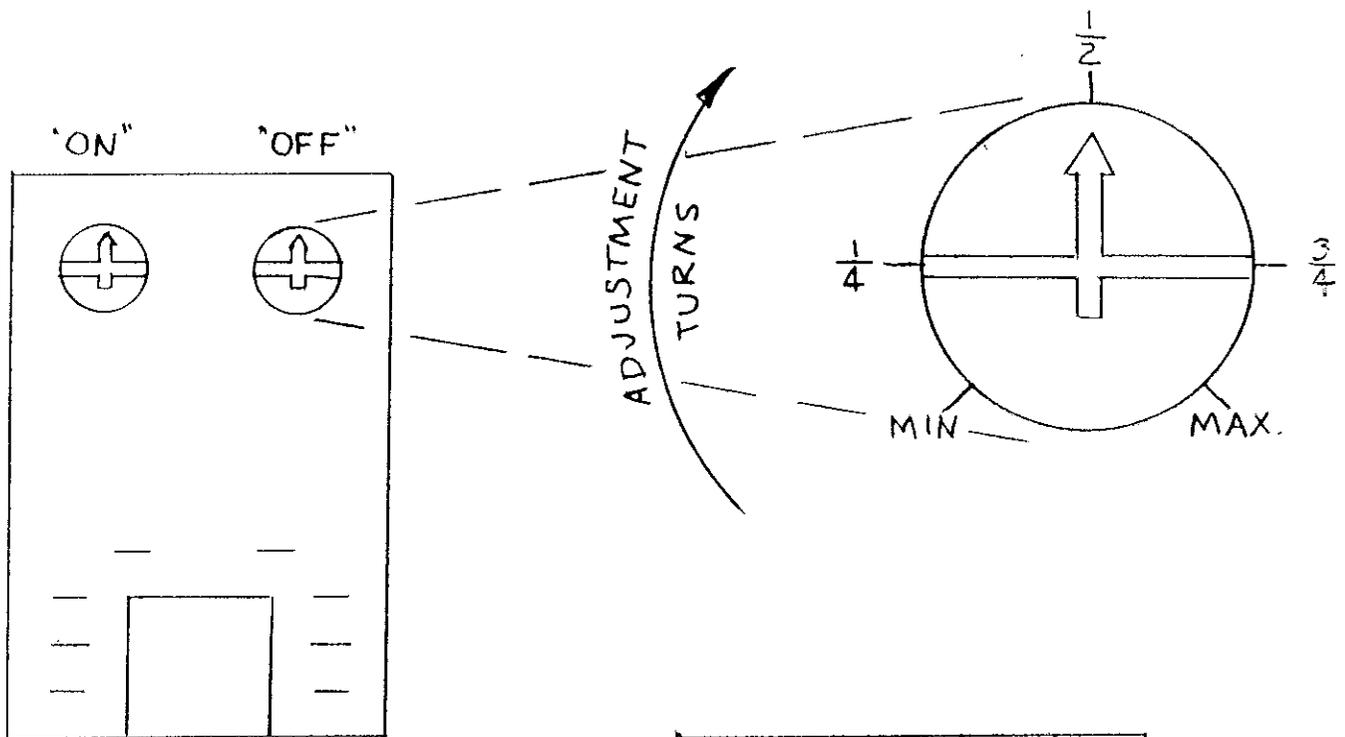

CYCLE DIAL SETTING	ON	OFF
	1/2	1/2
TIME	2 SEC	60 MIN