

Kit 2188

Installations Instructions

Crystal Tips Model 200 on a REMCOR® Model DB150 Dispenser


1. Seal Icemaker to top cover of dispenser as follows.
 - a) Locate outline of icemaker on dispenser cover as shown in attached sketch.
 - b) Run a bead of RTV around the inside of the icemaker outline on the cover.
 - c) Position the icemaker on the dispenser cover.
 - d) Wipe away any excess RTV immediately.
 - e) Locate mounting brackets on dispenser. Drill .136 diameter holes into ice maker panels, and use sheet metal screws provided for securing brackets.
2. Follow the icemaker manufacturer's instructions to complete the installation. Check that the ice level control bracket does not interfere with the agitator in the dispenser ice storage hopper. Adjust the icemaker control bracket for proper ice level.

CRYSTAL TIPS
MODEL SERIES
200, 300, 400
CUBERS. MOUNT
FLUSH WITH
REAR OF DISPENSER

DISPENSER
TOP COVER

APPLY RTV AROUND IN-
SIDE OF ICEMAKER OUT-
LINE ON DISPENSER
COVER TO FORM A SEAL.

REMOVE SCREWS AND TURN
BRACKET AROUND 180° RE-
PLACE SCREWS. USING
BRACKET AS A TEMPLATE,
DRILL .136 DIA. HOLES
INTO ICEMAKER CABINET
FOR SHEET METAL SCREWS
PROVIDED.

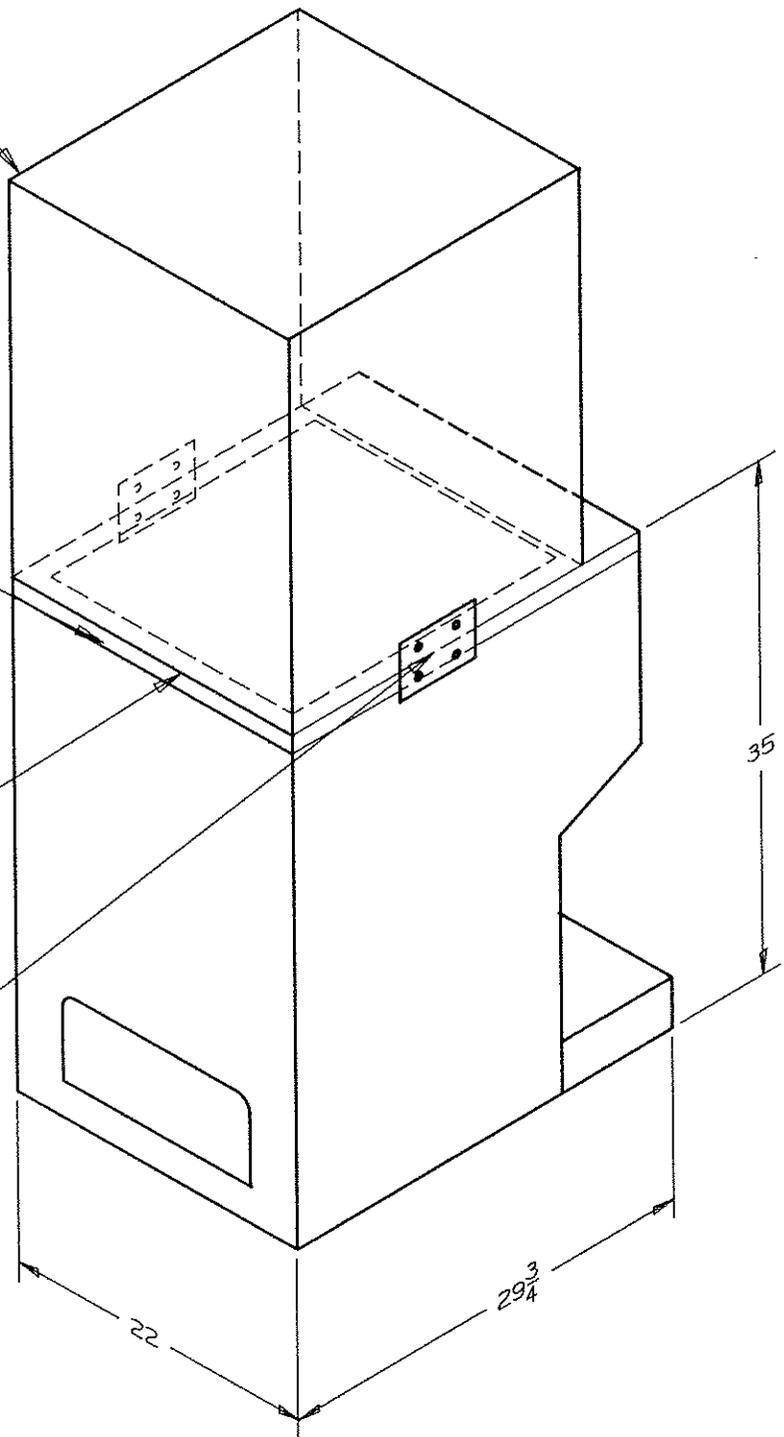

DB150
REAR VIEW

FIGURE 1