

Instruction Manual

MACHINERY:

Big Chopper



Heecon BV

Maxburgdreef 11

B – 2321 Meer

België

E: inkoop@heeconbv.com

T: +32 (0)3 808 17 74

M: +32 (0)495 27 25 29

W: <https://www.heeconbv.com>

Date: Januari 2021

© Copyright 2021

All rights reserved. Nothing herein should be duplicated or incorporated in a retrieval system, or transmitted in any form or means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Heecon BV. This also applies to accompanying drawings, photographs and diagrams.

Heecon BV preserves the right to change parts at any time without prior or direct notification to the buyer. The content of this manual can also be changed without prior warning. For information concerning settings, maintenance or repairs not covered by these instructions the buyer is requested to contact Heecon BV.

This manual is put together with all possible care but Heecon BV cannot take any responsibility for any inaccuracies or incomplete information in this manual or for any related consequences thereof.

Content

Content	3
1. Manufacturer data	5
2. Product data	5
2.1 General	5
2.2 Nameplate and location	5
3. EC-Declaration of Conformity	6
4. General terms	7
4.1 Target group	7
4.2 Intended use	7
4.3 Not-recommended use or reasonably foreseeable misuse	7
4.4 Marking conventions	8
4.5 Liability and warranty	8
5. Machinery assembly and characteristics	9
5.1 General description	9
5.2 Description of the operation of the constituent parts	9
5.3 Components and naming	10
5.4 Bedieningssystemen	14
5.4.1 Control systems main control panel	14
5.4.2 Other control systems	15
5.5 Characteristics drive / power supply	19
6. Safety	20
6.1 Safety signs	20
6.1.1 Meaning	20
6.1.2 Location	21
6.2 Safety instructions	22
6.2.1 General safety instructions	22
6.2.2 Electrical	23
6.2.3 Mechanical	23
6.2.4 Other	25
6.2.5 Safety instructions during maintenance, cleaning and repair	26
6.3 Safety provisions	27
7. Instructions for assembly, installation and connection	28
7.1 Assembly bunker container	28
7.2 Disassembly bunker container	29
8. Operating and control instructions	30
8.1 General	30
8.1.1 Starting the machine	30
8.1.2 Stopping the machine	30
8.2 Working with canvases	31
8.2.1 Unwinding the ground canvas	31
8.2.2 Placing the crops on the canvas	32
8.2.3 Attaching the canvas to the coiling unit	33
8.2.4 Coiling the canvas and shredding	35
8.2.5 Pointing the discharge pipe	37
8.2.6 Setting and operation of the bunker container	38
8.2.7 Detaching the canvas from the coiling unit	40
9. Maintenance instructions	41
9.1 Emptying blocked discharge pipe	41
9.2 Sharpening the rotor cutting blades	42
9.2.1 Start sharpening	42
9.2.2 Stop sharpening	44
9.3 Extending and retracting feed unit	45
9.3.1 Extending feed unit	45
9.3.2 Retracting feed unit	46
9.4 Adjusting the lower cutting blade of the chopper unit	47
9.5 Changing the lower blade of the chopper rotor	48

9.6	Adjusting the bottom distance of the chopper cutting blades.....	49
9.7	Adjusting the scraper bearings of the chopper rotor.....	50
9.8	Changing the rotor cutting blades	52
9.9	Adjusting the V-belt.....	53
9.10	Adjusting tension of the upper feed cylinder.....	54
9.11	Adjusting tension of the chain drive of the lower feed cylinders.....	55
9.12	Checking and refilling fuel.....	56
9.13	Checking and refilling hydraulic oil	57
9.14	Checking and refilling coolant.....	58
9.15	Cleaning air filters	58
9.16	Lubricating the machine	59
9.17	Cleaning the machine	59
9.18	Maintenance of the engine.....	60
9.19	Other periodic inspections/checks	60
10.	Storage, transportation and waste	62
10.1	Storage	62
10.2	Transportation	62
10.3	Waste	62
11.	Fault analysis	63
12.	Equipment list (Spare parts)	65
13.	Elektrical diagram	66
14.	Hydraulic diagram.....	67

1. Manufacturer data

Heecon BV

Maxburgdreef 11

B – 2321 Meer

Belgium

E: inkoop@heeconbvba.com

T: +32 (0)3 808 17 74

M: +32 (0)495 27 25 29

W: <https://www.heeconbvba.com>

2. Product data

2.1 General

Machinery name: **Big Chopper**

Year of construction: **2021**

Serial number:

2.2 2.2 Nameplate and location



3. EC-Declaration of Conformity

EC-Declaration of Conformity for the Machinery (in accordance with Annex II.1.A of directive 2006/42/EC)

**Heecon BV
Maxburgdreef 11
2321 Meer, België**

Authorized representative to compile the technical file:

Name: Martijn Heestermans
Adress: Heecon BV
Maxburgdreef 11
2321 Meer, Belgium

Hereby declares that following product:

MACHINERY : **Big Chopper**
SERIAL No. :
YEAR OF CONSTRUCTION : **2021**

is consistent with the provisions of the following directives:

2006/42/EC **Directive 2006/42/EC of the European Parliament and of the Council of 17 May 2006 on machinery, and amending Directive 95/16/EC (recast)**

as published in the Official Journal of the European Union;

and further declares that the following (parts of) harmonized standards have been applied

- | | |
|------------------------------|--|
| NBN EN ISO 12100:2010 | Safety of machinery - General principles for design – Risk assessment and risk reduction |
| EN ISO 13849-1:2016 | Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design |
| NBN EN ISO 13850:2015 | Safety of machinery - Emergency stop - Principles for design |
| NBN EN ISO 13857:2008 | Safety of machinery - Safety distances to prevent hazard zones being reached by upper and lower limbs |
| EN ISO 4413 : 2010 | Hydraulic fluid power - General rules and safety requirements for systems and their components |

This declaration solely refers to the product in the condition in which it is introduced to trade and does not include any constituent parts added by the end user or any actions taken by the end user at a later date.

Done at: Meer

Date:

Signature of the authorized person:

Name:

Position:

Signature:

4. General terms

This machinery is designed and built according to the latest and best available techniques.



It is required to familiarize all users very carefully with the instructions and prescriptions in this document before starting any activity with this product. You will get the most benefit from your investment if you strictly follow the instructions for use, maintenance and inspection. The same applies to the operating instructions for the driving parts such as the motor, which is supplied by the manufacturer.

This instruction manual belongs to this machinery and must be transferred along with the machinery to the new owner in case of a possible sale. The new owner must be made aware of these requirements. If there is a need for a new manual, for example, if yours is damaged or lost, please immediately contact the manufacturer.

4.1 Target group

The Big Chopper may only be used by professionally trained and qualified adults that have adequate knowledge and experience regarding the installation, operation, maintenance and repair of the equipment.

The customer has the responsibility to train his/her employees according to applicable local (legal) requirements. This training of the user(s) may be provided by (a) specialist(s) of the manufacturer.

The Big Chopper may only be operated by adults of 18 years and older who are not under the influence of alcohol, drugs and / or medication. Furthermore, it is the employer's responsibility to determine who is authorized to use the machine correctly and safely.

This manual is written on the assumption that users are familiar with similar products and the applicable terms and concepts. If the terms and definitions used are not clear to the reader, the reader should consult his / her supervisor and / or the manufacturer or an authorized representative.

4.2 Intended use

The machinery may solely be used in (glass) horticulture and with the simultaneous use of a suitable collection device for the processed material. The functionality of the machine, which falls under its intended use, is described in chapter 5 of this manual. Any other use excludes the manufacturer from any responsibility.

Normal use implies compliance with the operating, maintenance and repair conditions as prescribed by the manufacturer. The machinery may only be operated, maintained and repaired by persons who are familiar with it and who are familiar with the hazards. To avoid accidents, you must also adhere to all safety, health and hygiene regulations.

This machine is not suitable for use in areas with a potentially explosive atmosphere.

4.3 Not-recommended use or reasonably foreseeable misuse

Following operations are considered as not-recommended use or reasonably foreseeable misuse:


- Using the machine while it shows damage and / or wear;
- Intervening in the inlet openings or other moving parts without prior shutdown of these parts. The operation of the machinery does not allow complete guarding of moving parts of the inlet opening.

Residual risks are identified with warning labels and the machinery is equipped with emergency stops at critical locations;

- Working with the machinery without all safety devices in place and enabled;
- Operation, maintenance and repair of the machinery by untrained and unqualified persons;
- Locking the control levers or switches to keep the machine continuously in operation. The control levers may only be operated with human muscle power and may under no circumstances be locked;
- Changing the operating set pressures of the hydraulic system without prior consent of the manufacturer;
- Inadequate maintenance / cleaning of the machinery after use;
- Use the machinery as a stepping stone to reach other locations. Climbing onto the machinery can potentially lead to unintentional activation of moving parts;
- Inappropriate transport / relocation of the machinery;
- Any other use that is not described in this manual.

4.4 Marking conventions

Every topic in this instruction manual that deals with safety (requirements), is preceded by the following warning label:

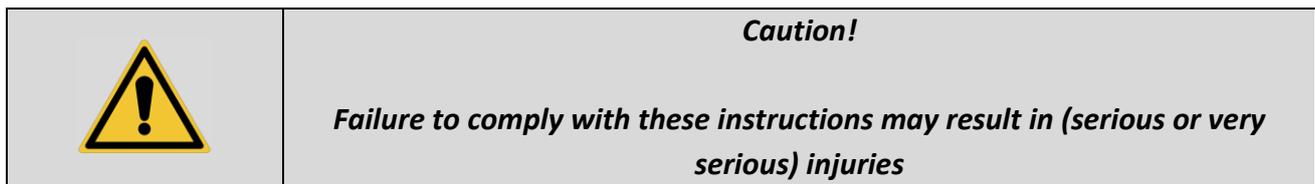

4.5 Liability and warranty

In no way may be waived of the abovementioned intended use without written consent of the manufacturer. Any deviation from the intended use will result in the expiration of any product liability and warranty by the manufacturer. The same applies in case of not-recommended use or reasonably foreseeable misuse.

Making changes to the product without preliminary written consent of the manufacturer is not permitted. This will also result in the expiration of the product liability and responsibility of the manufacturer. Any warranty claims from possible resulting damage will also expire. Furthermore this can have an adverse effect on the safety of the machinery.

5. Machinery assembly and characteristics

5.1 General description

The Big Chopper is designed for use in (glass) horticulture and for shredding vegetable crops such as paprikas, tomatoes, aubergines, cucumbers ... and soft fruit such as raspberries and strawberries. The machine must always be used simultaneously with a suitable bunker container and a disposal container for the transport of the processed material.

Depending on the required capacity, the machine is available in several capacities. For peppers and aubergines, the capacity can vary from 5,000m² to 10,000m² per hour and for tomato plants from 7,000m² to 12,000m² per hour.

The machine is basically operated by 2 persons. A third person operates a forklift truck with a disposal container in order to empty the bunker container and remove the shredded material.

5.2 Description of the operation of the constituent parts


The machine consists of the machinery frame, the diesel engine with the transmission parts to drive the chopper rotor and hydraulic pump, the discharge pipe, the tracks and the control systems. The hydraulic pump drives the hydraulic motors of the moving parts for processing, such as the canvas sliding plate, the canvas coiling unit and the feed cylinders.




An overview of the constituent parts is given in chapter 5.3.


Unbounded, the crop is transported by the ground canvas to the rotating feed cylinders and chopper rotor, while the canvas coiling unit simultaneously coils the ground canvas. The crop is shredded with the chopper rotor. The shredded crop is temporary collected in the bunker container via the discharge pipe of the chopper. When the bunker container is full, it is emptied with the bunker conveyer into a suitable disposal container that is transported with a forklift, and then removed.

The machine is powered by a John Deere PowerTech 6.8L Diesel motor (Tier 3/Stage III A).

5.3 Components and naming

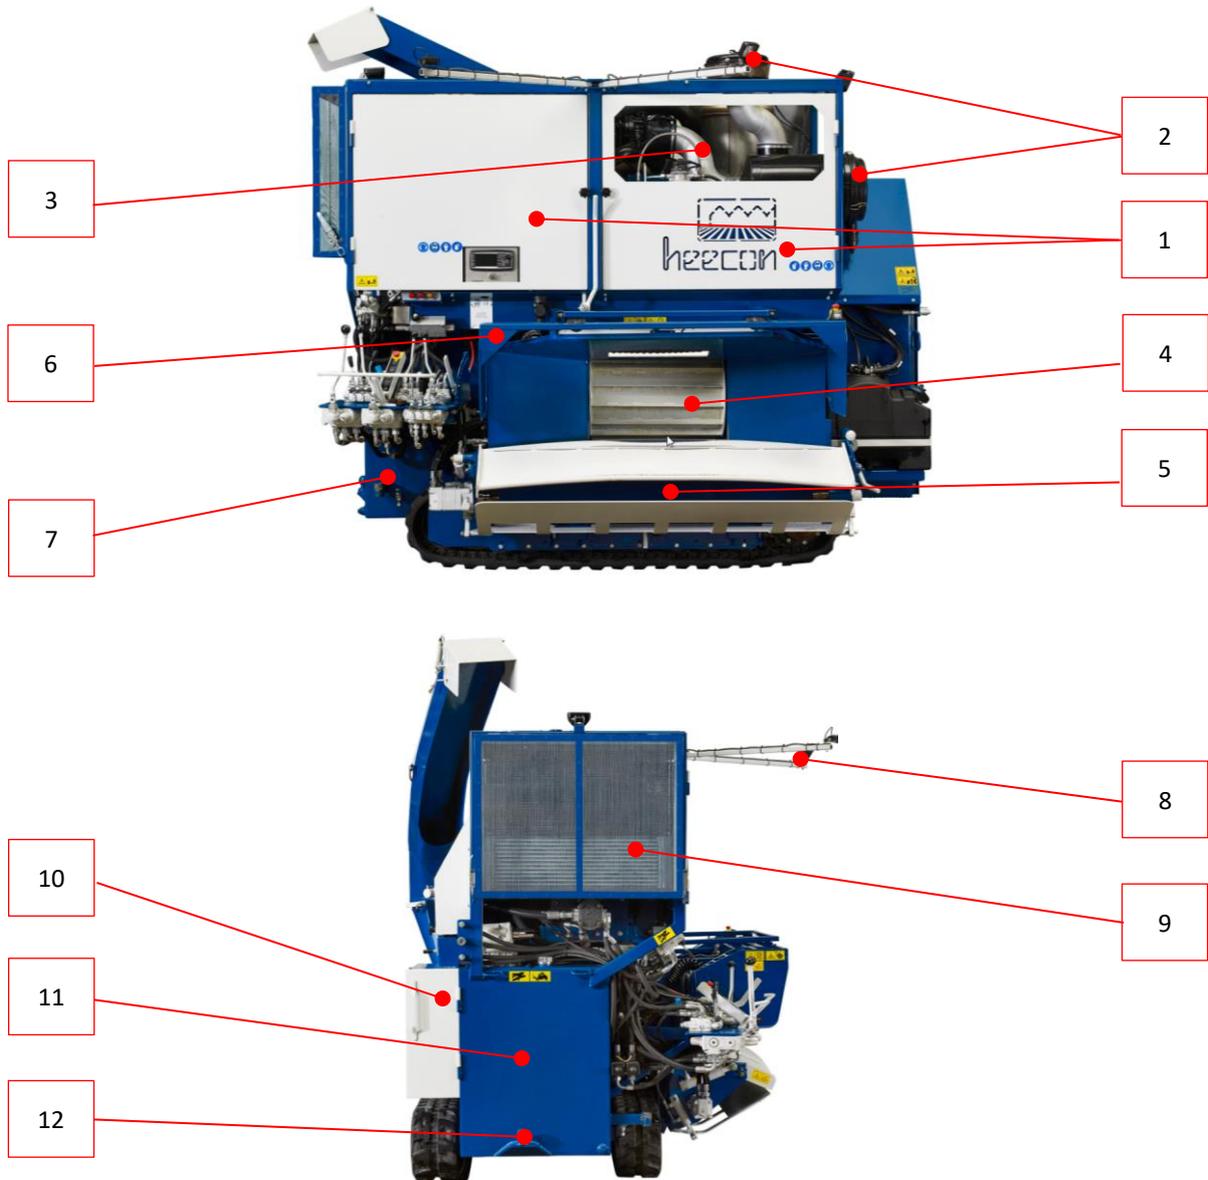

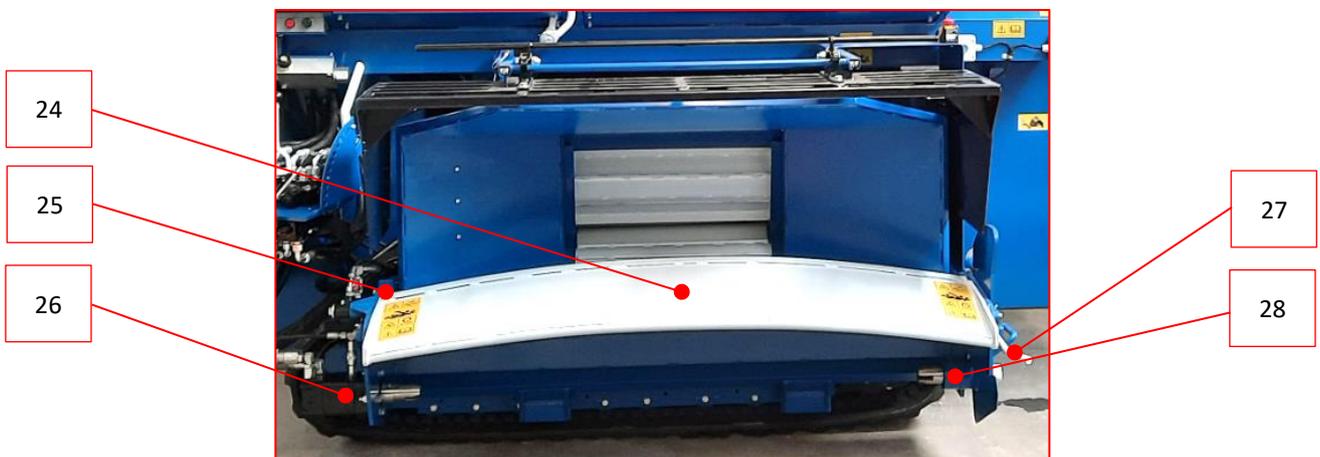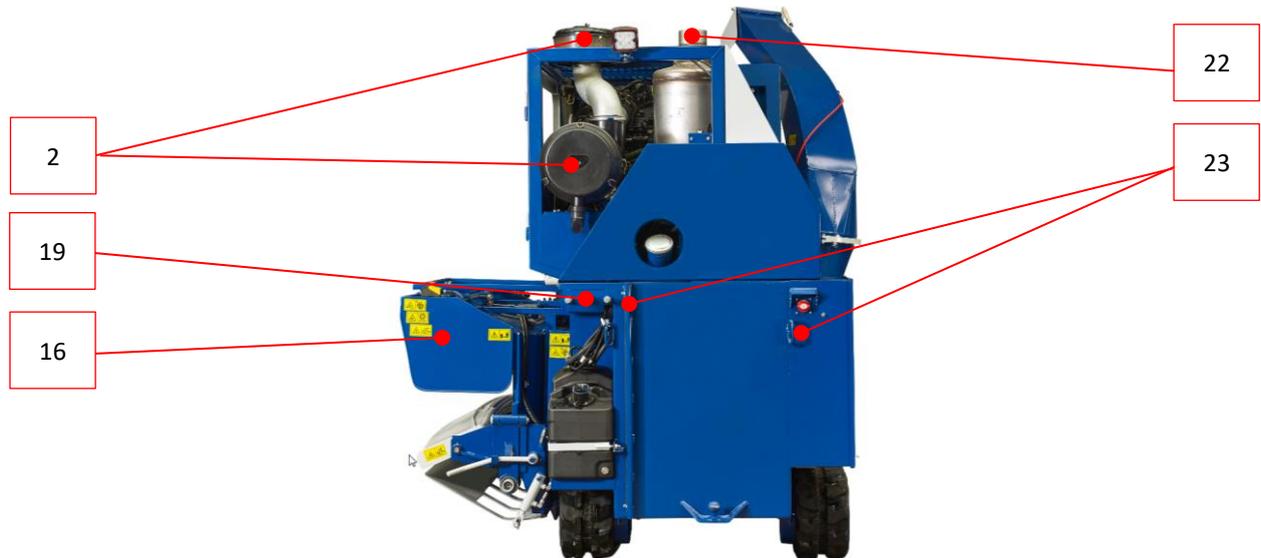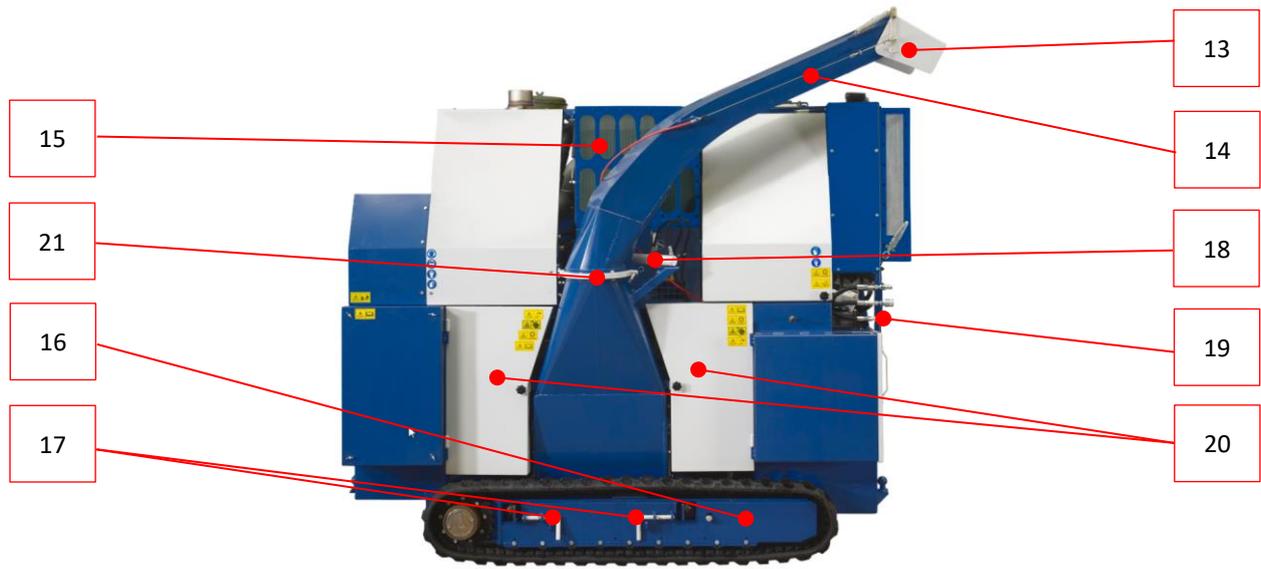


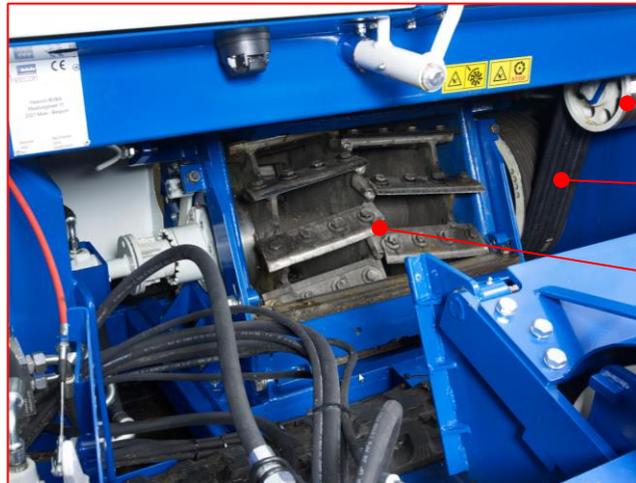

30

29

31

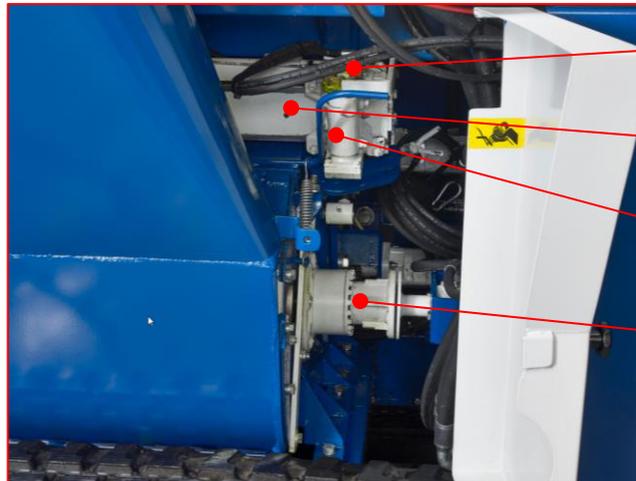

33

34

35

32

36



- | | |
|---|---|
| 1 | Movable guards diesel engine John Deere |
| 2 | Air filters diesel engine |
| 3 | Diesel engine John Deere |
| 4 | Feed unit with feed cylinders |


5	Canvas coiling unit (zie 24 t.e.m. 28)
6	Movable guard above canvas coiling unit / feed unit
7	Hydraulic oil tank with hydraulic filter
8	Lighting device
9	Cooling radiator diesel engine with fan
10	Storage cabinet auxiliary material
11	Diesel fuel tank
12	Towbar to hook up bunker container (left and right side)
13	Adjustable exhaust flap discharge pipe
14	Discharge pipe
15	Cooling radiator hydraulic oil
16	Track
17	Locking device extendable canvas roll-up and feed unit
18	Hydraulic cylinder for positioning discharge pipe
19	Hydraulic couplings bunker container
20	Movable guards chopper rotor drive
21	Clamp with locking device discharge pipe
22	Exhaust pipe diesel engine
23	Lashing hooks for transport
24	Canvas sliding plate
25	Sliding cylinder canvas coiling unit
26	Hydraulic motor canvas coiling unit with fixed adapter
27	Locking / unlocking lever movable adapter coiling unit to attach and detach canvas tubes
28	Movable adaptor to attach and detach canvas tubes
29	V-belt transmission chopper rotor
30	Tensioning system V-belts
31	Chopper rotor with cutting blades
32	Clutch hydraulic motor sharpening unit with chopper rotor
33	Height control system sharpening stone
34	Rail sharpening stone container (to move left and right)
35	Sharpening stone with container
36	Rear visibility mirror during transfer

5.4 Bedieningssystemen




The operating levers may only be operated with human muscle power and may under no circumstances be locked by any other means.

5.4.1 Control systems main control panel

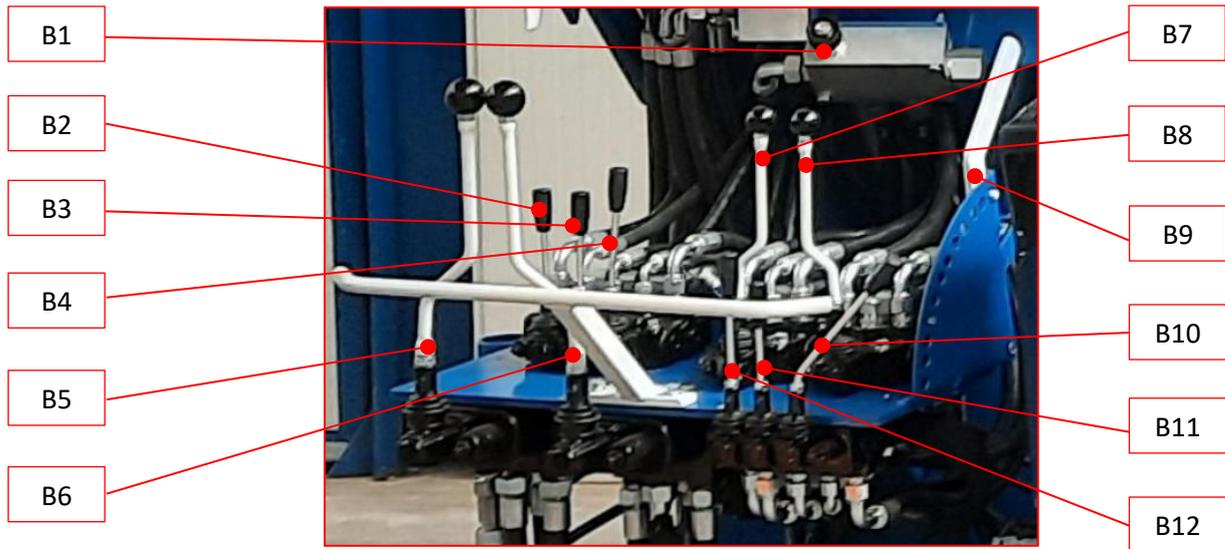

B1	<p>Control valve feed unit speed Turning control valve counter clockwise = decreasing feed unit speed Turning control valve clockwise = increasing feed unit speed</p>
B2	<p>Control valve sharpening cutting blades chopper rotor Lever control valve forward = reverse rotation chopper rotor Lever control valve backward = no function</p>
B3	<p>Control valve extend/retract feed unit Lever control valve forward = retracting feed unit Lever control valve backward = extending feed unit</p>
B4	<p>Control valve discharge pipe Lever control valve forward = discharge pipe moves away from machinery Lever control valve backward = discharge pipe moves towards machinery</p>
B5	<p>Control valve feed cylinders feed unit Lever control valve forward = feeding Lever control valve backward = exporting</p>
B6	<p>Control valve canvas coiling unit winding and unwinding Lever control valve forward = winding / coiling Lever control valve backward = unwinding</p>
B7	<p>Control valve steering system rear tracks Lever control valve forward = track rotates forward Lever control valve backward = track rotates backwards</p>
B8	<p>Control valve steering system front track Lever control valve forward = track rotates forward Lever control valve backward = track rotates backwards</p>

B9	<p>Control lever blowing distance discharge pipe</p> <p>Lever forward = flap moves downwards Lever backward = flap moves upwards</p>
B10	<p>Control valve opening / closing canvas coiling unit</p> <p>Lever control valve forward = canvas sliding plate closes Lever control valve backward = canvas sliding plate opens</p>
B11	<p>Control valve height control bunker container</p> <p>Lever control valve forward = bunker container moves upwards Lever control valve backward = bunker container moves downwards</p>
B12	<p>Control valve discharge conveyor bunker container</p> <p>Lever control valve forward = conveyor bunker container rotates forward (clockwise) + outlet hatch opens Lever control valve backward = conveyor bunker container stops rotating + outlet hatch closes</p>

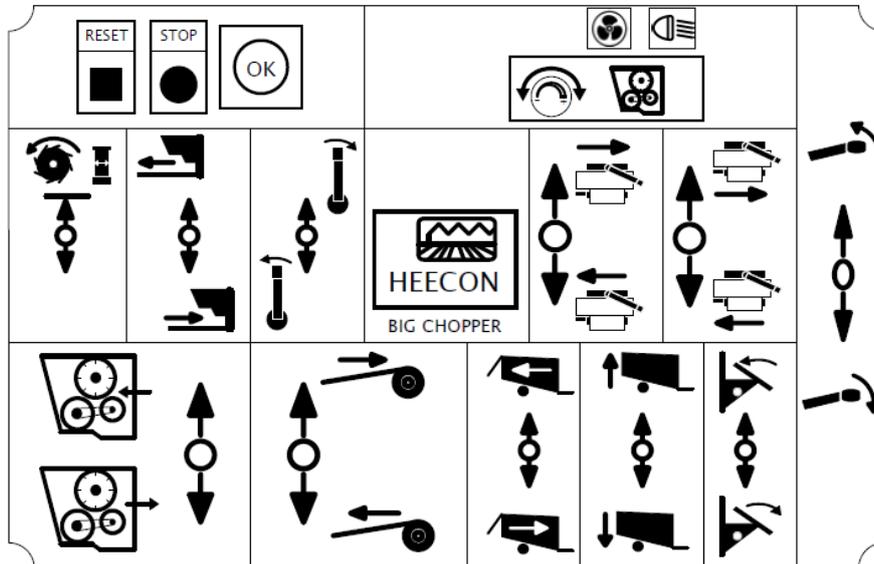

5.4.2 Other control systems



B13	<p>Emergency stop (#4) – #2 at front side / #2 at rear side</p> <p><i>Important note:</i> An emergency stop only stops the hydraulically driven moving parts of the feed unit, the coiling unit and the bunker container. The chopper rotor will not be stopped. The chopper rotor can be stopped by ungearing the clutch with (B23) or stopping the engine with (B17).</p>
-----	--

B14	Reset switch emergency stop / safety interlocks movable guards engine
-----	---




B15	Display engine data (see instruction manual engine)
B16	Engine speed control Switch to the right = rpm increase Switch to the left = rpm decrease Press the switch = idling
B17	Ignition switch engine Key to the right = engine on Key to the left = engine off




B18	Main switch engine <i>Important note:</i> <i>When the switch is in the 'off' position, the red cover can be removed to prevent unintentional re-start.</i>
-----	---





B19	Indicator light two-hand control device The indicator lamp will light up when the two-hand control device (B26) is activated and serves as a release for the operator to close the canvas coiling unit.
B20	On/off switch for lighting Pull the switch out = lights on Push the switch back = lights off
B21	On/off switch fan cooling radiator hydraulic oil Pull the switch out = fan on Push the switch back = fan off

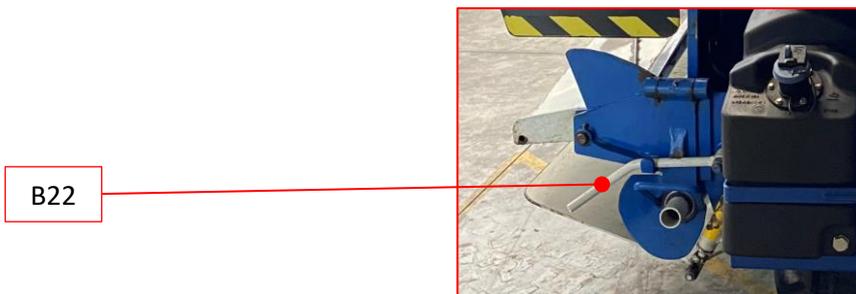

B22	Locking / unlocking lever movable adapter coiling unit to attach and detach canvas tubes Lever up = adapter is unlocked Lever down = adapter is locked
-----	---

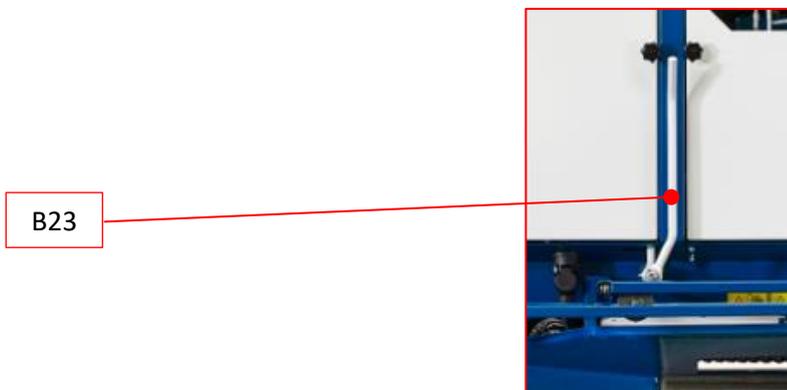

B23	Clutch lever chopper rotor Pull the lever to the left = clutch geared Pull the lever to the right = clutch ungeared
-----	--

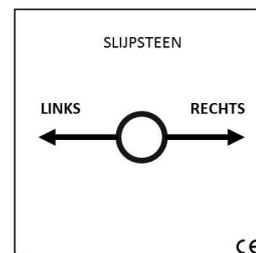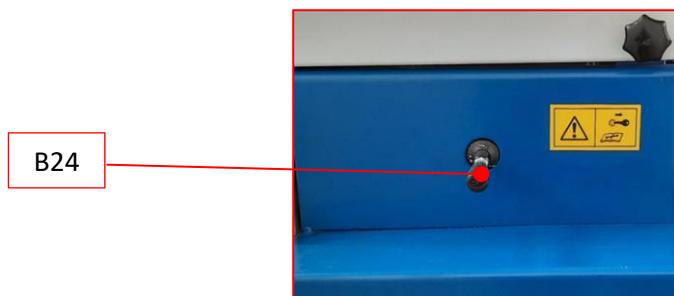

B24

Control valve sharpening cutting blades chopper rotor

With this control valve the sharpening stone can be moved from left to right

B25



B25

Pressure switch (hold to run) for reverse rotating of the canvas coiling unit (with opened canvas sliding plate)

With this pressure switch ("hold to run") the 2nd operator can turn the canvas coiling unit back (while the canvas sliding plate is open).

B26



B26

Two-hand control device to close canvas coiling unit

This two-hand control device must be activated by the 2nd operator before the canvas coiling unit can be closed again after opening. Indicator light (**B19**) will light up when the reset switches are pressed and serves as a release for the operator to close the canvas coiling unit.

B27



B27

Displacement Indicator Light (# 2)

The indicator lights illuminate when the machine is being moved, along with an audible signal.

5.5 Characteristics drive / power supply

Electrical:

The safety circuit (emergency stops, safety switch (s)) works on battery voltage of the motor. (alternator)

- 24 V (battery voltage)

Hydraulic:

- Working pressure: 170 bar
- Maximum pressure: 200 bar

6. Safety

6.1 Safety signs

6.1.1 Meaning

Below warning labels are applied to the machine:

	<p>Caution! Carefully read the instruction manual before using the machine</p>
	<p>Caution crushing hazard! Do not stand between the machine and other objects</p>
	<p>Caution! Keep at a safe distance from the machine</p>
	<p>Caution objects under the influence of gravity! Do not stand underneath moving parts of the machine</p>
	<p>Caution cutting hazard! Presence of rotating parts/cutting blades under the guard</p>
	<p>Caution moving / rotating parts! Wait for the machine to stop completely before intervening</p>
	<p>Caution rotating parts! Winding hazard</p>
	<p>Caution fire hazard! No open fire/flame near hydraulic/fuel hoses</p>
	<p>Caution hydraulic oil under pressure! Risk of serious injury from penetration of skin</p>
	<p>Caution! Avoid unintentional start-up of the machine. Read the operating instructions and remove the key from the ignition switch before carrying out any maintenance or repair work.</p>
	<p>Caution hot surfaces! Burning hazard</p>

	<i>Wearing safety shoes is mandatory</i>
	<i>Wearing dust mask is mandatory (in case of dust formation)</i>
	<i>Wearing hearing protection is mandatory</i>
	<i>Wearing eye protection is mandatory</i>

6.1.2 Location

	<ul style="list-style-type: none"> • <i>Control panel</i> • <i>Movable guards</i> • <i>Guard feed unit / chopper rotor</i>
	<ul style="list-style-type: none"> • <i>Frontside (next to control panel)</i> • <i>Backside</i> • <i>Left and right side (next to towbar bunker container)</i>
	<ul style="list-style-type: none"> • <i>Frontside (next to control panel)</i> • <i>Discharge pipe</i> • <i>Backside</i> • <i>Left and right side (next to towbar bunker container)</i>
	<ul style="list-style-type: none"> • <i>Discharge pipe</i>
	<ul style="list-style-type: none"> • <i>Guard feed unit / chopper rotor</i>
	<ul style="list-style-type: none"> • <i>Guard feed unit / chopper rotor</i> • <i>Canvas coiling unit</i> • <i>Moving parts engine</i>
	<ul style="list-style-type: none"> • <i>Canvas coiling unit</i> • <i>Left and right side canvas coiling unit</i>

	<ul style="list-style-type: none"> • Fuel tank
	<ul style="list-style-type: none"> • Hydraulic components
	<ul style="list-style-type: none"> • Control panel • Movable guards • Guard feed unit / chopper rotor
	<ul style="list-style-type: none"> • Engine • Hydraulic cooler
	<ul style="list-style-type: none"> • Movable guard front side
	<ul style="list-style-type: none"> • Movable guard front side
	<ul style="list-style-type: none"> • Movable guard front side
	<ul style="list-style-type: none"> • Movable guard front side

6.2 Safety instructions

6.2.1 General safety instructions

	<p><i>In addition to the instructions in this manual, always comply with the general safety instructions to prevent accidents at the workplace.</i></p>
	<p><i>This machine may only be operated by authorized persons who:</i></p> <ul style="list-style-type: none"> • Are at least 18 years of age • Do not use medicines that can affect their reaction time /responsiveness • Are fully informed about and have understood the operation and control of the machine.
	<p><i>Before using the machine, a proper knowledge and application of the operating and safety instructions is strictly necessary. Familiarize yourself with the control levers and their operation before commencing the operation.</i></p>

	<p><i>Always ensure you are familiar with the meaning of the warning labels before start working with the machine. Apply new warning labels in case of damage or removal. If necessary, you can obtain these from the manufacturer.</i></p>
	<p><i>Never leave the machine unattended without first removing the key from the ignition switch.</i></p>
	<p><i>Do not use the machine in case of any damage or other deficiencies. Any damage or deficiencies must be repaired immediately.</i></p>
	<p><i>Never change the machine settings without written consent from the manufacturer. Always work with the prescribed machinery settings.</i></p>
	<p><i>The control levers may only be operated with human muscle power and may under no circumstances be locked by any other means.</i></p>

6.2.2 Electrical

	<p><i>Avoid direct contact of electrical parts with water jet or excessive moisture.</i></p>
	<p><i>Never use the machine if electrical parts are accessible (damage). Immediately replace loose or damaged electrical cables.</i></p>

6.2.3 Mechanical

	<p><i>Hazardous and moving parts of this machine are protected as much as possible by guards or other protection systems. However, due to the functionality of the machine, it is not possible to completely guard all moving parts. So always keep attention and be careful when operating the machine and always follow the safety instructions below!</i></p>
	<p><i>NEVER reach into the feed openings or other moving parts of the machine. This may result in serious or very serious injuries. Pay attention and be concentrated when operating the machine to avoid contact with rotating and moving parts. Use the emergency stop in case of emergency.</i></p>
	<p><i>Wear suitable and tight-fitting work clothes (preferably with short sleeves). Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothing, jewelry and long hair can be caught in moving parts. Wearing a hair net is strongly recommended in case of long hair.</i></p>

	<p>Before using the machine, check that all safety devices are working properly. Under no circumstances remove or disable safety devices or guards.</p>
	<p>Check the hydraulic hoses for damage before use. High-pressure fluids, such as hydraulic oil, can be released under high pressure, penetrate the skin and cause serious injury. In case such an accident happens, always consult a doctor immediately.</p>
	<p>During operation, only the operators (# 2) should be in the direct vicinity of the machine. Any other person must keep a larger safety distance.</p>
	<p>Always ensure a complete overview of the machine is maintained during movement and operation. The machine is equipped with 2 displacement indicator lights and an audible signal on the top to indicate movements to third parties. The operator can also keep an eye on the rear of the machine using the mirror.</p>
	<p>When moving the machine or (interchangeable) equipment, make sure that the area is clear of obstacles and the presence of persons.</p>
	<p>Only use the machine in combination with a suitable bunker container / disposal container. Under no circumstances should anyone be within the blowing range of the machine's discharge pipe.</p>
	<p>Always wear the following Personal Protective Equipment when working with the machine:</p>
	<ul style="list-style-type: none"> • Suitable safety shoes
	<ul style="list-style-type: none"> • Tightly fitting safety glasses or goggles
	<ul style="list-style-type: none"> • Hearing protection (+85dB(A))
	<ul style="list-style-type: none"> • Dust mask (P3) in case of dust formation
	<p>Never exceed the prescribed maximum operating pressures of the machine.</p> <ul style="list-style-type: none"> • The hydraulic pressure may not exceed 200 bar. <p>Exceeding the maximum working pressure can cause damage to machine parts and consequently serious injuries.</p>
	<p>Only install or remove the canvas when the movable guard above the feed unit and the canvas coiling unit are fully open (the control of this feed unit is then disabled). The chopper rotor will continue to rotate in this case.</p>

	<p><i>Pay attention that only crops get into the machine. Remove all metal objects from the crop material before attaching the canvas or feeding the crop into the machine.</i></p>
	<p><i>During operation nobody is allowed on the canvas or crop material.</i></p>
	<p><i>Do not use the machine on a steeply sloping surfaces to avoid tilting.</i></p>

6.2.4 Other

	<p><i>Provide adequate ambient lighting to ensure optimal visibility of moving parts.</i></p>
	<p><i>Clean the machine thoroughly after use. Disinfect the machine if necessary.</i></p>
	<p><i>Always consult the Safety Data Sheet of the chemical products used for cleaning and maintenance of the machine. Carefully follow all instructions for the safe use of these chemicals.</i></p>
	<p><i>Avoid smoking or open flames in the vicinity of combustible or flammable products, e.g. during filling of hydraulic oil / diesel.</i></p>
	<p><i>Always work with the machine in well-ventilated areas. The exhaust gases from diesel engines are toxic and can cause poisoning or suffocation.</i></p>
	<p><i>Working in conditions of high temperatures / humidity can lead to dehydration, loss of attention, fatigue, etc. Timely take breaks and drink plenty of fluids.</i></p>
	<p><i>Always wear work gloves in case of exposure to hot oil hoses, for connecting and disconnecting canvas tubes and for inserting the crop / substrates. Only use undamaged canvases and always ensure correct positioning of the crops on the canvases (see 8.2 for clarification of this procedure).</i></p>
	<p><i>The machine produces noise levels that are destructive to the hearing organ. Long-term noise exposure can lead to hearing loss or deafness. Use appropriate noise protection devices such as earmuffs or earplugs.</i> <i>A-weighted level of the sound emitted by the machine (measured during machine operation): Lwa = 100 dB (A) (measured during machine operation)</i></p>



Ensure that the machine is properly secured during transport to prevent unwanted movement in the truck trailer during transport.

6.2.5 Safety instructions during maintenance, cleaning and repair



After each use and before cleaning, maintenance or repair work, switch off the machine and remove the key from the ignition switch to prevent accidental activation of the engine. Always follow the prescribed energy isolation procedures of the client.



Under no circumstances open or remove the guards while the machine is in operation. Correctly reinstall all guards and other safety devices after cleaning, maintenance or repair.



The machine may only be repaired by qualified and skilled personnel. Repairs / modifications must always be executed in consultation with the manufacturer. Only use accessories or spare parts approved by the manufacturer and described in this manual.



It is not permitted to make any adjustments or changes to the machine without prior consent of the manufacturer.



Avoid spills of chemical products to prevent environmental contamination. Always use suitable containers. Dispose all waste according legal environmental regulations.



Wear suitable cutting gloves when handling / servicing sharp machine parts.



Always wait with manipulations (maintenance) on hot systems until they have sufficiently cooled down to avoid the risk of burns. During the exhaust filter cleaning, the engine and combustion gases can reach temperatures that are high enough to cause severe burns. Also avoid inhaling the combustion gases. For more information, please refer to the engine instruction manual.



Always comply with the safety precautions of the battery. Always use electrically insulated tools and always wear chemical resistant protective gloves and appropriate eye protection when working with the battery. The acid in the battery electrolyte can cause burns to eyes and skin.

6.3 Safety provisions

Diesel engine safety devices:

The diesel engine is equipped with multiple safety devices. For more information, see the included John Deere engine owner's manual.

Fixed guards:

All moving parts are protected to the utmost with fixed and movable guards to prevent injuries. The fixed guards can only be loosened and removed with suitable tools. Fixed guards must be reinstalled appropriately when the machine is put back into operation.

Emergency stops:

When an emergency stop is pressed during operation, all hydraulically driven functions of the machine stop. The machine can only be restarted with the operating switches after unlocking the emergency stops and pressing the reset switch **(B14)**. However, the chopper rotor will continue to rotate when the emergency stop is pressed. It can be stopped by ungearing the clutch with **(B23)** or by switching off the motor completely with **(B17)**.

Safety switches on movable guards:

All movable guards are equipped with safety switches in order to stop dangerous moving parts of the machinery, including the engine, if these guards are opened.

This does not apply to the movable guard above the feed unit / canvas coiling unit **(6)**. Opening this cover will only stop the feed unit and the fabric rewinding unit. After closing this cover, the input can be restarted immediately without pressing the reset switch **(B14)**.

Overpressure protection:

The hydraulic equipment is by standard protected against overpressure (200 bar).

7. Instructions for assembly, installation and connection

Important!	<i>For the operation and operation of the bunker container, please also refer to the instruction manual of this bunker container.</i>
-------------------	---


The following assemblies and connections have to be made:

7.1 Assembly bunker container

	<ul style="list-style-type: none"> Position the bunker container so that the ball coupling can be connected with to the tow bar (12) of the machine.
<ul style="list-style-type: none"> Stop the machine according to 8.1.2 until the engine has come to a complete stop. 	
 	<ul style="list-style-type: none"> Connect the hydraulic hoses of the bunker container on the left or right side of the machine with the quick couplers (19). There are 3 couplings provided: <ul style="list-style-type: none"> 1 coupling for the height control of the bunker container 2 couplings for the conveyor and the outlet hatch of the bunker container (if bunker container is equipped with an outlet hatch) <p>Note:</p> <p>If coupling is difficult, the remaining pressure in the hoses can be dissipated by moving the corresponding control valve (B11 / B12) forwards and backwards.</p>
	<ul style="list-style-type: none"> Put the position of the valve handle under the bunker container at a right angle to the pipe. Always put the bunker wagon in the highest possible position with (B11) at the start of the work. (The machine must be started for this on beforehand: see 8.1.1) (this is only applicable if bunker truck is adjustable in height)

7.2 Disassembly bunker container

- Stop the machine according to 8.1.2.

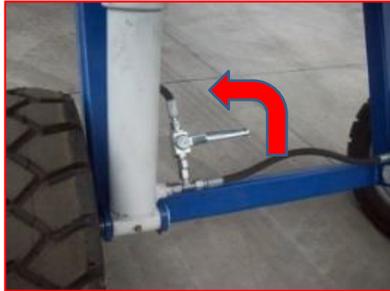

- Adjust the position of the valve handle under the bunker container parallel to the pipe. The bunker wagon descends to its lowest position. (only applicable if bunker truck adjustable in height)



- Disconnect the hydraulic hoses of the bunker container from the quick couplers **(19)**.

Note:

If disconnection is difficult, the remaining pressure in the hoses can be dissipated by moving the corresponding control valve **(B11 / B12)** forwards and backwards.



8. Operating and control instructions

8.1 General

8.1.1 Starting the machine

Important!	Consult the engine instruction manual for more information regarding the starting and normal operation of the engine.
-------------------	--

	<ul style="list-style-type: none"> • Ensure that the clutch of the chopper rotor is not engaged. To do this, pull lever (B23) to the right.
	<ul style="list-style-type: none"> • Switch on the engine's main switch (B18)
	<ul style="list-style-type: none"> • Start the engine by turning the key of the ignition switch (B17) to the right (wait for a moment after the first stroke to allow the engine to preheat sufficiently) • Run the engine at 1200rpm until it is sufficiently warmed up (85-97°C). • Adjust the engine speed. The speed can be adjusted in 2 ways: <ul style="list-style-type: none"> • Adjust the speed of the motor with (B16) • Adjust the speed via fixed speeds as shown on the display (B15)

8.1.2 Stopping the machine

Important!	Consult the engine instruction manual for more information regarding the stopping and normal operation of the engine.
-------------------	--

	<ul style="list-style-type: none"> Disengage the clutch of the chopper rotor. To do this, pull lever (B23) to the right.
	<ul style="list-style-type: none"> Stop the engine by turning the key of the ignition switch (B17) to the left. Remove the key to protect against unintentional start-up.
	<ul style="list-style-type: none"> Switch off the engine's main switch (B18). If necessary, remove the red cover to prevent unintentional start-up.

8.2 Working with canvases

8.2.1 Unwinding the ground canvas

	<ul style="list-style-type: none"> Make sure that the canvas is always unrolled in the correct way. The canvases must always leave the tube from the top. Roll out the canvas as straight and as centrally as possible. The canvas should be open over its entire width. Always use undamaged or correctly repaired canvases!
---	---

8.2.2 Placing the crops on the canvas




Besides the crops themselves, remove all other materials from the canvas before attaching it to the canvas coiling unit. Metals and/or other objects can be dangerous projectiles if they enter the chopper.



The canvas should not contain any folds or tears, to avoid dangerous manual interventions when being coiled. Canvases with folds or tears make coiling difficult, which can lead to manual pulling on the canvas while coiling. This has to be avoided because in these cases the risk present to be pulled into the machine.

- At the end of the row at least 1 meter of canvas should be kept free of crop, so that the canvas can be safely and easily held in place
- There must be sufficient canvas on the tube for a safe attachment of the tube to the machine. The metal tube must reach the other side of the path without detaching from the canvas.
- Put the crops on the canvas so that they are equally distributed in the middle of the longitudinal direction of the canvas. The canvas should be free of crop for 10 cm on both sides. The correct positioning of the crop on the canvas is indicated on the drawing below. Avoid accumulated crop material. The above method of installation guarantees that the machine will function properly and that the canvases will last for a long time.

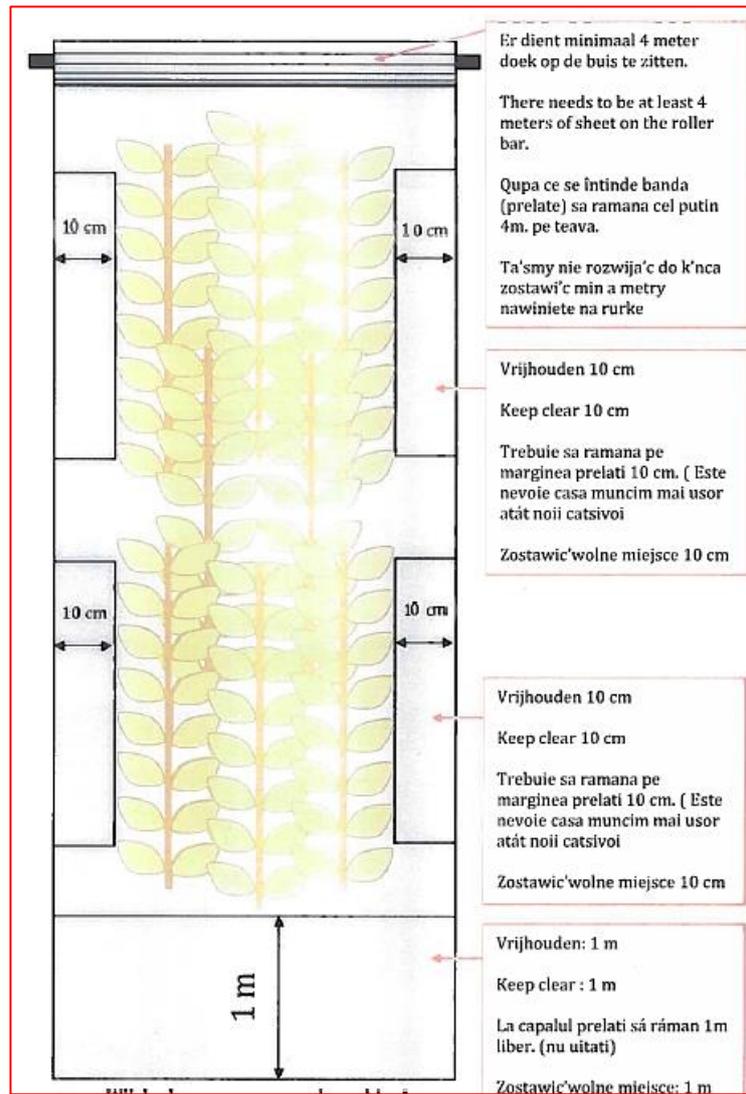

8.2.3 Attaching the canvas to the coiling unit



Before attaching the canvas, the coiling unit must be completely open, so that the rotating parts of the feed and coiling unit cannot be started during the attachment of the canvas.

- Assemble the bunker container as described in 7.1.
- Start the machine according to 8.1.1



- Engage the clutch of the chopper rotor. To do this, pull lever **(B23)** to the left.



- Open the movable guard above the canvas coiling unit **(6)** by pushing the lever backwards.




- Open the canvas coiling unit with **(B10)**. The canvas sliding plate **(24)** is positioned vertically. If the canvas sliding plate is opened, the feed unit and the canvas coiling unit cannot be started.



- Unlock the movable adapter **(28)** with **(B22)** to attach the canvas tube. Pull the movable adapter (gaff) **(28)** of the canvas coiling unit backwards.
- If a tube has already been placed in the machine, this tube with the coiled canvas will fall on the ground.



- Slide the metal tube of the canvas over the fixed adapter of the canvas coiling unit **(26)**.

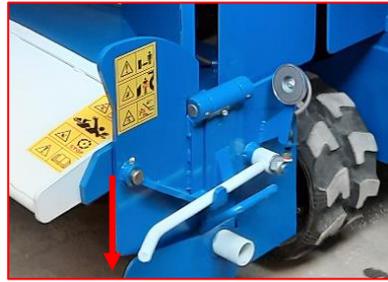

- Push the movable adapter **(28)** back in and close the locking device **(B22)** again.



- Press the two-hand control **(B26)** (2nd operator). These switches must be energized simultaneously by the 2nd operator before the canvas coiling unit can be closed after opening the canvas coiling unit. Indicator light **(B19)** will light up when this reset switches are pressed and serves as a release for the operator to close the canvas coiling unit.
- Then close the canvas coiling unit with **(B10)**. The canvas sliding plate **(24)** is placed horizontally again.



- Close the movable guard above the canvas coiling unit **(6)** by pulling the lever back forward.



- The canvas coiling unit and the feed unit can now be started again.


8.2.4 Coiling the canvas and shredding




NEVER reach into the feed openings or other moving parts of the machine. This may result in serious or very serious injuries. Pay attention and be concentrated when operating the machine to avoid contact with rotating and moving parts. Use the emergency stop in case of emergency.



- Engage the clutch of the chopper rotor. To do this, pull lever **(B23)** to the left.
- Set the speed to 2350 rpm and then increase the speed of the engine with **(B16)**.

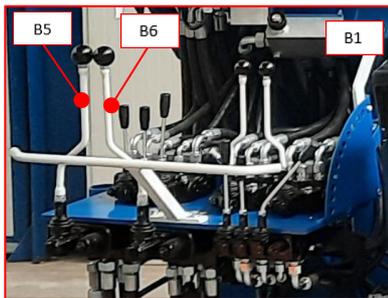

- The feed unit and the canvas coiling unit is operated by simultaneously actuating the control valves **(B5)** and **(B6)**. When the 2 valves **(B5)** and **(B6)** are pulled backwards, the feed cylinders move the crop material back out of the feed unit and the canvas unwinds. Pushing forward the control valves **(B5)** and **(B6)** inserts the plant material into the chopper by simultaneously winding the canvas in the coiling unit and rotating forward of the feed cylinders of the feed unit. This is the normal operation of the machine. Releasing these valves immediately stops the feed unit and canvas coiling unit.
- The speed of the feed unit can be controlled with the control valve **(B1)**.
 - Turning counter clockwise = decreases the feed unit speed
 - Turning clockwise = increases the feed unit speed

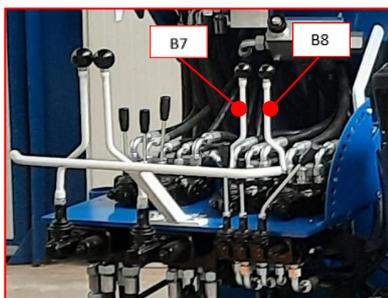

- Control valves **(B7)** and **(B8)** control the crawler tracks and therefore the position of the entire machine. With this you control the correct positioning of the canvas on the canvas sliding plate **(24)**.
- The machine can also be moved completely with these control valves.
- **(B7)** is for steering the rear track
 - Lever control valve forwards = track turns forward (clockwise)
 - Lever control valve backwards = track turns backwards (counterclockwise)
- **(B8)** is for steering the front track
 - Lever control valve forwards = track turns forward (clockwise)
 - Lever control valve backwards = track turns backwards (counterclockwise)
- During the movement of the machine, the indicator light **(B27)** will light up to warn of possible third parties. This is accompanied by an audible sound signal.
- Always check the rear of the machine before moving it using the mirror **(36)**.





- In case of a malfunction (e.g. blocked or folded canvas), the 2nd operator can rotate the canvas coiling unit backwards while the canvas coiling unit is open (see 8.2.3).
- This is done by means of the pressure switch **(B25)**.
- The operation must be done with caution to avoid trapping of limbs!

Important notice:

The capacity of the machine is partly determined by the machine operator, as well as by the nature of the crop (dry, fresh, weight, ...). The greatest capacity is achieved by an equal distribution of the crop material (avoid the accumulation of crops). The coiling speed of the canvas is determined by the amount of crop material placed on it. The insight of the machine operator is very important:

- Equal feed of the crop material increases the capacity, extends the life of the machine, ensures a safer way of working and reduces the risk of tears and unnecessary wear.
- Sharpening and adjusting the cutter blades regularly is very important. The point of time is mainly determined by foreign materials that do not belong in the chopper (metal objects, plastic, nylon, rock wool and other materials besides crop materials)

8.2.5 Pointing the discharge pipe





This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.



Only use the machine in combination with a suitable bunker container. Under no circumstances should anyone be within the blowing range of the machine's discharge pipe.



During operation, only the operators (# 2) should be in the direct vicinity of the machine. Any other person must keep a larger safety distance.

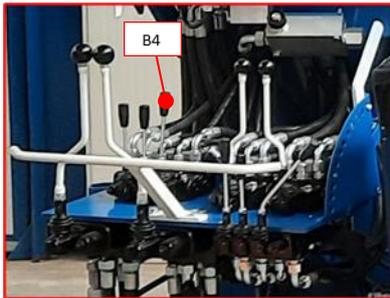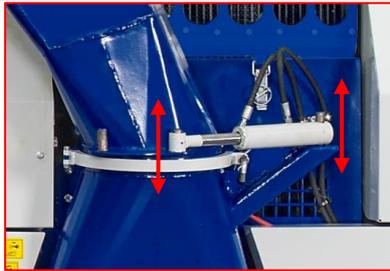

- The bunker container can be attached to both the left and right side of the machine. The blowing direction of the discharge pipe (14) is set depending on the side to which the bunker container is attached. This is done as follows:
 - Stop the machine according to 8.1.2
 - Lift the hydraulic cylinder (18) out of the mounting pins
 - Turn the discharge pipe to the side to which the bunker container is attached. To do this, loosen the fastening clamp slightly.
 - Slide the hydraulic cylinder (18) back into the mounting pins after changing the position. Then retighten the fastening clamp.
 - If the discharge pipe is pointing to the right, the hydraulic cylinder must be placed on the left side of the discharge pipe
 - If the discharge pipe is pointing to the left, the hydraulic cylinder must be placed on the right side of the discharge pipe
- Start the machine according to 8.1.1
- The correct blowing direction can then be set hydraulically with the control valve (B4).
 - Lever control valve forward = discharge pipe moves counterclockwise (away from machinery)
 - Lever control valve backward = discharge pipe moves clockwise (towards machinery)



- The blowing distance of the shredded material is determined by the position of the adjustable exhaust flap (13) of the discharge pipe (14).
- The adjustable exhaust flap (13) can be operated with operating lever (B9).


8.2.6 Setting and operation of the bunker container

Important!

For the operation and operation of the bunker container, please also refer to the instruction manual of this bunker container.

	<p><i>Only use the machine in combination with a suitable bunker container. Under no circumstances should anyone be within the blowing range of the machine's discharge pipe.</i></p>
	<p><i>During operation, only the operators (# 2) should be in the direct vicinity of the machine. Any other person must keep a larger safety distance.</i></p>
	<p><i>Always ensure that the blowing direction and blowing distance of the discharge pipe is correctly oriented towards the filling opening of the bunker container before starting the shredding process!</i></p>
	<p><i>Shredding must be temporarily stopped while emptying the bunker container!</i></p>


- For connecting the HEECON bunker container: see 7.1 and the instruction manual of the HEECON bunker container.

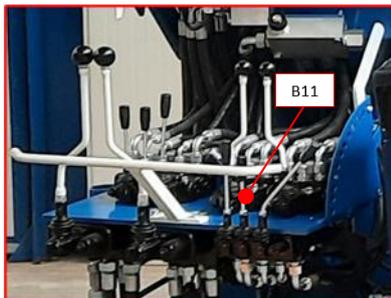

- Depending on the amount of material in the bunker container, the height of the bunker container can be adjusted relative to the outlet of the discharge pipe. This is done with control valve **(B11)**.
 - Lever control valve forward = bunker container moves upwards
 - Lever control valve backward = bunker container moves downwards
- Always put the bunker container in the highest possible position with **(B11)** at the start of the operation.
- In order to prevent the bunker container from descending under the influence of the weight during normal use, the hydraulic valve at the bottom of the bunker container must be placed at a right angle to the pipe. See the instructions in the instructions manual of the bunker container.



When the bunker container is almost full, it must be emptied to a disposal container for removal of the shredded material. This is done as follows:

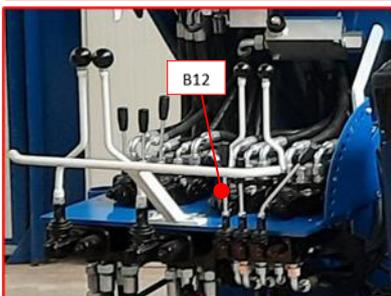

1. Stop the operation of the feed unit and the canvas coiling unit by releasing the control valves **(B5)** and **(B6)**
2. Position the disposal container with a suitable transportation device (forklift) under the closed bunker container.
3. Empty the bunker container by starting the conveyor chain, the outlet hatch of the bunker truck also opens. Operation is done with control valve **(B12)**.
 - Lever control valve forward = conveyor bunker container rotates forward (clockwise) + outlet hatch opens
 - Lever control valve backward = conveyor bunker container stops rotating + outlet hatch closes

The operator must ensure that the disposal container is not overloaded. See load diagram for means of transport.

When the bunker container is empty:

1. Stop the conveyer of the bunker container by returning control valve **(B12)** back to its normal position.
2. Move the disposal container away from the bunker container
3. Close the outlet hatch of the bunker container by pulling back the control valve **(B12)**

8.2.7 Detaching the canvas from the coiling unit

The method for removing the canvas is partly analog to the method for attaching the canvas as described in 8.2.3.

The following steps of 8.2.3 are followed again for detaching the canvas from the coiling unit:

- Open the movable guard above the canvas coiling unit **(6)** by pushing the lever backwards.
- Open the canvas coiling unit with **(B10)**. The canvas sliding plate **(24)** is positioned vertically. If the canvas sliding plate is opened, the feed unit and the canvas coiling unit cannot be started.
- Unlock the movable adapter **(28)** with **(B22)** to detach the canvas tube. Pull the movable adapter (gaff) **(28)** of the canvas coiling unit backwards.
- If a tube has been placed in the machine, this tube with the coiled canvas will fall on the ground.

9. Maintenance instructions



All maintenance, repair and cleaning operation must be carried out with the engine switched off, unless stated otherwise in this manual to enable certain functions. Always remove the key from the ignition switch to prevent accidental activation of the engine.

9.1 Emptying blocked discharge pipe



If the discharge pipe is blocked, first switch off the engine and remove the key from the ignition switch.



Only disconnect the discharge pipe after the machine has been completely switched off and the key removed from the ignition switch. Wait for the chopper rotor to come to a complete standstill. Please note that the rotation of the chopper rotor does not immediately stop at the moment the engine is switched off.



Be aware of the weight of both the metal and the crop debris. Therefore, be careful that the pipe does not fall because of the heavy weight. Remove the pipe with at least 2 people, so that 1 person can support the pipe during unscrewing.

- Stop the machine according to 8.1.2



- Unlock the bolt lock and remove the clamp (21) from the discharge pipe.

- Remove the discharge pipe (14)
- Remove the crop residues with a suitable tool. Wear cut-resistant protective gloves as protection against cuts.



- Put the discharge pipe (14) back in place and secure the clamp (21) of the discharge pipe. Lock the bolt lock again.

9.2 Sharpening the rotor cutting blades

	<p><i>Unscrew the guard of the sharpening unit only after the base machine has been completely turned off and the key removed from the ignition switch. Wait until the chopper rotor has come to a complete stop. Be aware that the rotation of the chopper rotor does not stop immediately after the motor is turned off.</i></p>
---	--

	<p><i>Be aware of the great danger from the moving and rotating parts during sharpening. Sharpening must be carried out with the guard closed. Never sharpen when you are alone and always with the utmost caution. Never reach into moving or rotating parts with your hands while sharpening, and never wear loose clothing!</i></p>
<p><i>Use the emergency stop in case of an emergency!</i></p>	

9.2.1 Start sharpening

- Stop the machine according to 8.1.2.




- Open the guard of the sharpening unit at the backside of the machine.




- Position the holes for the coupling bolts of the chopper rotor and the hydraulic motor of the sharpening unit so that all openings are just opposite to each other. Insert the 2 coupling bolts in the holes as shown in the picture on the right. Lock the coupling bolts with the locking pin.



- Open the protective cover of the chopper rotor with the blue lever so that the sharpening stone can move from left to right.

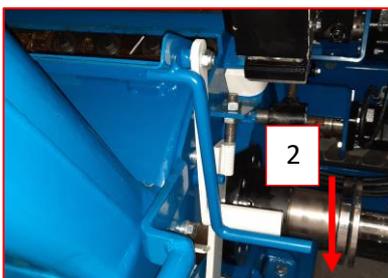

- To do this, first unlock this lever by lifting the white lever.

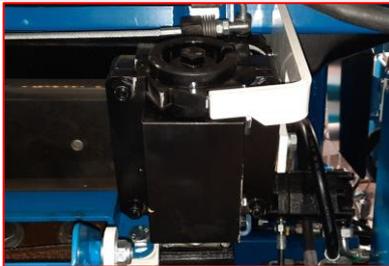


- The sharpening stone is already set at the correct height and the rotor cutting blades and the sharpening stone touch each other.



- Close the guard of the sharpening unit at backside of the machine.


- Start the machine according to 8.1.1. However, the clutch of the chopper rotor (**B23**) must not be engaged.

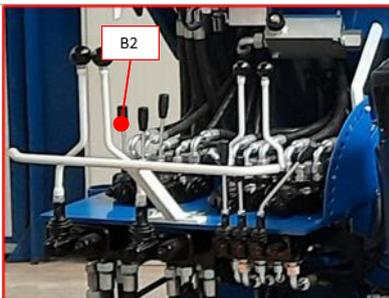


- Activate the sharpening process by pushing the lever of control valve (**B2**) forward. Then adjust the engine speed to 1500 rpm. This causes the chopper rotor to rotate in the opposite direction.




- Start sharpening by moving control valve (**B24**) left and right. This moves the sharpening stone from left to right.
- At the end points of the movement, the height adjustment of the sharpening stone will adjust itself. With a maximum left-right movement, the sharpening stone automatically clicks 1 click distance down.
- A complete sharpening cycle is approximately 5 to 6 full left - right movements. This of course depends on the condition of the cutting blades and the sharpening stone. (for a possible replacement of the grinding stone: contact the constructor)

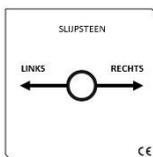

9.2.2 Stop sharpening

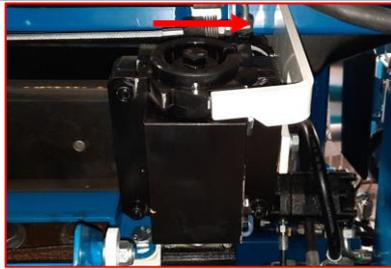


- Stop the movement of the sharpening stone with the control valve (**B24**) when the sharpening stone is back in its basic position on the far right.

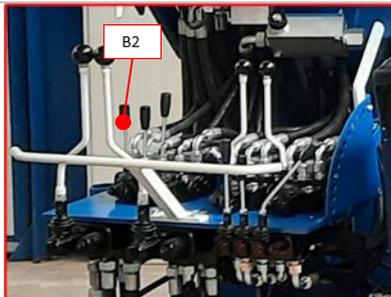

- Stop the sharpening process by placing the lever of control valve (**B2**) in its center position. This will stop the chopper rotor from rotating.

- Stop the machine according to 8.1.2. Remove the key from the ignition switch to protect against unintentional start of the engine.

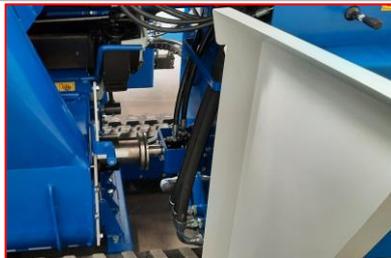

- Open the guard of the sharpening unit at backside of the machine again.



- Remove the 2 coupling bolts from the holes as indicated at the photo on the right.





- Close the protective cover of the chopper rotor with the blue lever.



- Close the guard of the sharpening unit at backside of the machine again.
- To reach the chopper rotor the feed unit must be extended (see: 9.3)

9.3 Extending and retracting feed unit




Beware of trapping of lower or upper limbs while extending and retracting the feed unit

9.3.1 Extending feed unit

Before servicing the chopper unit, the feed unit should be extended forward for accessibility. This is done as follows:

- Stop the machine according to 8.1.2. Remove the key from the ignition switch to protect against unintentional start of the engine.

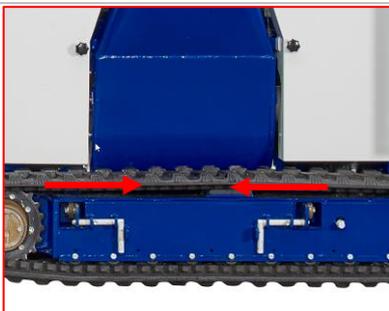


- Unlock the locking pins on the rear track and open them



- Disconnect the feed unit from the main machine by opening the clamps on the left and right side of the chopper rotor using the wrench.

- Start the machine according to 8.1.1.

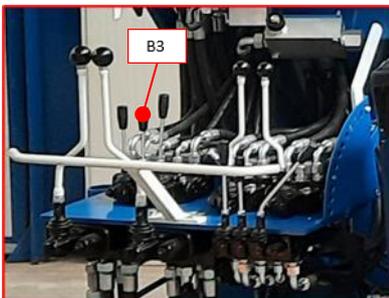


- Extend the feed unit forward with **(B3)**
 - Lever control valve forward = retracting feed unit
 - Lever control valve backwards = extending feed unit

9.3.2 Retracting feed unit


- Start the machine according to 8.1.1.




- Retract the feed unit backwards with **(B3)**
 - Lever control valve forward = retracting feed unit
 - Lever control valve backwards = extending feed unit

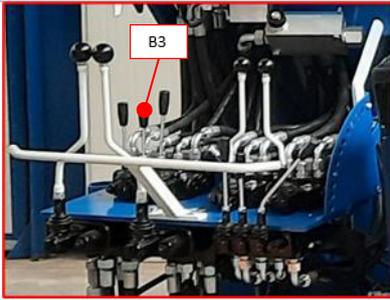

- Stop the machine according to 8.1.2. Remove the key from the ignition switch to protect against unintentional start of the engine.

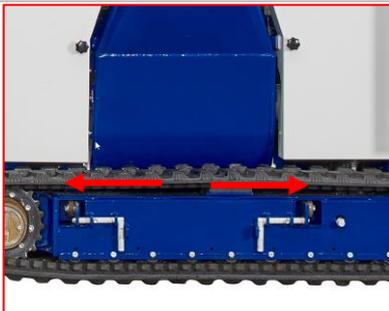

- Close the locking pins on the rear track and lock them again

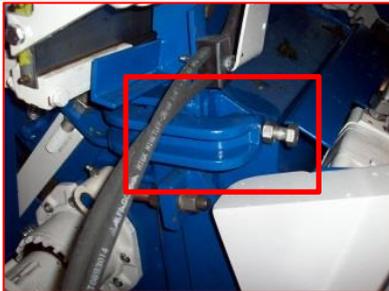

- Connect the feed unit back to the main machine by closing the clamps on the left and right side of the chopper rotor. Finger tighten the bolts using the wrench.



9.4 Adjusting the lower cutting blade of the chopper unit



This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.



Under no circumstances open or remove guards while the engine is running. Wait until the chopper rotor has come to a complete stop. Be aware that the rotation of the chopper rotor does not stop immediately after the motor is turned off. Replace all guards and other safety equipment properly after maintenance.




Always wear cut-resistant safety gloves while working nearby the cutting blades or other sharp installation parts.

- Extend the feed unit according to 9.3.1.
- Stop the machine according to 8.1.2. Remove the key from the ignition switch to protect against unintentional start of the engine.



- Disengage the clutch of the chopper rotor. To do this, pull lever **(B23)** to the right.

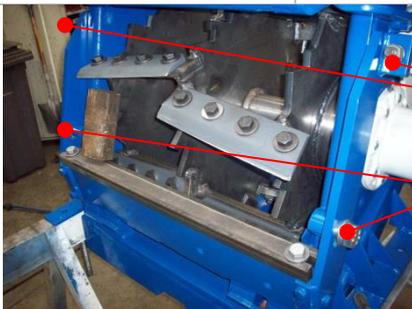

Locking bolts

Adjusting nut

Locking nut

- Loosen the locking bolts on both sides of the chopper rotor by a half turn
- The lower cutting blade can then be adjusted as follows:
 - Loosen the locking nut on both sides of the chopper rotor by a quarter turn.
 - Tighten the adjusting nut on both sides of the chopper rotor by the same quarter turn.
 - Repeat these steps until the cutting blades of the chopper rotor slightly touch the lower cutting blade.
- Tighten the locking bolts on both sides of the chopper rotor.
- Retract the feed unit backwards again according to 9.3.2.

9.5 Changing the lower blade of the chopper rotor



This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.



Under no circumstances open or remove guards while the engine is running. Wait until the chopper rotor has come to a complete stop. Be aware that the rotation of the chopper rotor does not stop immediately after the motor is turned off. Replace all guards and other safety equipment properly after maintenance.



Always wear cut-resistant safety gloves while working nearby the cutting blades or other sharp installation parts.

- Extend the feed unit according to 9.3.1.
- Stop the machine according to 8.1.2. Remove the key from the ignition switch to protect against unintentional start of the engine.



- Disengage the clutch of the chopper rotor. To do this, pull lever **(B23)** to the right.



- Loosen the 3 fastening bolts of the lower cutting blade.
- Replace the cutting blade
- Tighten the 3 fastening bolts back to 250 Nm
- Adjust the lower cutting blade according to 9.4

- Retract the feed unit backwards again according to 9.3.2.

9.6 Adjusting the bottom distance of the chopper cutting blades



This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.



Under no circumstances open or remove guards while the engine is running. Wait until the chopper rotor has come to a complete stop. Be aware that the rotation of the chopper rotor does not stop immediately after the motor is turned off. Replace all guards and other safety equipment properly after maintenance.





Always wear cut-resistant safety gloves while working nearby the cutting blades or other sharp installation parts.

- Extend the feed unit according to 9.3.1.

- Stop the machine according to 8.1.2. Remove the key from the ignition switch to protect against unintentional start of the engine.



- Disengage the clutch of the chopper rotor. To do this, pull lever **(B23)** to the right.

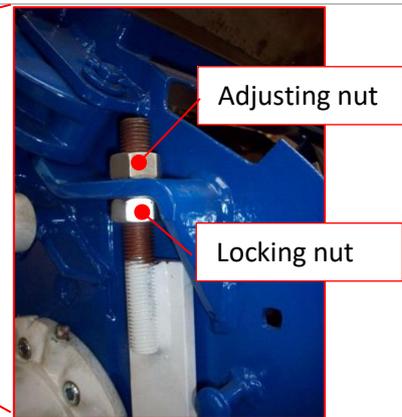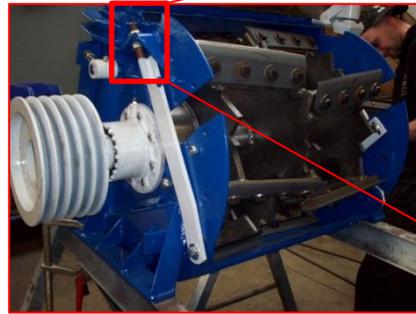

- The bottom distance of the chopper cutting blades can be adjusted as follows:
 - Loosen the locking nut on both sides of the chopper rotor by a quarter turn.
 - Tighten the adjusting nut on both sides of the chopper rotor by the same quarter turn.
- Repeat these steps until the chopper cutting blades slightly touch the base.
- Retract the feed unit backwards again according to 9.3.2.

9.7 Adjusting the scraper bearings of the chopper rotor




This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.



Under no circumstances open or remove guards while the engine is running. Wait until the chopper rotor has come to a complete stop. Be aware that the rotation of the chopper rotor does not stop immediately after the motor is turned off. Replace all guards and other safety equipment properly after maintenance.



Always wear cut-resistant safety gloves while working nearby the cutting blades or other sharp installation parts.

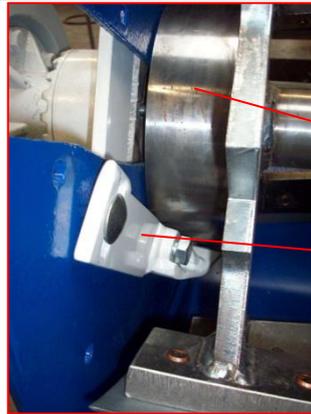

Bearing

Scraper

- The scrapers must touch the bearings on both sides of the chopper rotor and must be adjusted once per season. The adjustment is done as follows:
- Extend the feed unit according to 9.3.1.
- Stop the machine according to 8.1.2. Remove the key from the ignition switch to protect against unintentional start of the engine.



- Disengage the clutch of the chopper rotor. To do this, pull lever **(B23)** to the right.



- Loosen the M12 fastening nuts of the scrapers on both sides of the chopper rotor.



- Hit the scrapers with a light hammer and chisel slightly down until the front of the scraper touches the bearings again. Do this for both sides of the chopper rotor.



- Tighten the M12 fastening nuts of the scrapers on both sides of the chopper rotor.

- Retract the feed unit backwards again according to 9.3.2.

9.8 Changing the rotor cutting blades



This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.



Under no circumstances open or remove guards while the engine is running. Wait until the chopper rotor has come to a complete stop. Be aware that the rotation of the chopper rotor does not stop immediately after the motor is turned off. Replace all guards and other safety equipment properly after maintenance.



Always wear cut-resistant safety gloves while working nearby the cutting blades or other sharp installation parts.



If pieces of the old blade have broken off, make sure that these pieces do not remain on the bottom guard of the rotor. Also make sure that nothing is left behind the guards.

- Extend the feed unit according to 9.3.1.
- Stop the machine according to 8.1.2. Remove the key from the ignition switch to protect against unintentional start of the engine.



- Disengage the clutch of the chopper rotor. To do this, pull lever **(B23)** to the right.

- If the cutting blade to be replaced is positioned at the bottom side of the machine, turn the rotor manually until the cutting blade is in an accessible position.



- Now remove the cutting blade by unscrewing the four bolts that secure it.
- Replace the removed cutting blade with a new blade and tighten it with the 4 bolts.
- Tighten the 4 fastening bolts back to 250 Nm.
- After replacing some or all of the rotor cutting blades, check whether the lower cutting blade needs to be adjusted or replaced. For adjusting the lower cutting blade, refer to 9.4 and for replacing the lower cutting blade, refer to 9.5
- Adjust the bottom distance of the rotor cutting blades in accordance with 9.6

- Retract the feed unit backwards again according to 9.3.2.

9.9 Adjusting the V-belt



Open the movable guard of the V-belt only after the engine has been switched off and the key removed from the ignition switch. Wait until the rotor has come to a complete stop.



Be aware that the rotation of the chopper rotor does not stop immediately after the motor is turned off.

- Stop the machine according to 8.1.2. Remove the key from the ignition switch to protect against unintentional start of the engine.



- Disengage the clutch of the chopper rotor. To do this, pull lever **(B23)** to the right.




- The V-belt is located behind the V-belt protective guard at the left backside of the chopper rotor. Open the protective guard.



- The tension on the V-belt is controlled by moving the tensioning cylinder relative to the V-belt. This displacement is caused by the tightening or loosening the nuts of the screw thread behind the tensioning cylinder.
 - Clockwise rotation of the nut is tensioning the V-belt
 - Counterclockwise rotation of the nut relaxes the V-belt
- Correct tensioning of the V-belts is essential for their service life and for the proper operation of the machine. The adjustment should be carried out by a trained mechanic.

A correct tensioning of the V-belt under normal conditions (see further) can be checked by firmly pressing the V-belt. The deformation must be within ± 1 cm (see drawing below)

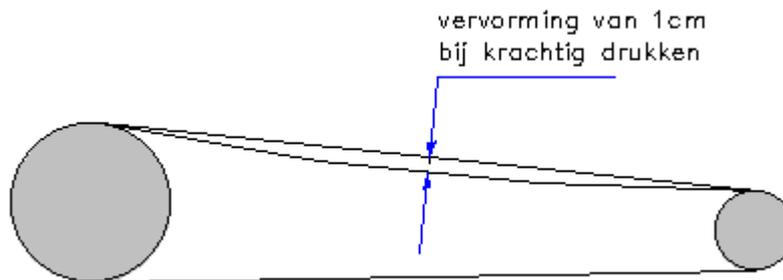

In order to avoid unnecessary stretching of the V-belts, it is recommended to relax (loosen) them at the end of the season.

Important notice:

What are normal conditions?

- ➔ *The crop to be processed is without fruit.*

What are abnormal conditions?

- ➔ *The crop to be processed is still fresh and has a lot of fruit (cucumbers, tomatoes, etc.). These fruits produce a lot of juice during shredding. These juices moisten the entire machine as well as the V-belts, which may cause the V-belts to slip. This cannot be solved by tightening the V-belts. Under these circumstances, the machine operator must control the feed, in such a way that slippage is prevented and the rotor remains at speed.*

All this increases the risk of blockage of the discharge pipe and wear on the V-belts.

9.10 Adjusting tension of the upper feed cylinder



This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.



Under no circumstances open or remove guards while the engine is running. Wait until the chopper rotor has come to a complete stop. Be aware that the rotation of the chopper rotor does not stop immediately after the motor is turned off. Replace all guards and other safety equipment properly after maintenance.


- Depending on the volume and density of the crop to be processed, the tension on the upper feed cylinder can be adjusted.

- In case of light crop, the tension on the upper feed cylinder should be increased. Too little tension on this feed cylinder will result in difficulties to pull the crop material from the canvas (slipping of the crop between the feed cylinders).
- In case of heavy crops, the tension on the upper feed cylinder should be reduced. In heavier crops, too much tension on this feed cylinder will lead to an overload of the hydraulic drive and eventually blocking of the crop between the feed cylinders.

- Extend the feed unit according to 9.3.1.
- Stop the machine according to 8.1.2. Remove the key from the ignition switch to protect against unintentional start of the engine.



- Disengage the clutch of the chopper rotor. To do this, pull lever **(B23)** to the right.

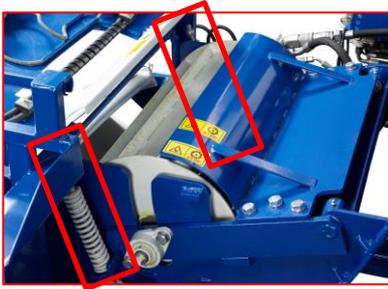

- The tension between the top and bottom feed cylinder can be adjusted with the spring pressure control as shown in the photos on the right.
 - Tightening the adjustment nuts on both sides of the top feed cylinder will increase the tension between the top and bottom feed cylinders.
 - Loosening the adjustment nuts on both sides of the top feed cylinder will reduce the tension between the top and bottom feed cylinders.
- Make sure that the tension between the feed cylinders is the same on both sides during the adjustment. So adjust both sides evenly.

9.11 Adjusting tension of the chain drive of the lower feed cylinders



- The lower feed cylinders (# 2) are hydraulically powered using a hydraulic motor on the rear feed cylinder.
- The front feed cylinder is powered by the rear feed cylinder using a chain drive.



- The tension on the chain is ensured by means of a tensioning regulator.
- The tension on the chain is regulated by moving the tensioning cylinder relative to the chain. This displacement is effected by tightening or loosening the top adjusting nut of the tensioning regulator.
- Before turning the adjusting nut, always loosen the lock nut at the bottom. After turning the adjusting nut, the lock nut must be retightened.
 - Clockwise rotation of the adjusting nut is tensioning the chain drive
 - Counterclockwise rotation of the adjusting nut will relax the chain drive

9.12 Checking and refilling fuel



This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.



Avoid smoking or naked flames in the vicinity of flammable or combustible products



Avoid spills of chemical products to prevent environmental contamination. Always use suitable containers. Dispose all waste according legal environmental regulations.



- The fuel tank is located at the right side of the machine.



- Check the fuel level in the fuel tank with the sight glass on the tank. Add fuel if necessary.

- Stop the machine according to 8.1.2. Remove the key from the ignition switch to protect against unintentional start of the engine.



- Adding fuel is done through the fill opening at the top of the fuel tank. Avoid spillage of fuel and open fire during refueling.

9.13 Checking and refilling hydraulic oil



This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.



Avoid smoking or naked flames in the vicinity of flammable or combustible products



Avoid spills of chemical products to prevent environmental contamination. Always use suitable containers. Dispose all waste according legal environmental regulations.



De hydrauliektank bevindt zich aan de linkerkant van de machine.
The hydraulic tank is located on the lower left side of the machine.



The oil level and oil filter must be inspected **before the start of each season**. Check the level with a dipstick. If necessary, add hydraulic oil through the fill opening on the tank. The normal oil level is approximately 7 cm from the top of the oil reservoir. Use Q8 Trade 68 oil or an equivalent product.

Replace the oil filter if necessary.

In the event of a leak, repair the leak and immediately increase the oil level to the original level.

9.14 Checking and refilling coolant



This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.



Avoid spills of chemical products to prevent environmental contamination. Always use suitable containers. Dispose all waste according legal environmental regulations. Consult the safety data sheet of the product.



The coolant tank is located at the top rear of the machine behind the movable guard.

The level of coolant should be checked periodically (see engine manual) and the level should be between the minimum and maximum indication on the reservoir. Add coolant, if necessary, through the fill opening on the top of the machine / reservoir.

9.15 Cleaning air filters



This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.



- The cyclone filter is located on the top of the machine.
- The cyclone filter should be emptied and cleaned daily after use. The level of the particles may in no case exceed the maximum indication on the filter.
- Before removing the reservoir, loosen the wing nut on top of the filter.



- The other air filter is located on the right front side of the machine behind the movable guard.
- This air filter should also be emptied and cleaned daily after use.
- To disassemble the filter cartridge, loosen the clamps and remove the front cover.
- Clean the filter by blowing it clean with compressed air.
- In case of permanent blockage, replace the filter with a new one.

9.16 Lubricating the machine



This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.

Use normal bearing grease as a lubricant. All rotating and moving parts are fitted with a grease nipple. All lubrication points must be greased at least every 8 operating hours.

The lubrication schedule below must be adhered to:

What?	Frequency?	Location grease nipple?
Shaft canvas sliding plate	2x/day (4h)	Left and right canvas sliding plate (#2)
Bearings canvas sliding cylinder coiling unit	2x/day (4h)	Left and right canvas sliding cylinder (#2)
Hydraulic cylinder canvas sliding plate	2x/day (4h)	Joints cylinder (#2)
Movable gaff	2x/day (4h)	Joint (#1)
Bearings movable gaff coiling unit	2x/day (4h)	Bottom side movable gaff (#1)
Bearings fixed gaff coiling unit	2x/day (4h)	Bottom side fixed gaff (#1)
Tension control upper feed cylinder	1x/day (8h)	Joints both sides upper feed cylinder (#2)
Bearings feed cylinders (#3)	1x/day (8h)	Left and right feed cylinders (# 2 x 3)
Joint frame upper feed cylinder	1x/day (8h)	Left and right joint (#2)
Bearings rotor coupling	1x/week	Left and right chopper rotor (#2)
Main shaft drive V-belts	1x/week	Shaft bearing (#1)
Shaft gaff coupling (both sides)	1x/week	
Sharpening system	1x/week	Housing sharpening system (#3)
Bearings tension cylinder V-belts	2x/day (4h)	Left and right tension cylinder
Cover plate coupling motor – chopper rotor	1x/season	Rear of the motor (guard with logo engraving)
Oil level gearbox	1x/season	
Changing oil gearbox (Orion oil)	1x/500 hours	

9.17 Cleaning the machine



This activity must be performed with the engine switched off. Always remove the key from the ignition switch to prevent accidental activation of the engine.



Avoid direct contact of electrical parts with water jet or excessive moisture. This can lead to electrical disturbances, which can affect the proper and safe operation of the machine.

To ensure a long service life of the machine, the following is recommended:

- Clean the machine after every working day and after the season with a high-pressure cleaner and remove crop remains. Always wear at least a pair of goggles and waterproof protective clothing.
- Use a non-acidic or neutral detergent.

- Lubricate non-painted parts or rub them with oil
- Lubricate all joints and bearings so that moisture can escape.

9.18 Maintenance of the engine



This activity must be performed with the motor switched off and the battery main switch off. Always remove the key from the ignition switch to prevent accidental activation of the engine.

For the necessary maintenance of the engine, please refer to the enclosed operating instructions of the engine.

9.19 Other periodic inspections/checks

What?	Frequency	How?
Hydraulic hoses	Before each season	Visually
Fuel level (see 9.12)	Daily	Visually
Hydraulic oil level (see 9.13)	Before each season	Visually
Coolant level (see 9.14)	Weekly	Visually
Safety systems (emergency stops, safety switches)	Each time before using the machine	Start the machine, check each safety system separately
Screw and bolt connections / hinge points / joints	Before each season	Lubrication
Check star couplings (#2)	Daily	Visually
Thoroughly clean the entire machine	Daily	If necessary, disassemble
Cutting blades rotor / lower cutting blade	Daily / based on use	Check / sharpen / replace
V-belts	Daily	See 9.9
Safety labels	Daily before starting work	Visual / Replace if no longer legible
General visual inspection	Daily before starting work	Visually
Engine and engine parts	Refer to engine user manual	Refer to engine instruction manual
Tension of tracks	Refer to tracks user manual	Refer to tracks instruction manual

Replacement gear oil tracks	500 working hours (see motor display)	Refer to tracks instruction manual
Tensioning chain drive lower feed cylinders (9.11)	Weekly	Make sure the tension spring is open for 2mm
Replacement hydraulic filter	500 working hours (see motor display)	Contact the constructor.
Replacement hydraulic oil	1000 working hours (see motor display)	See 9.13

10. Storage, transportation and waste


10.1 Storage

Always store the machine (after cleaning) in a dry place and protected against the prevailing weather conditions (moisture, dust, frost ...).

10.2 Transportation



Ensure that the machine is properly secured during transport to prevent unwanted movement in the truck trailer.

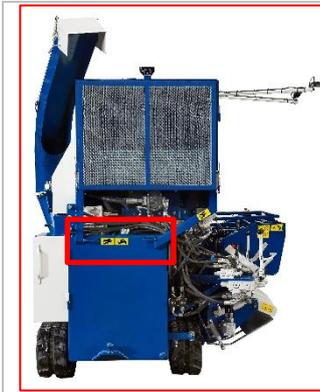

The machine is equipped with lashing hooks at the left and right for attaching lashing straps during transport in truck trailers.

10.3 Waste

This machine is mainly made of materials that can be recycled. Correct material separation is necessary for recycling.

In case of disposal, always follow the local legal regulations regarding separate waste collection.

Prevent environmental pollution and avoid spillage of chemical products into the environment and / or sewers. Always dispose of used lubricants in accordance with the applicable environmental regulations.

11. Fault analysis

Fault	Cause	Measure / solution
Diesel engine does not start, stops or does not run smoothly	Refer to engine instruction manual	Refer to engine instruction manual
	Key ignition switch is not pressed in properly.	Fully press key of ignition switch and turn it clockwise
	Diesel suction filters blocked	Open the suction filters / replace filter.
	Defective fuse (s)	Check fuse (s) and replace if necessary
	Air slot in fuel line	Vent fuel line (see instruction manual engine)
	Fuel (filter) or injectors is (are) contaminated	Clean fuel system, check injectors and / or replace fuel filter (see instruction manual engine)
	Oil pressure is too low Check oil level (see maintenance)	Check oil level (see instruction manual engine)
	Battery has too little voltage Use an auxiliary battery or replace the battery	Use an auxiliary battery or replace the battery
	Coolant temperature is too high	Check oil and coolant level, radiator cooling fins, V-belts fan and thermostat (see instruction manual engine)
	Starter motor, alternator and / or battery is (are) defective	Check starter motor, alternator, belt alternator transmission and battery (see instruction manual engine)
Air filters dirty / saturated	Clean / replace air filters	
Hydraulic system does not work properly	Hydraulic oil level too low	Top up the hydraulic tank with hydraulic oil (TRADE 68)
	Leak in hydraulic hose(s)	Check hoses and repair
	Hydraulic pump(s) is (are) worn	Replace hydraulic pump(s)
	Hydraulic motor(s) is (are) worn	Replace hydraulic motor(s) Check star coupling
	Hydraulic filters are contaminated	Replace hydraulic filters
	Safety interlocks not properly positioned.	Check position of all machine parts (guards, ...) equipped with safety interlocks and correct if necessary.
Safety systems (emergency stops, safety switches) not working	Damaged / contaminated	Check connection and repair

Bunker container is not responding	Hydraulic couplings not working properly/insufficient	Check connection and repair
V-belts slipping	V-belts are wet V-belts too loose	Dry the V-belts Tension V-belts
No output shredded material Discharge pipe blocked	Blunt or defective cutting blades / wind paddle worn out	Sharpen / replace cutting blades Adjust bottom distance of the chopper cutting blades (see 9.6)
Oil overheating	Oil cooler contaminated / defective	Clean/replace cooler
Extreme vibration	Unbalanced shaft in chopper unit	Check parts on the chopper unit shaft
Material feed is not working properly.	Tension upper feed cylinder not set correctly.	Adjust tension upper feed cylinder
Material insufficiently shredded / difficult shredding / blockage	Cutting blades chopping rotor insufficiently sharp / damaged	Replace cutting blades shredding rotor
	Chopping rotor lower cutting blade insufficiently sharp / damaged	Replace chopping rotor lower cutting blade
	Distance between lower cutting blade and cutting blades chopper rotor too large	Adjust distance between lower cutting blade and cutting blades chopper rotor
	Bottom distance of cutting blades chopper rotor too large.	Adjust bottom distance of cutting blades chopper rotor

Important notice:

The above fault analysis concerns the most common faults. If this would be insufficient for the malfunction that the user encounters, immediately consult the manufacturer.

12. **Equipment list (Spare parts)**

13. Elektrical diagram

14. Hydraulic diagram

Never change the operating set pressures of the hydraulic system without the manufacturer's approval.