



SEPLUS MASON 280L(3.0Y) 314AH BATTERY PACK SPECIFICATION



DONGGUAN SEPLUS TECHNOLOGY CO., LTD

CONTANT

1. Introduction	1
2. Functions	1
3. Specifications	3
3.1 Appearance and interface	3
3.2 Electrical schematic diagram	3
3.3 Active balanced board	4
3.4 Parameters	9
3.5 Protection parameters	10
4. Communication	18
4.1 CAN communication	18
4.2 RS485	19
4.3 Parallel	20
5. Working mode	20
5.1 Charging mode	20
5.2 Discharging mode	20
5.3 Standby mode	20
5.4 Power off mode	21
6. LED indicator	21
6.1 LED lights	21
6.2 Capacity indicators	22
6.3 Lights blinking explanation A	22
6.4 Running status indicators	22
6.5 Installation and commissioning	23
6.6 Installation instructions	24
7. Safety precautions	24
7.1 Harness connection	25
8. Package	26
9. Safety precaution	27

1. Introduction

This battery pack System, is applicable both for residential and commercial energy storage system, which is assembled with 3.2V 314Ah lithium iron phosphate cell in 16 S1P configuration, and accompany with SEPLoS Smart BMS consist 51.2V314Ah lithium battery system.Each pack support 16packs in parallel to easily expand capacity.Do not mix parallel the battery packs of different brands or models.


2. Functions

- Battery voltage calculation: 16 battery voltage sampling test, deviation $\pm 20\text{mV}$
- Battery and ambient temperature detection: 4 battery temperature sensors, 1 ambient temperature sensor, 1 MOS temperature sensor, deviation $\pm 2^{\circ}\text{C}$.
- Battery capacity and cycle times: complete a complete charging, discharging cycle to set the actual capacity. Monitor the remaining capacity of the battery with the capacity estimation accuracy within 5% deviation. In addition, the charging and discharging cycle time and the complete charging and discharging cycle time can be configured.
- Smart cell balance: charging and static balance strategies can be flexibly set to effectively extend the service life.


- Communication interface: PC or intelligent front-end can monitor battery data, control operation and set parameters through telemetry, remote signaling, remote adjustment, remote control and other commands. The communication protocol meets the requirements of YD/T 1363.3 and realizes cascade communication
- Historical data recording, saving and reading: when the battery is abnormal, record and save real-time battery status and alarm information. At present, up to 500 historical fault data can be stored.
- Battery management system parameter setting: battery management system parameters, including cell battery over voltage/under voltage, battery total voltage over voltage/under voltage, charge and discharge over current, battery high/low temperature, battery capacity, working mode, charge and discharge limit current, can be set in the battery monitoring system.
- Working mode: charging and discharging current limiting, constant voltage output, direct output and other working modes can be set in the monitoring system
- Multiple protection functions: hardware protection, battery protection, high and low temperature protection, output short circuit protection, etc.

3. Specifications

3.1 Appearance and interface

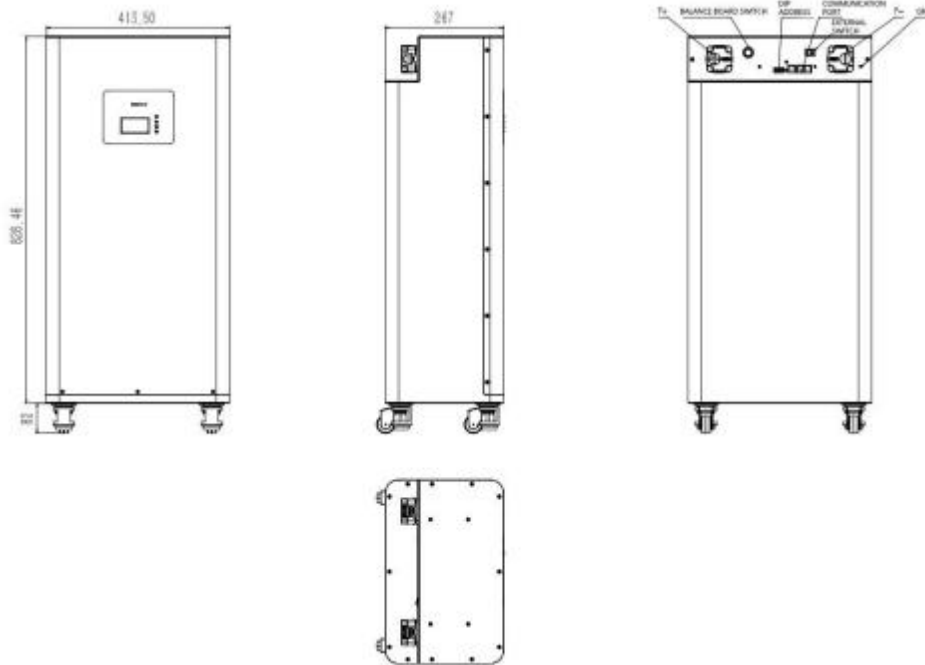


3.2 Electrical schematic diagram

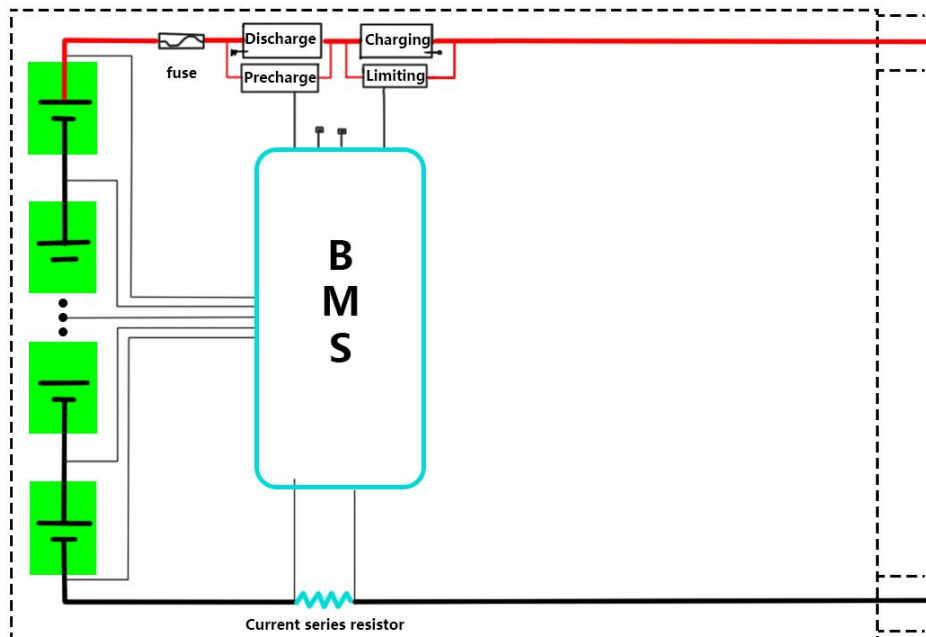


3.3 Active balanced board

3.3.1、Dimension

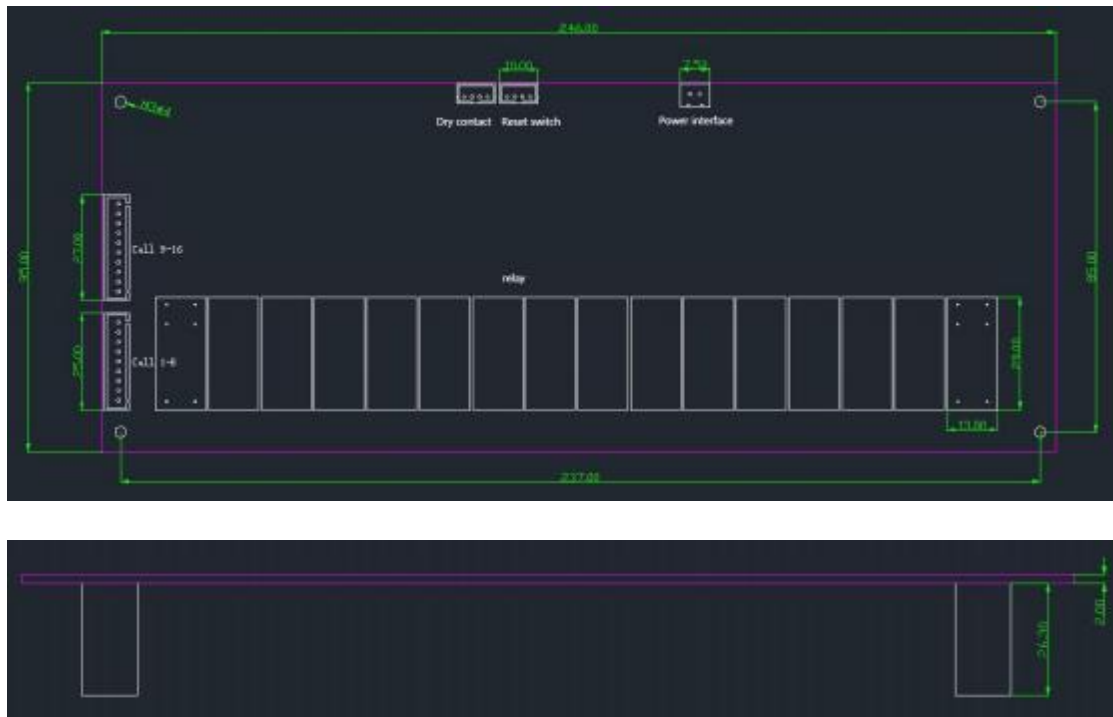

3.3.2、Installation method

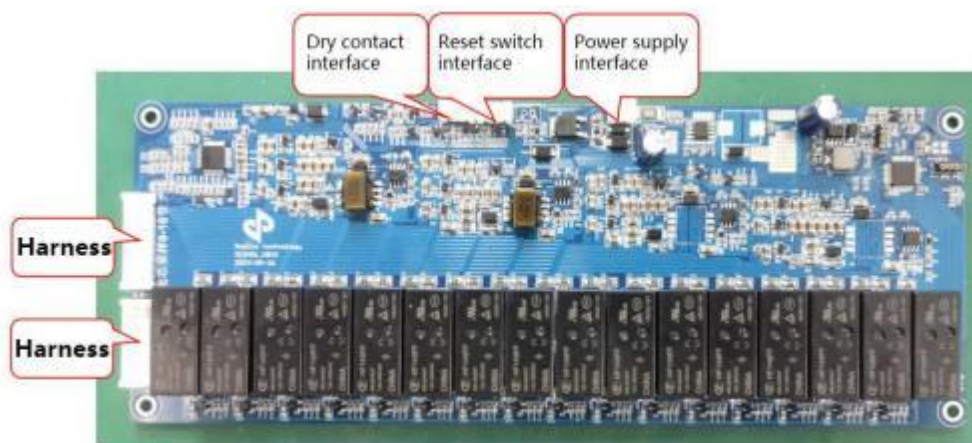

3.3.3、Harness definition

Harness A (1-8batteries)		
NO	Balanced board wiring definition	Cell wiring definition
1	CELL1-	Connect to the negative pole of the first battery
2	CELL1+	Connect to the positive pole of the first battery
3	CELL2+	Connect to the positive pole of the second battery

4	CELL3+	Connect to the positive pole of the third battery
5	CELL4+	Connect to the positive pole of the fourth battery
6	CELL5+	Connect to the positive pole of the fifth battery
7	CELL6+	Connect to the positive pole of the sixth battery
8	CELL7+	Connect to the positive pole of the seventh battery
9	CELL8+	Connect to the positive pole of the eighth battery




Harness B (9-16batteries)

NO	Balanced board wiring definition	Cell wiring definition
1	CELL9-	Connect to the negative pole of the ninth battery
2	CELL9+	Connect to the positive pole of the ninth battery
3	CELL10+	Connect to the positive pole of the tenth battery
4	CELL11+	Connect to the positive pole of the eleventh battery
5	CELL12+	Connect to the positive pole of the twelfth battery
6	CELL13+	Connect to the positive pole of the thirteenth battery
7	CELL14+	Connect to the positive pole of the fourteenth battery
8	CELL15+	Connect to the positive pole of the fifteenth battery
9	CELL16+	Connect to the positive pole of the sixteenth battery
10	NC	NC



Power cord (2PIN shelling)		
NO	Balanced board wiring definition	Cell wiring definition
1	B-	Connect to the total negative of the battery
2	B+	Connect to the total positive of the battery



3.3.4 The difference between active and passive balancing

Passive balancing: By way of resistance discharge, the battery with higher voltage is discharged, and the electricity is released in the form of heat. The advantages are low cost and simple circuit design; The disadvantage is that the balance is performed on the basis of the lowest battery remaining capacity, and the capacity of the battery with a small remaining capacity cannot be increased, and 100% of the balanced power is wasted in the form of heat. If the equalizing current is small, then in the case of a large-capacity battery pack with a large difference in power, the efficiency of the power balance effect is very low, and it takes a long time to achieve balance.

Active balancing : Equalization is carried out by means of power transfer, with high efficiency and low loss. Regardless of whether the battery is charging, discharging, or standing still, as long as the pressure difference is greater than the set value, the equalization will start. Therefore, as long as there is a pressure difference, the active equalization time should be working 24 hours a day until the pressure difference is less than the set value. stop within the range. Since the active equalization is not limited by the charging time, the equalization time is longer, and the equalization current is relatively large, so it is more suitable for use in large-capacity battery packs.

3.3.5 Software internal setting parameters

NO	Item	Setting	Instruction
1	Individual under voltage protection	2800mV	When any cell reaches the under voltage protection value, the balance board will shut down after 1 minute
2	Equalized minimum start voltage	3000mV	In order to balance the batteries in all states, they can be balanced in standby, charging, and discharging; when the batteries are relatively low, the energy is insufficient, and equalization is prohibited. A
3	Equalized minimum sustaining voltage	2900mV	

			minimum start-up equalization voltage is deliberately set.
4	Equalized starting pressure difference	50mV	Cell voltage difference is over than 50mV and the active equalization is turned on
5	Equalized closing pressure difference	30mV	After equalization, the pressure difference is less than 30mV to stop active equalization
6	Equalized the duration of a single shot	60S	Active balance open and close the relay for 60S, and balance open intermittently for 3S; real-time monitoring of cell voltage reaches the open condition
7	Equalization interval	3S	
8	Equalized working hour	24h	Turn off the equalization after the continuous equalization time exceeds 24h
9	Equalized over temperature protection released	70°C	The balance board detects that the temperature reaches the protection value and closes the balance, and waits for the temperature to reach the recovery value before turning on the balance
10	Equalized over temperature protection	90°C	
11	Standby shutdown time	10h	The continuous standby state is not balanced, and the shutdown is performed after more than 10H
12	Equalized current	2A	When the balance board is turned on, the balance current can reach 2A.
13	Power consumption	15mA	Power consumption in standby mode is less than 15mA

3.3.6 Reset button LED light indication

Status	Function instruction
Standby	The active balance board is in the standby state and the LED light is flashing
Turn on equalization	The active balance board is in the balance state and the LED light is always on
Turn on	Press the reset button and the LED light flashes once, then turn on the equalization board
Turn off	Press the reset button and the LED light flashes 6 times, then the LED light goes out and then shuts down
Stop equalized	In the balance state, press the reset button LED light flashes 4 times to stop equalization, press the reset button LED light flashes 4 times to start equalization

3.3.7 Active balancing logic

Active balance the total battery power. After the balance is turned on, the total battery power is used to convert the charging voltage to charge the battery cells; the balance board can open up to 3 battery charging balances at the same time, and monitor in real time which battery cell is the lowest, and charge the lowest battery with 2A current .

3.3.8 Operation guide



In order to avoid the disadvantage of reducing the battery life caused by frequent correction of the remaining capacity of the battery cell with a large current. After pressing the equalization function switch, the active equalization function is turned on, and the equalization state refers to 2.6.6, and the single equalization time is $\leq 24\text{h}$. It is recommended to turn on active balancing once a month.

3.4 Parameters

Items	Specifications
Rated energy(kWh)	16.076KWh
Configuration	1P16S
Nominal Voltage(V)	51.2V
Working Voltage(V)	42V~58.4V
Nominal Capacity(Ah)	314Ah
Rated charge/discharge Current(A)	157A@25± 2°C (Recommended)
Maximum charging current	200A@25± 2°C
Maximum discharge current	157A@25± 2°C (Recommended)
Working Temperature	0 - 40 °C (Charge) -20 - 40 °C (Discharge)
Humidity(%)	5~80%
Altitude Limited(m)	0-3000m
Weight(Kg)	118Kg± 3kg
Dimension(mm)	817×412×267mm
Storage temperature and humidity	-10°C~35°C (Within one month of storage) 25±2°C (Within three months of storage) 65%±20% RH
cycle life	8000cycles,70%SOH
IP grade	IP20
Communication mode	CAN&RS485

3.5 Protection parameters

3.3.1 Individual cell over voltage parameters

Individual cell over voltage parameter				
Functions	Status	Item	Default	Configurable Range
Over voltage warning	ON	Over voltage warning	3500mV	Over voltage warning recovery - over voltage protection
		Over voltage warning recovery	3400mV	3000mV - over voltage warning
		Under voltage warning	2900mV	Under voltage protection - under voltage warning recovery
		Under voltage warning recovery	3000mV	Under voltage warning - 3300mV
over voltage protection	ON	Over voltage protection	3650mV	Over voltage warning - 4500mV
		Over voltage protection recovery	3400mV	Over voltage warning recovery - over voltage protection
		Over voltage recovery condition	1. Individual cell voltage decrease to over voltage recovery threshold. 2. The remaining capacity lower than 96% of the intermittent power supply. Both conditions should be satisfied.	
			Output current $\geq 1A$	

3.3.2 Individual cell low voltage parameters

Individual cell low voltage parameter				
Functions	Status	Item	Default	Configurable Range
under voltage protection	ON	Under voltage protection	2700mV	1500mV - under voltage protection recovery
		Under voltage protection recovery	2900mV	Under voltage protection - under voltage warning
		Under voltage protection condition	When an individual cell gets under voltage protection threshold, BMS maintain communication with inverter for 1 minutes and powered off.	
		Under voltage protection recovery	Input current $\geq 1A$	

3.3.3 Pack over voltage parameters

Pack over voltage parameter				
Functions	Status	Item	Default	Configurable Range
Over voltage warning	ON	Over voltage warning	56.0V	Over voltage warning recovery - over voltage protection
		Over voltage Warning recovery	54.0V	53.0V - over voltage warning
		Under voltage warning	46.4V	Under voltage protection - under voltage warning recovery
		Under voltage Warning recovery	48.0V	Under voltage warning - 55.0V
Over voltage protection	ON	Over voltage protection	57.6V	Over voltage warning - 60.0V
		Over voltage protection recovery	54.0V	Over voltage warning recovery - over voltage protection
		Over voltage protection recovery conditions	1. Individual cell voltage decrease to over voltage recovery threshold. 2. The remaining capacity is lower than 96% of the intermittent power supply. Both conditions should be satisfied.	
			Output current ≥ 1 A	

3.3.4 Pack low voltage parameters

Pack low voltage parameter				
Functions	Status	Item	Default	Configurable Range
Under voltage protection	ON	Under voltage protection	41.6V	36.0V - under voltage warning recovery
		Under voltage protection recovery	46.0V	Under voltage protection - under voltage warning
		Under voltage protection condition	When the total voltage gets under voltage protection threshold, BMS maintain communication with inverter for 1 minutes and powered off.	
		Under voltage protection recovery conditions	Input current ≥ 1 A	

3.3.5 Cell high/low temperature(charging) parameters

Cell high/low temperature (charging) parameters				
Functions	Status	Item	Default	Configurable Range
Cell temperature (Forbidden Charging)	ON	High temperature warning	5 0 °C	High temperature warning recovery - high temperature protection
		High temperature warning recovery	4 7 °C	3 5 °C - high temperature warning
		High temperature protection (charging)	5 5 °C	High temperature protection recovery - 8 0 °C
		High temperature protection recovery	5 0 °C	High temperature warning recovery - high temperature protection
		Low temperature warning	2 °C	Low temperature protection - low temperature warning recovery
		Low temperature warning recovery (charging)	5 °C	Low temperature warning - 1 0 °C
		Low temperature protection	- 10°C	- 2 0 °C - low temperature protection recovery
		Low temperature protection recovery	0 °C	Low temperature protection - low temperature warning recovery

3.3.6 Cell high/low temperature(charging) parameters

Cell high/ low temperature (discharging) parameters				
Functions	Status	Item	Default	Configurable Range
Cell temperature (Forbidden discharging)	ON	High temperature warning	5 2 °C	High temperature warning recovery - high temperature protection
		High temperature warning recovery	4 7 °C	35 °C ~ Discharging high temperature warning
		High temperature protection	5 5 °C	Discharging over temperature recovery~80 °C
		High temperature protection recovery	5 0 °C	High temperature warning recovery - high temperature protection
		Low temperature warning	- 1 0 °C	Low temperature protection - low temperature warning recovery
		Low temperature warning recovery	3 °C	Low temperature warning - 1 0 °C
		Low temperature protection	- 1 5 °C	- 3 0 °C - low temperature protection recovery
		Low temperature recovery	0 °C	Low temperature protection - low temperature warning recovery

3.3.7 Ambient high/low temperature parameters

Ambient high/ low temperature parameters				
Functions	Status	Item	Default	Configurable Range
Ambient temperature	ON	High temperature warning	5 0 °C	High temperature warning recovery - high temperature protection
		High temperature warning recovery	4 7 °C	- 20 °C - high temperature warning recovery
		High temperature protection	6 0 °C	High temperature protection recovery - 8 0 °C
		High temperature protection recovery	5 5 °C	High temperature warning recovery - high temperature protection
		Low temperature warning	0 °C	Low temperature protection - low temperature warning recovery
		Low temperature warning recovery	3 °C	Low temperature warning - 6 0 °C
		Low temperature protection	- 10 °C	- 30 °C - low temperature protection recovery
		Low temperature protection recovery	0 °C	Low temperature protection - low temperature warning recovery

3.3.8 MOSFET high/low temperature parameters

MOSFET high/ low temperature parameters				
Functions	Status	Item	Default	Configurable Range
MOSFET temperature	ON	High temperature warning	9 0 °C	High temperature warning recovery - high temperature protection
		High temperature warning recovery	8 5 °C	6 0 °C - high temperature warning
		High temperature protection	10 0 °C	High temperature warning - 12 0 °C
		High temperature protection recovery	8 5 °C	High temperature warning recovery - high temperature protection

3.3.9 Charging current limiting parameters

Charging current limiting parameters				
Functions	Status	Item	Default	Configurable Range
Current limiting (charging)	OFF	Active current limiting	10A	When the charger current > 10 A, current limiting activated.
		Passive current limiting		When the charger current > charging over current warning (configurable), current limiting activated.
	ON	Charging current limiting time delay	5 min	After the current limiting being activated, BMS re-check the current to judge whether to maintain current limiting.

3.3.10 Charging over limiting parameters

Charging current limiting parameters				
Functions	Status	Item	Default	Configurable Range
Over current warning (charging)	ON	Over current warning	200A	Charging over current warning recovery - charging over current protection
		Over current warning recovery	195A	0A - charging over current warning
Over current protection (charging)	ON	Over current protection	210A	0A~150A
		Over current protection time delay	10S	Configurable
		Over current protection recovery conditions	BMS detects any output discharge current. After 60 seconds, the protection recovers automatically.	
Effective charging current	Charging current (in)		1000mA	
	Charging current (out)		700mA	

3.3.11 Discharging over limiting parameters

Discharging over current parameters				
Functions	Status	Item	Default	Configurable Range
Over current warning	ON	Over current warning	-205A	Over current protection - over current warning recovery
		Over current warning recovery	-203A	Over current warning -0 A

Over current protection	ON	Over current protection	-210A	Transient over current protection - 0 A
		Over current protection time delay	10S	Configurable
		Over current protection recovery conditions	BMS detects any input charge current. After 60 seconds, the protection recovers automatically.	

3.3.12 Transient over limiting parameters

Transient over current parameters					
Functions	Status	Item	Default	Configurable Range	
Over current protection (Transient)	ON	Over current protection	-300A	Discharge over current protection - 300 A	
		Over current protection time delay	30mS	Configurable	
		Over current protection recovery	BMS detects any input charge current. After 60 seconds, the protection recovers automatically.		
	OFF	Over current lock	Continuously over current for 2 times. The over current lock times exceeded.		
		Over current lock times	5 times		
		Over current lock release	Connected with charger		

3.3.13 Short circuit parameters

Short circuit parameters					
Functions	Status	Item	Default	Configurable Range	
Short circuit protection	ON	Short circuit protection current value and time delay	Programmed into the software (can not be edited) Cannot be turned off		
		Short circuit protection recovery	BMS detects any input charge current. After 60 seconds, the protection recovers automatically.		
	OFF	Short circuit protection lock	Continuously short in the output circuit. The over current protection lock times exceeded.		
		Short circuit protection lock times	5 times		
		Short circuit protection lock release	Connected with charger		

Effective Discharging current	Discharge current (in)	-1000mA
	Discharge current (out)	-700mA

3.3.14 Cell balance parameters

Short circuit parameters					
Functions	Status	Item	Default	Configurable Range	
Cell balance	ON	Standby balance	When there is no charging and discharging current flow, the standby equalization will be activated.		
		Standby time	10 hours	configurable	
	ON	Charging equalization	When at the charging or float charging status, the charging equalization will be activated.		
	Balance conditions	Activate voltage	3350mV	Configurable	
		Activate voltage difference	30mV		
		End voltage	20mV		
	ON	Temperature	According to the temperature range of no equalization (ambient temperature)		
		No equalization high temperature	5 0 °C	Configurable	
		No equalization low temperature	0 °C		
	Cell failure	ON	Voltage difference	500mV	Configurable
Voltage difference recovery			300mV		

3.3.15 Cell balance parameters

Capacity parameters				
Capacity	Nominal capacity		200AH	5-200Ah
	Remaining capacity	Calculated accordingly to the cell voltage		Configurable
	Cycle life accumulated capacity	20%	Cycle life (configurable)	
	ON	Remaining capacity warning	15%	
	OFF	Remaining capacity protection	8%	Output current flow will be cut off.
Reset button	Power on/ activation		When the BMS is in the sleep state, press the 1 S reset button, the BMS will be activated, and the LED indicators will turn on in turn, then the BMS will turn into the normal working state	

	Shut down/ hibernate	When the BMS is in standby or working state (except charging) , press the 3 S reset button, the BMS will be hibernated, and the LED indicator lights will turn on in turn, and then the BMS will go into hibernation state;
--	----------------------	--

3.3.16 Other parameters

Pre- charging	2000ms	0-5000ms	The pre- charging function will be activated once the BMS powered on.	
BMS power consumption	ON	Longest standby time	4 8 hours (Do not connected with charger, and no effective charging current.)	
Heating	ON	Start heating temperature	0℃	Configurable
		Stop heating temperature	10 ℃	
		Heating function activation	When connected with charger, and the cell temperature reaches the setting value, the heating function activated. Heating function disabled when at standby and discharge status.	
External switch	OFF	When at the standby status, the BMS can be powered on/off through external switches.		
LCD screen	ON	Monitoring software to check the cell voltage, temperature and current.		
Charging activating	ON	1 minutes	The BMS powered off after under voltage protection. Press the button for recovering from protection status and activate output current.	Configurable
Compensating impedance	Connection fault impedance	10mΩ	Default between 8 and 9	Battery connection line impedance compensation
	Compensation 1	0 m Ω	9	Configurable
	Compensation 2	0 m Ω	13	

4. Communication


4.1 CAN communication

BMS transmit information through CAN interface. Buad rate 500KBITS/S.

CAN interface applies 8P8C connectors. And CAN connector communicates with inverter or CAN TEST. RS485 collect the information.

Then CAN transmit the battery pack information to PCS.

CAN connector definition:

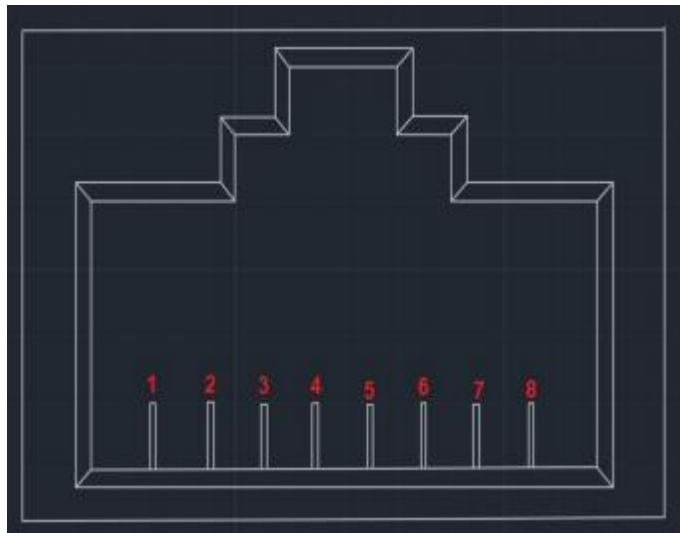


PINS	DEFINITION
1、 2、 7、 8	NC
4	CAN- H
5	CAN- L
3、 6	GND

4.2 RS485

BMS could collect battery pack information through RS485 communication.

Baud rate: 19200bps. RS485 interface applies 8p8c connectors.

RS485 connectors definition:

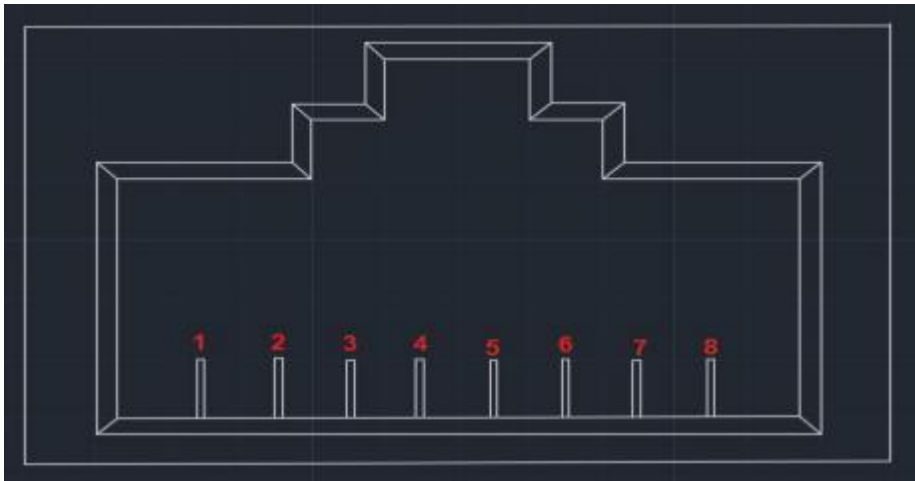


PINS	DEFINITION
1/8	RS485-B
2/7	RS485-A
3/6	GROUND
4/5	NC (dangling)

4.3 Parallel

When connected in parallel with RS485 connectors. CAN connectors act as upper communication interface. End devices could get the collected battery information through CAN interface.

RS485 connector connection:

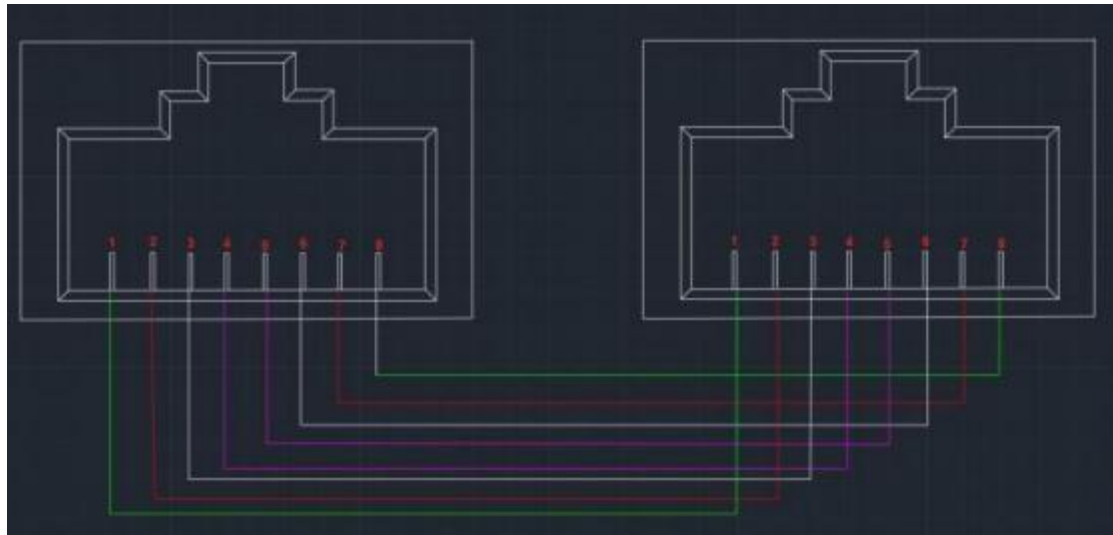

5. Working mode

5.1 Charging mode

When a charger was detected, and the charger voltage is 0.5V+ more than the battery voltage, BMS will turn on the charging MOSFET. And when the charging current reaches the effective charging current value, enters charging mode.

5.2 Discharging mode

When a loads was detected, and the discharging current reaches the effective discharging current value, BMS enters discharging mode.

5.3 Standby mode

When the BMS not in charging mode, nor discharging mode, it enters standby mode.

5.4 Power off mode

5.4.1 Power off

When meet any condition as below, the system will be power off(without charger only)

1) Individual or entirety battery remain over discharge protecting mode within 30 seconds.

2) Press the button in 3 seconds. (make sure no charger connected, otherwise it will not enter low power mode.)

5.4.2 Awaken

When meet any condition as below, the system will be enter working mode

1) Connect the charger and the voltage need reach more than 300V.

2) Press the power button in 3 seconds to start the system







6. LED indicator

6.1 LED lights

One running indicator (Green)

One warning indicator (Red)

And four capacity indicator (Green)

					
SOC				ALARM	RUN

6.2 Capacity indicators

Status	Charging				Discharging			
	L4 ●	L3 ●	L2 ●	L1 ●	L4 ●	L3 ●	L2 ●	L1 ●
Capacity	L4 ●	L3 ●	L2 ●	L1 ●	L4 ●	L3 ●	L2 ●	L1 ●
0-25%	OFF	OFF	OFF	Blink	OFF	OFF	OFF	Green
25%-50%	OFF	OFF	Blink	Green	OFF	OFF	Green	Green
50%-75%	OFF	Blink	Green	Green	OFF	Green	Green	Green
≥75%	Blink	Green	Green	Green	Green	Green	Green	Green
Running	Green				Blink			

6.3 Lights blinking explanation A


Blink Type	Lighten TIEM	OFF TIME
Blink A	0.25S	3.75S
Blink B	0.5S	0.5S
Blink C	0.5S	1.5S

6.4 Running status indicators

SYSTEM	Running	RUN	ALM	SOC				REMARK
		●	●	●	●	●	●	
OFF	Sleeping	OFF	OFF	OFF	OFF	OFF	OFF	OFF
STANDBY	Running	Blink A	OFF	OFF	OFF	OFF	OFF	Standby
	Running	Green	OFF	According to the remaining capacity				LED Blink B
	Over current warning	Green	Blink B	According to the remaining capacity				LED Blink B

CHARGE	Over voltage protection	Blink A	OFF	OFF	OFF	OFF	OFF	
	Temp And over current protection	Blink A	Blink A	OFF	OFF	OFF	OFF	
DISCHARGE	Running	Blink C	OFF	According to the remaining capacity				
	warning	Blink C	Blink C					
	Temp Over current, short circuit protection	OFF	RED	OFF	OFF	OFF	OFF	
	Under voltage protection	OFF	OFF	OFF	OFF	OFF	OFF	No discharge

6.5 Installation and commissioning

NO	Item	Quantity	Photo
1	Battery Box	1 PCS	

6.6 Installation instructions

Check battery status before installation




7. Safety precautions

- ✓ Recommended to hang the battery on the vertical wall.
- ✓ The temperature should be between 10 °C and 30 °C to maintain the best operating state.
- ✓ The installation site should be some free space around the battery to dissipate heat (as shown in the figure below), which is suitable for installation on the concrete surface or other non-flammable surfaces.
- ✓ Do not place the battery on flammable building materials.



7.1 Harness connection

The battery should be turned off before connecting.

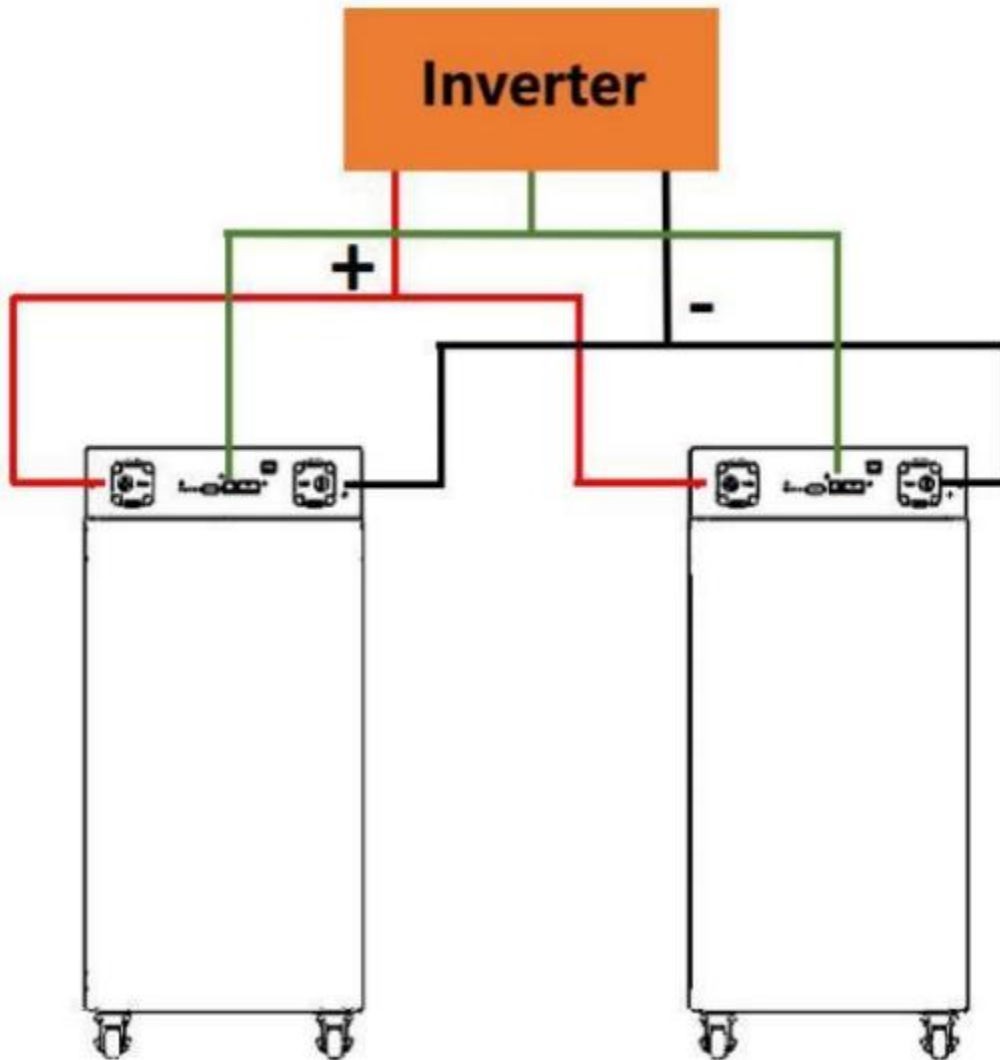

8. Package

Packed in a dry, dust proof and moisture-proof packaging box. The products shall be packed with plastic film/EPE and packed in cartons.

Specification: L 97cm*W50cm*H 36cm

Package quantity: 1 set

Weight: 121kg



9. Safety precaution

- Do not use the pack if there' s any deformation.
- Do not stack up the battery.
- Please be notice the polarity of the battery and port.
- Make sure the insulation of equipment, use the tool and instrument correctly.
- The installation site should stay away from fire and Inflammable, keep ventilating and dry.
- Do not disconnect the battery terminals when its running.
- Not allow non-technology staff to open all of function module.
- Please fully charge a new battery pack, or a long- time- no- use battery pack with a designed charger.
- Do not uninstall, open, extrude, bend, impale or break the battery.
- Do not refit the battery or connect to other object, do not immerse the battery into any water, sea water, or drinks and other liquids. stay away from fire, explosive material or other dangerous item.
- Do not allow the battery short circuit, do not any metal or conductor contact the terminal.
- Do not let the battery fall. if does, especially on the solid surface, please contact the service center.
- If there is any signs of Electrolyte leakage, do not let it get any direct contact with your bare skin or eyes. If it happened, use plenty of water to clean up or ask doctor for help.
- Do not uninstall the battery cell, or there will cause internal short even fire disaster or other issue.
- Do not burn the battery or throw it to the fire, otherwise, there will be cause the fire of the battery.