

D100

Single Phase Two Wire Din-rail Energy Meter

(4 Modules)

User Manual



Table of Contents

1.1	Safety Instructions
1.2	Foreword
1.3	Environmental indicators
1.4	Technical parameters and display types
1.5	Basic error
1.6	Product structure
1.7	Dimensions
1.8	Instructions
1.9	User guide and function introduction
1.10	fault resolution
1.11	Key operation instructions
1.12	Technical Support

1.1 Safety Instructions

Information related to your personal safety

Due to different conditions or requirements, it is not possible to cover all the safety issues related to the operation of this instrument. However, it is important to understand the following items to ensure your personal safety and to prevent damage to the instrument. These items are highlighted with a triangular safety symbol, depending on the level of potential hazard they indicate.



Dangerous

This symbol indicates that failure to observe the relevant regulations will result in serious damage to the instrument, serious personal injury or death.



Warning

This symbol indicates the risk of electric shock. Failure to take appropriate safety precautions may result in serious injury to the instrument, serious personal injury or death.

Qualified personnel

Only qualified personnel should perform the procedures described in this manual for this instrument. In this manual, qualified personnel shall refer, in particular, to authorized and authorized professional technicians who can correctly install and commission the instrument in accordance with the power safety management standard

Use range

The instrument can only be used in the specific areas specified in this manual and catalog, and can only be connected to devices or components recommended or approved by the company.

Reasonable operation

Reasonable transportation, storage and proper installation and maintenance of this product is a necessary condition for the normal operation of this product. When this product is working, some components will be with a dangerous voltage, improper handling will damage the instrument and threat to your safety.

Insulation tools must be used

Cannot be installed in the case of electricity

Place the meter in a dry place

Do not expose the meter to dusty, mildew, or insects

Make sure that the wire current used does not exceed the maximum current of the meter

Make sure the wiring is correct before using the meter

In order to prevent electric shock, do not use hands, metal, etc. to directly contact the meter connection clamp. Do not forget to install protective covers

Only qualified personnel should install, maintain, and service this product

Only to maintain the integrity of the front cover and cover in order to ensure the normal work of the meter and enjoy the relevant after-sales service.

Wrestling, bump this product will damage the internal precision components

Disclaimer

Although we have carefully reviewed the contents of this manual and have made our description as accurate as possible, we cannot guarantee that our description is completely accurate because of differences in the way or standard of description. We are not responsible for any potential errors described below, depending on the product. At the same time we will continue to check the errors and will be corrected in the subsequent version, if you can provide us with the description of the recommendations, we will be very grateful!

Copyright Notice

No part of this document may be reproduced, reproduced, or distributed without permission

1.2 Foreword

Thank you for purchasing a single-phase two-wire din-rail energy meter. The table has the following features, the table with large-screen LCD display, the table with RS485 (communication protocol MODBUS-RTU) remote meter reading function, can accurately measure the active energy.

The phenotype according the international IEC62053-21 design, the use of advanced ultra-low power LSI technology and SMT manufacturing process Of the high-tech products, the key components used internationally renowned brands of long-life devices, improve product reliability and longevity.

Product circuit measurement part of a dedicated measurement chip, high reliability, high precision and accurate measurement of active energy. The product adopts the linear power supply, the metering chip converts the electric energy into pulse respectively. The microprocessor completes the functions of power collection, power calculation, power pulse output and LCD display processing. The data security adopts redundant design, and the data adopts multiple backup to ensure reliable measurement data.

We can supply a wide range of products suitable for 110VAC to 240VAC (50 or 60Hz). In addition to our regular power meters, we have developed our own prepaid smart card form, prepaid smart track card form, rechargeable smart card, as well as a complete set of PC-based pre-paid management operating system. For more information, please contact us.

Although we strictly in accordance with GB / T17215.321-2008, IEC 62053-21 requirements for production, and we also have a set of strict quality control means, but a small amount of product flaws are inevitable, if the inconvenience to you, we first Apologize to you here Under normal circumstances, our products can give you long-term comfort, in the event of problems, please contact your seller in time. All products are sealed, keep the seal and cover the full cover to enjoy the relevant after-sales service, so please do not damage the seal and panel cover. This product warranty period of 18 months, man-made damage will not be included in the scope of warranty.

1.3 Environmental indicators:

Working humidity	≤ 75%
Storage humidity	≤ 95%
Operating temperature	-10 ° C to + 50 ° C
Storage temperature	-30 ° C to + 70 ° C
International standard	IEC 62053-21

Accuracy	Class 1
Dustproof and waterproof	IP 51
Protective insulating enclosing instrument type	II

1.4 Technical parameters and display types:

Model	DDS (LCD display)
Reference voltage (Un)	220 V
Operating voltage	181/279 V AC (3 ~)
Rated current (Ib)	2.5 5A 10A 15A 20A 30A
Maximum current (Imax)	10A 20A 40A 60A 80A 100A
Starting current	≤ 0.004b
Tolerance overload current	30 Imax 0.01s
Working frequency	50Hz ± 10%
Internal power consumption	≤2W / 10VA
Pulse constant	800imp /1600imp
RS485 port	3 (A) and 4 (B) or 9 (A) and 10 (B)
Data storage time	> 20 years

LCD display type, after power-on display type is as follows:

The screen displays the ID address	Add	001
The baud rate is displayed	BD	9600
The screen displays the table constants	CoSE	1600imp


The fourth screen often significant

The screen displays the total charge	000000.00	KWh
--------------------------------------	-----------	-----


1.5 Basic Error:

0.05lb	$\text{Cos}\phi = 1$	$\pm 1.5\%$
0.1lb	$\text{Cos}\phi = 0.5L$	$\pm 1.5\%$
	$\text{Cos}\phi = 0.8C$	$\pm 1.5\%$
0.1lb - lmax	$\text{Cos}\phi = 1$	$\pm 1.0\%$
	$\text{Cos}\phi = 0.5L$	$\pm 1.0\%$
0.2lb - lmax	$\text{Cos}\phi = 0.8C$	$\pm 1.0\%$

1.6 Product outline drawing and structure drawing (This product is available in two configurations)

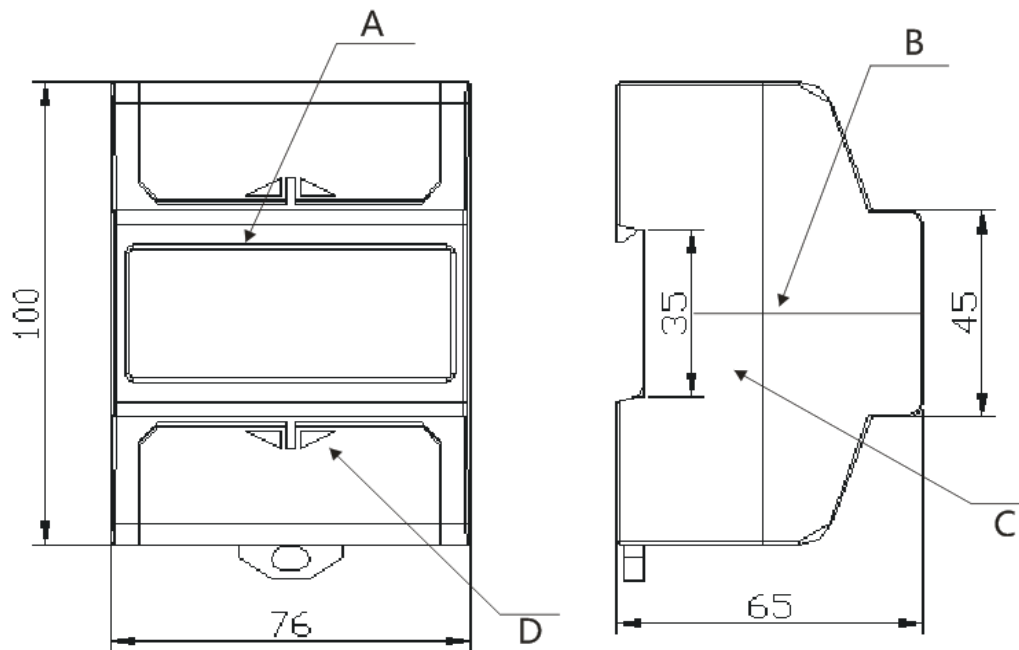

Outside drawing 1

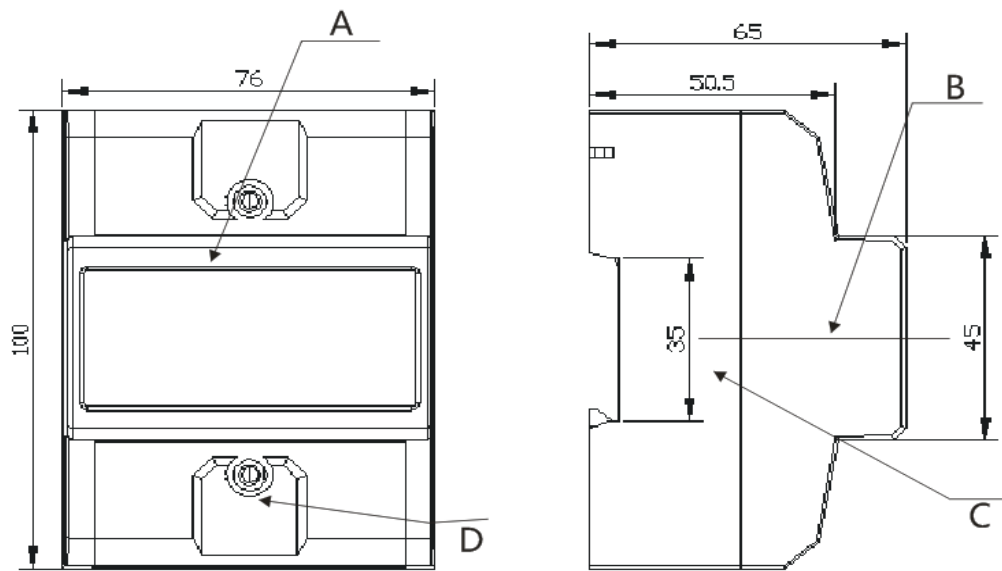

Outside drawing 2

A Front panel

B Meter cover

C Bottom

D Seal

Material

Front panel flame retardant PC

Meter cover flame retardant ABS or PC

Flame-retardant ABS or PC

1.7 Dimensions

Length 100 mm

Width 76 mm

High 65 mm

Weight 0.35 Kg (net)

1.8 Installation



Danger

Only qualified personnel familiar with the relevant procedures and procedures Insulation tools should be used for installation

Do not force power when the fuse, fuse is disconnected or the circuit breaker can not be closed Do not damage the meter lead seal



Warning

Use a measuring instrument to ensure that the power supply is Before installation, turn off all related power supplies

The meter connection should be selected in accordance with the overload current device in the circuit, the performance of the circuit-breaker, and the relevant local codes.

In the selection of external air switches or circuit breakers, should be in accordance with local standards and the current construction of the electricity design, and should be outside the air switch or circuit breaker installed in the table line, use it as a meter power equipment , And pay attention to the place near the meter in order to facilitate the operation.

In the choice of external fuses, fuses as overload protection devices, should be in accordance with local standards and the current construction of the power design, and should be external fuse, fuse in the meter into the meter line used as a broken meter Electrical equipment, and pay attention to the place near the meter in order to facilitate the operation.

The meter can be installed either directly in the indoor or waterproof case can be installed in the outdoors.

The specific situation according to the relevant local standards

Please install a padlock or similar device to prevent stealing

This watch must be installed on a fireproof wall

This watch must be installed in a ventilated and dry place

Be sure to place the watch in a protective case when it is necessary to install the meter in a location that is dusty or dangerous.


The Meter must be tested, stamped and affixed with a qualified sign before installation Place this watch in a convenient location for reading

When the meter installed in the interference of many places, such as multi-mined areas, welding machines, converters, please install anti-jamming device

After the installation is complete, please close the meter to prevent stealing

Please follow the wiring diagram below to connect the meter circuit

This product is available in two wiring options (please note that you purchase the instrument wiring type)

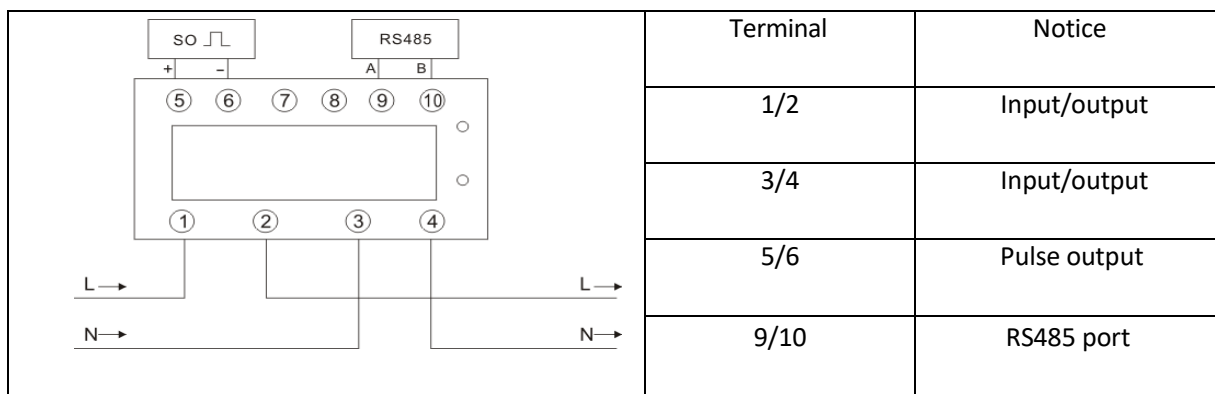

	Terminal	Notice
	L1/L2	Input/output
	N/N	Input/output
	1/2	Pulse output
	3/4	RS485 port

1.9 User guide and function introduction

1.9.1 Electricity indication

Three-phase four-wire track table on the front panel of the five LED lights, respectively, A, B, C three-phase power indicator, pulse indicator (red) and reverse indicator (yellow) indicator.

1.9.2 Features

The meter has RS485 remote meter reading function, the table has the following optional features, (the table can be with power failure, can be with backlight, with a switch output, can display the total power, current, voltage, power, power factor, Frequency, etc.) can accurately measure the active energy meter using large-screen LCD display.

1.9.3 Pulse output and RS485 output

The three-phase four-wire power meter also has a pulse output independent of the internal circuit. The 5-terminal (terminal 1) of the meter is connected to the positive terminal and the negative terminal of the terminal 6 (2).. The voltage is 5 ~ 27V DC with a maximum current of 27 mA DC. U type Meter RS485 communication port is 9 (A) & 10 (B), S type Meter RS485 communication port is 3 (A) & 4 (B)

1.9.4 RS485 communication meter reading application (communication protocol) and register address.

The energy meter through its RS485 interface to achieve long-range copy of the table, such as energy data. And through its infrared communication interface with a handheld computer to achieve close-up copy of the table of energy data. Encoding format, parity (even parity) and data transmission (eight data bits, a stop bit) in line with MODBUS-RTU standards. Communication baud rate, defaults to 1200 BPS to 2400 BPS, 4800 BPS, 9600 BPS (default) optional. If no special requirements, the instrument factory is in accordance with the default baud rate 9600 BPS to set, can we provide software to modify the table address and communication rate.

MODBUS-RTU communication protocol Description : 1.the**data format:**

Address + function code + data + CRC check code

2.The register type

This meter uses two types of registers, individually addressed

The first is the data register, read-only, using the command code 0x04 to read.

The second category is the parameter register, readable and writable, using the command code 0x03 read, write parameters using 0x10

3.The data format

Float type data: Read the internal data within the meter in line with IEEE-754 standard floating-point number, data format is 32-bit 4-byte single-precision floating-point data format.

4.Data register list

Data register address		Register Description			
HI BYTE	LO Byte	Description	unit	Format	Mode
01	00	Total Active Energy	Kwh	Floating point	Read-only

5.Parameters register list

Parameter register address		Register Description		
High byte	Low byte	Description	form	mode
-	02	Check Digit (0:Even 1:odd 2:none)	Floating point	Read & write
-	08	Communications Address((Meter NO:1-247)	Floating point	Read & write

-	10	Relay control (1: switch on 2: switch out)	Floating point	Read & write
---	----	--	----------------	--------------

6.Illustrating

1)The first category register (data register) read and operation read

voltage: Issued data (HEX): 01 04 00 00 00 02 71 CB

Data Descriptions:

Data	Detailed description
01	Instrument address
04	Function code, read data register
00 00	reading the data from the 0000 meter internal register address
00 02	Read data length for two words four bytes of data
71 CB	CRC checksum data for the front, where the high front and low in the post

Returns: 01 04 04 43 6B 58 0E 25 D8

Data Description:

Data	Detailed description
01	Instrument address
04	Return function code
04	Returned data length is 4 bytes of data length
43 6B 58 0E	The data returned as a 4-byte data type float
25 D8	Return CRC checksum

2)The second category register (parameter register) read and operate read the meter

Address: Issued data (HEX):01 03 00 08 00 02 45 C9

Date descriptions:

Data	Detailed description
01	Instrument address
03	Function code, read parameter register:
00 08	reading the data from the 00 08 meter internal register address
00 02	Read data length for two words four bytes of data
45 C9	CRC checksum data for the front, where the high front and low in the post

Returns: 01 04 03 40 00 00 00 EF F3

Data Description:

Data	Detailed description
01	Instrument address
03	Return function code
04	Returned data length is 4 bytes of data length
40 00 00 00	The data returned as a 4-byte data type float
EF F3	Return CRC checksum

3)The second category register (parameter register) write and

operation 4)Modify the meter address:

Issued data (HEX):01 10 00 08 00 02 04 40 00 00 00 E7 C9 (meter address modification 02)

Date descriptions:

Data	Detailed description
01	Instrument address
10	Function code, writing instruments internal register data
00 08	write the data from the instruments internal register address 0008

00 02	Write data length for two words, 4 bytes of data
04	Write data length of 4 bytes of data
40 00 00 00	Write the meter address, 4 bytes of data, floating-point data
E7 C9	CRC checksum

Return:01 10 00 08 00 02 C0 0A

Indicates that the return setting was successful

Modify the meter communication speed:Issued data (HEX): 01 10 00 00 00 02 04 44 96 00 00 07 73 (Change meter communication baud rate :1200bps)

Data Description:

Data	Detailed description
01	Instrument address
10	Function code, writing instruments internal register data
00 00	write the data from the instruments internal register address 0000
00 02	Register number, 2 (4 bytes)
04	Byte numbers, 4 bytes
44 96 00 00	Write the meter communication speed, 4 bytes of data, floating point data
25 7B	CRC checksum

Returns data: 01 10 00 00 00 02 41 C8

Indicates that the return setting was successful

1. 1 0 Troubleshooting

Fault condition check solution



Warning

Please do not use hand, with metal, bare wire contact meter wiring, so that to prevent electric shock in the maintenance or maintenance process, .

Be sure disconnect the power supply to the meter and disconnect the power supply from the meter installation before servicing.



Danger

Only qualified personnel who are familiar with the relevant operation and procedures can carry out maintenance for the meter.

With insulating tools when maintenance

Ensure that the protective cover is restored after repairing

Do not damage the meter seal.

Fault condition	examination	solve
Communication No indication	Whether the meter has power supply Whether or not connected to communications equipment There may be a problem with the internal circuit	Check the internal power supply The LED will blink only when an external device is connected to the RS485 or far-infrared port Please contact your technical support staff for a meter change

<p>RS485 No transmission</p>	<p>Meter ID is correct</p> <p>Whether the baud rate of the meter is wrong</p> <p>Whether the distance too far bus on the table is too much</p>	<p>Check the ID number of the meter (factory setting is NO. Of meter front panel)</p> <p>Verify that the meter baud rate matches the baud rate of the other devices it communicates with the transmission distance can not exceed 1200m</p> <p>There can not be more than 247 meters per Bus make sure that the A and B signal cables of RS485 are connected correctly</p>
<p>LCD does not take the word</p>	<p>Whether the power meter connected to the power consumption is too low</p> <p>There may be a problem with the internal circuit</p>	<p>Detection of the pulse signal is not flashing</p> <p>When the power is too low, LCD screen to be separated by a long time to change the numbers</p> <p>please contact your technical support for</p>
<p>No pulse output</p>	<p>Whether connected to the DC power supply 5,6 or 1,2-terminal connection is correct</p> <p>There may be a problem with the</p>	<p>Check that the external voltage is 5-27V DC.Tighten again to ensure that terminal 5(terminal 1) is connected to positive terminal and terminal 6 (terminal 2) is connected to negative terminal.</p> <p>Please contact your technical support staff for a meter</p>
<p>Pulse output error</p>	<p>There may be a problem with the internal</p>	<p>Please contact your technical support staff for a</p>

	circuit	meter
--	---------	-------

RS-485 Network common problems and solutions

RS-485 The communication distance

RS-485 and RS-422, the maximum transmission distance of about 1219 meters, the maximum transmission rate of 10Mb / s. Balanced twisted pair length and transmission rate is inversely proportional , below 100kb / s rate , it is possible to use the provisions of the most Long cable length. Only in a very short distance we get the highest rate of transmission. General 100 m twisted pair maximum transfer rate : only 1Mb / s

RS-485 Network Topology

RS-485 Network topology generally uses terminal-matched bus-based architecture, does not support ring or star network. It is best to use a bus to cascade the nodes, and the length of the lead-out from the bus to each node should be as short as possible so that reflected signal in the lead-out line has the least impact on the bus signal. In short, should be provided a single, continuous signal path as a bus.

RS-485 Terminal matching resistance

RS-485 Two terminal matching resistors are required, and the resistance requirement is equal to the characteristic impedance of the transmission cable. In most cases, the terminal matches between 100Ω and 120Ω. The transmission distance is less than 300 meters when no terminal matching resistor is required. The terminating resistor is connected to both ends of the transfer bus.

RS-485 The polarity of the cable

RS-485 Use two wires for transmission. Two wires are different, labeled as line A and line B respectively. Line A is the one with a higher voltage in the idle state.

RS-485 Select the cable

RS-485 You can use international and Chinese standard communication cables. The international cable standard is: AWG 22/24 is recommended.

RS-485 Communication line isolation and anti-interference

Shielded twisted pair shields should be connected to each RS-485 device's shielded terminal. Shielding Layer is only allowed to the ground slightly.

Contact us



EcoXplore PTE LTD
120 LOWER DELTA ROAD #12-16
CENDEX CENTRE
SINGAPORE 169208
TEL: (65) 6274 4840
FAX: (65) 6274 2939
EMAIL: SALES@ECOXPLORE.COM

WWW.ECOXPLORE.COM