

SK-Mon-10 Ten Input Monitor Module

SPECIFICATIONS

Normal Operating Voltage:	15-29 VDC
Stand-By Current:	3.75 mA @ 24V
Alarm Current:	60 mA (assumes all ten LEDs solid on)
Temperature Range:	32°F to 120°F (0°C to 49°C)
Humidity:	10 to 93% Non-condensing
Dimensions:	6.8" H x 5.8" W x 1.25" D
Accessories:	IDP-ACB Cabinet and Chassis
Wire Gauge:	12-18 AWG
Maximum SLC Wiring Resistance:	40 Ohms
Maximum IDC Wiring Resistance:	1500 Ohms
Maximum IDC Voltage:	12 VDC
Maximum IDC Current:	1 mA (each circuit)

BEFORE INSTALLING

If the modules will be installed in an existing operational system, inform the operator and local authority that the system will be temporarily out of service. Disconnect the power to the control panel before installing the modules. This system contains static sensitive components. Always ground yourself with a proper wrist strap before handling any circuits so that static charges are removed from the body. The housing cabinet should be metallic and suitably grounded.

NOTICE: This manual should be left with the owner/user of this equipment.

GENERAL DESCRIPTION

The SK-Mon-10 Ten Input Monitor Module is intended for use in an intelligent alarm system. Each monitor module is intended to interface between a control panel and normally open contact devices, such as pull stations. A common SLC input is used for all modules, and the initiating device loops share a common supervisory supply and ground. Otherwise, each monitor operates independently from the others. Each module has its own unique address.

A pair of rotary code switches is used to set the address of the first module from 01 to 150. The remaining modules are automatically assigned to the next nine higher addresses. Provisions are included for disabling a maximum of six unused modules in Class B installations and three unused modules in Class A installations to release the addresses to be used elsewhere. Each module also has panel controlled green LED indicators. The panel can cause the LEDs to blink, latch on, or latch off.

The module also provides short circuit isolators to prevent shorts on the fire detection and alarm system loop from disabling more than one device on the intelligent loop.

COMPATIBILITY REQUIREMENTS

To ensure proper operation, this module shall be connected to a compatible Silent Knight system control panel.

COMPONENTS


The following is a description of the SK-Mon-10 mounting framework:

- One or two SK-Mon-10 modules can be installed in an IDP-ACB cabinet.

The IDP-ACB cabinet has a built-in chassis that will accommodate one or two SK-Mon-10 modules.

The front SK-Mon-10 module positions of each chassis are offset below the rear SK-Mon-10 module positions so that all of the status indicators are visible. For cabinet dimensions refer to the IDP-ACB instruction manual.

FIGURE 1: IDP-ACB CABINET

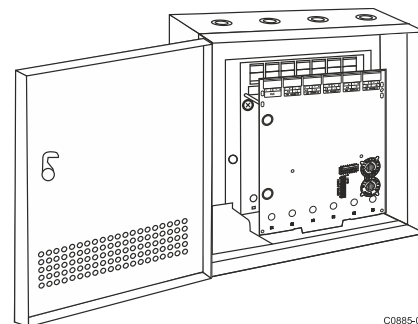

C0885-01

INCLUDED:

(6) 1 x 4 Terminal Blocks




(4) Machine Screws



(2) Nuts



(2) 1 1/4" (32mm) Stand offs




(10) 47k Ohm

End of Line Resistors



C0202-00

FIGURE 2: TYPICAL MOUNTING HOLE LOCATIONS

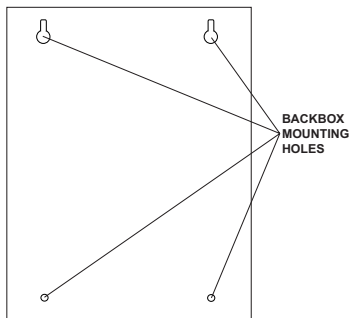

C0235-00

INSTALLATION STEPS

1. Cabinet Mounting


In a clean, dry area, mount the backbox using the four holes provided in the back surface of the cabinet (Figure 2).

2. Module Installation

There are two methods for installing a module in the rear position of a chassis. Method one is for installation of a rear module only, when no module will be installed in front of it. Refer to Figure 3 for instructions. Method two is for installation of a rear module when another module will be installed in the chassis position in front of it. Refer to Figures 4a and 4b for method two. All necessary screws and standoffs are supplied with the modules.

Step 1: Insert the bottom edge of the SK-Mon-10 module down into a rear slot of the

FIGURE 3: INSTALLATION OF REAR MODULE ONLY, METHOD ONE

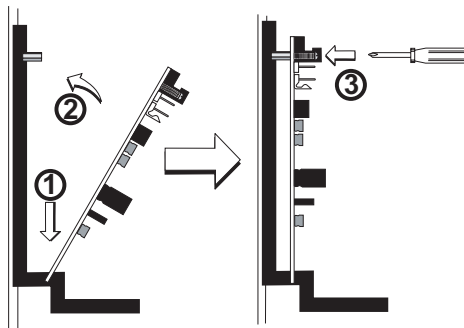


C0237-00

- Step 1: Insert the bottom of the SK-Mon-10 module down into a rear slot on the chassis.
- Step 2: Carefully swing the upper edge of the board back towards the back of the chassis until it touches the two standoffs.
- Step 3: Align two 4-40 screws with the two standoffs and tighten.
- Step 4: Address and wire the modules according to the instructions in this manual.

The steps in Figures 4a and 4b describe and illustrate module installation when the rear chassis position and the position in front of it will be filled. Front position installation is possible only if the rear position is filled with a module.

FIGURE 4A: INSTALLATION OF SK-MON-10 MODULE IN A REAR CHASSIS POSITION, METHOD TWO

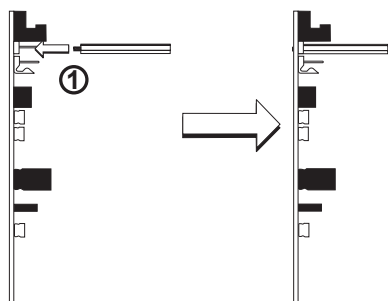


C0225-00

chassis.

- Step 2: Carefully swing the upper edge of the board towards the back of the chassis until it touches the short standoff attached to the chassis.
- Step 3: Align the long standoff with the short stand off and tighten.
- Step 1: Insert the bottom edge of the SK-Mon-10 module down into a front slot of the

FIGURE 4B: INSTALLATION OF SK-MON-10 MODULE IN FRONT CHASSIS POSITION

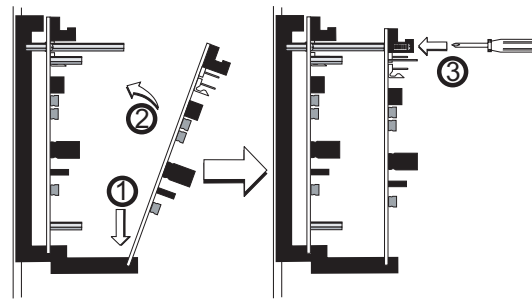

C0226-00

chassis.

- Step 2: Carefully swing the upper edge of the board towards the back of the chassis until it touches the 1/4" (31.75mm) standoffs installed on the rear module.
- Step 3: Align two 4-40 screws with the two standoffs and tighten.
- Step 4: Address and wire the modules according to the instructions in this manual.

WIRING

NOTE: All wiring must conform to applicable local codes, ordinances, and regulations.

1. Install module wiring in accordance with the job drawings and appropriate wiring diagrams.
2. All wiring to the SK-Mon-10 is done via terminal blocks. In order to properly make electrical connections strip approximately 1/4" of insulation from the end of wire, sliding the bare end of the wire under the clamping plate screw.
3. Set the address on the modules per the job drawing. Use the rotary code switches to set the address of the first module between 01 and 150.

In Class B operation, the remaining modules are automatically assigned to the next nine higher addresses. For example, if the base address switch is set to 28, the next nine modules will be addressed to 29, 30, 31, 32, 33, 34, 35, 36, and 37.

When operating in Class A, alternate modules are paired together (+0/+1, +2/+3, +4/+5, +6/+7, +8/+9), resulting in a total of five modules. For example, if the base address switch is set to 28, then 30, 32, 34 and 36 will be automatically assigned to the modules while 29, 31, 33, 35 and 37 are available to be used for other modules on the SLC. For Class A and B operation, DO NOT set the lowest address above 150, as the other modules will be assigned to nonexistent addresses.

4. A dip switch is provided to disable a maximum of six unused modules in Class B operation and three unused modules in Class A operation. Modules are disabled from the highest address and work downward. If two modules are disabled, the lowest eight addresses will be functional, while the highest two will be disabled. For example, in Class B operation, if the dip switch for Address Disable is placed on "two" and the base switch is set to 28, the modules will be assigned to 28, 29, 30, 31, 32, 33, 34 and 35 while disabling the highest two positions.
5. A communications loss feature is available on some panels. Upon a communication loss, due to a microprocessor failure at the control unit, the SK-Mon-10 will send a signal to the control unit to activate the notification device circuits upon initiating of an alarm on the SK-Mon-10. A dip switch is used to enable or disable this feature for all modules on the board.

NOTE: All references to power limited represent "Power Limited (Class 2)".

NOTE: The SK-MON-10 must have power cycled for dip switch changes to take effect.

NOTE: Power must not be applied to the unit when changing functionality of the dip switch.


WIRING NOTES

- Power-limited circuits must employ type FPL, FPLR, or FPLP cable as required by Article 760 of the NEC.
- Installation and wiring requirements shall be in accordance with NFPA 72 Standard

PROGRAMMING


The modules are programmed as devices in each system according to the programming instructions in the appropriate FACP manual.

FIGURE 5: TYPICAL INITIATING DEVICE CIRCUIT CONFIGURATION – CLASS B

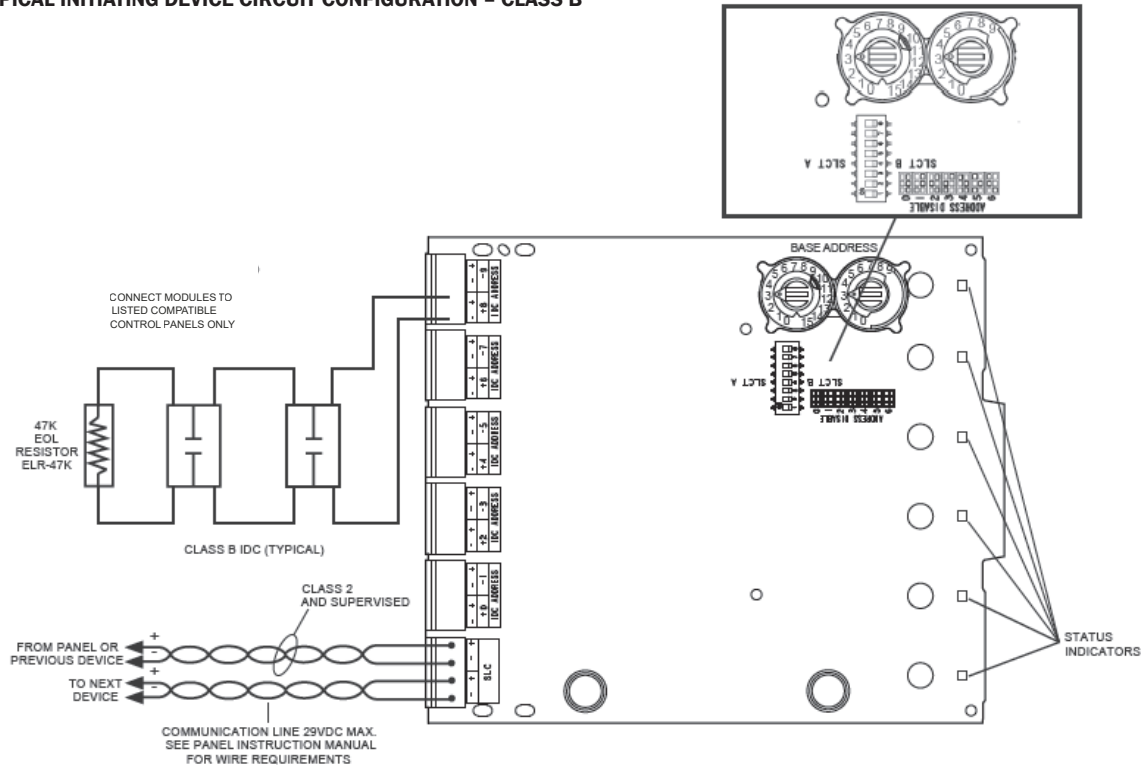

NOTE: Any number of UL listed contact closure devices may be used. DO NOT mix fire alarm initiating and supervisory devices on the same initiating device circuit. Install contact closure devices per manufacturer's installation instructions.

FIGURE 6: TYPICAL FAULT TOLERANT INITIATING DEVICE CIRCUIT CONFIGURATION – CLASS A

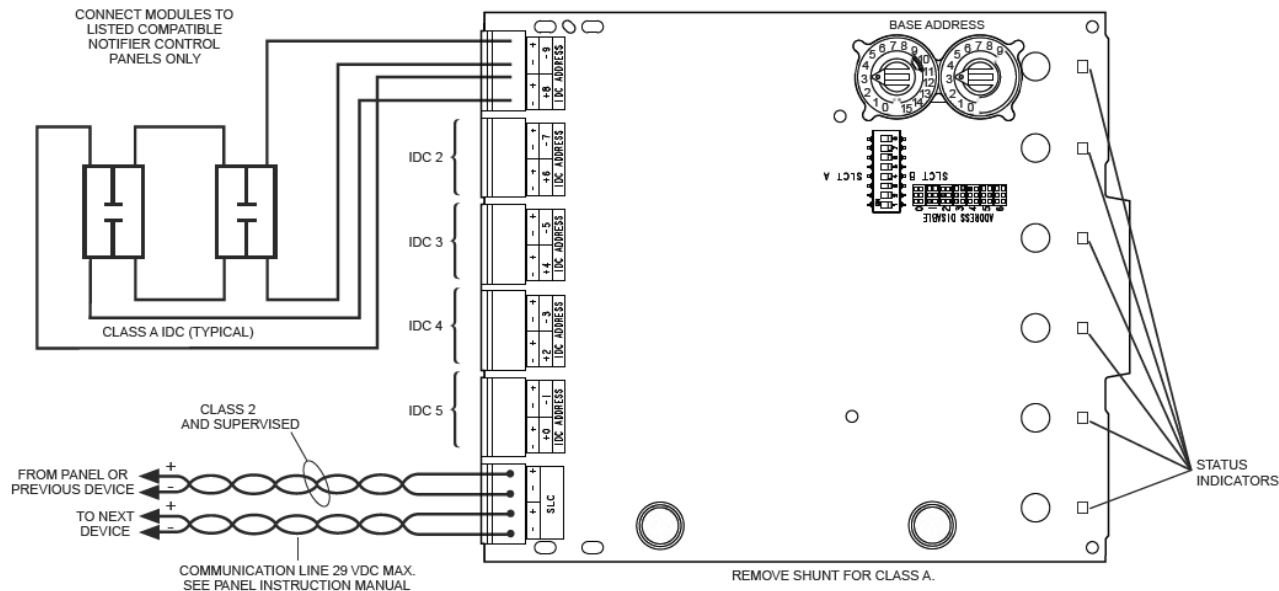

NOTE: Any number of UL listed contact closure devices may be used. DO NOT mix fire alarm initiating and supervisory devices on the same initiating device circuit. Install contact closure devices per manufacturer's installation instructions.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

DEVICE AND SYSTEM SECURITY

Before installing this product ensure that the tamper seal on the packaging is present and unbroken and the product has not been tampered with since leaving the factory. Do not install this product if there are any indications of tampering. If there are any signs of tampering the product should be returned to the point of purchase.

It is the responsibility of the system owner to ensure that all system components, i.e. devices, panels, wiring etc., are adequately protected to avoid tampering of the system that could result in information disclosure, spoofing, and integrity violation.