

User Manual



EQ Series

EQ2900/EQ2900 (w)/EQ3300/EQ3300 (w)/EQ4300/EQ4300 (w)
EQ4350/EQ4350 (w)/ EQ5000/EQ5000 (w)
EQ6000Plus/EQ6000 Plus (w)/ EQ7000 Plus/EQ7000 Plus (w)

To prevent damage to the product caused by improper use, please carefully read this manual before operation.

Copyright © FOXESS Co., Ltd. All rights reserved.

No part of this document may be reproduced, copied, or distributed in any form or by any means without prior written authorization from the company.

Trademarks



and other Fox ESS trademarks are the property of FOXESS Co., Ltd.

All other trademarks or registered trademarks mentioned in this document belong to their respective owners.

Software License

Commercial use of any part or all of the firmware or software developed by the company is strictly prohibited.

Reverse engineering, decompilation, or any other actions that destroy the original design of the company's software are prohibited.

This document is intended as a usage guide only. All statements, information, and recommendations herein do not constitute any warranty, express or implied.

Due to product version updates or other reasons, the content of this document may be updated periodically. Please download the latest version from the official website if needed.

FOXESS Co., Ltd

Add:

No.939, Jinhai Third Road, New Airport Industry Area, Longwan District, Wenzhou, Zhejiang, China

Tel: 0510- 68092998

Postcode: 325024

WWW.FOX-ESS.COM

Version V1.0.9

Date 2025-11

Content

1 Notes on This Manual	1
1.1 Scope of Validity	1
1.2 Target Group	1
1.3 Symbols Used	1
2 Safety Precautions	4
2.1 Personnel Safety	4
2.2 Handling	4
2.3 Installation	5
2.4 Mounting	5
3 Response to Emergency Situations	7
4 Fire Protection Function	8
4.1 Fire Extinguishing Mechanism	8
4.2 Technical Specifications	9
5 Warm up Function	10
5.1 During Full Warm up Period	10
5.2 During PV Warm up Period	10
6 Product Introduction	12
6.1 EQ2900 Specifications	12
6.2 EQ2900 (w) Specifications	15
6.3 EQ3300 Specifications	18
6.4 EQ3300 (w) Specifications	21
6.5 EQ4300 Specifications	24
6.6 EQ4300 (w) Specifications	27
6.7 EQ4350 Specifications	30
6.8 EQ4350 (w) Specifications	33

6.9 EQ5000 Specifications	36
6.10 EQ5000 (w) Specifications	39
6.11 EQ6000 Plus Specifications	42
6.12 EQ6000 Plus (w) Specifications	45
6.13 EQ7000 Plus Specifications	48
6.14 EQ7000 Plus (w) Specifications	51
7 Product Features	54
7.1 Battery System Features	54
8 Installation	56
8.1 Items in the package	56
8.2 Clearance	57
8.3 Tools	58
8.4 Installation Steps	58
8.5 Wiring Steps	61
8.6 System Operation	63
8.7 Disassembly Steps	64
9 Commissioning	65
10 Exclusion	67
11 Troubleshooting and Maintenance	68
11.1 Maintenance	68
11.2 Storage with Low SOC	68
11.3 Troubleshooting	69
12 Appendix	70
12.1 Quality Guarantee	70
12.2 Contact Us	71

1 Notes on This Manual

The document describes the installation, commissioning, maintenance and troubleshooting of the following high voltage battery listed below.

EQ

Note: EQ = EQ-M + EQ-S

The battery chemistry of these products is Lithium Iron Phosphate. This manual is designed for qualified personnel only. The tasks described in this document should be performed by authorized and qualified technicians only.

After Installation the Installer must explain the user manual to the end user.

1.1 Scope of Validity

This manual describes the assembly, installation, commissioning, maintenance and troubleshooting of the following model(s) of products:

EQ2900/EQ2900 (w)/EQ3300/EQ3300 (w)/EQ4300/EQ4300 (w)EQ4350/EQ4350 (w)

EQ5000/ EQ5000 (w)/EQ6000Plus/EQ6000 Plus (w)/ EQ7000 Plus/ EQ7000 Plus (w)

Please keep this manual where it will be accessible at all times.

1.2 Target Group

This manual is intended for use by qualified electricians only. All procedures described herein shall be performed by trained and experienced electrical personnel in compliance with basic electrical safety requirements.

1.3 Symbols Used

The following symbols are used in the manual to highlight information in order to ensure the safety of the user's person and property when using the product, and to use the product more efficiently and optimally. The following symbols may appear in this manual, and the meanings they represent are listed below:

Danger!

"Danger" indicates a hazardous situation which, if not avoided, will result in death or serious injury.

Warning!

"Warning" indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

Note!

"Note" provides important tips and guidance.

Symbols	Explanation
	CE mark. The inverter complies with the relevant EU directives.
	The inverter meets the requirements of the UK product safety certification.
	Danger of high voltages. Danger to life due to high voltages in the inverter!
	Do not place nor install near flammable or explosive materials.
	Install the product out of reach of children.
	Prohibit the use of water to extinguish fires.
	Prohibition of private maintenance.
	Prohibit Connector Reversal.
	Read the manual before performing any operations on the inverter.



Do not dispose of the product with household wastes.



Disconnect the equipment before carrying out maintenance or repair.



Observe precautions for handling electrostatic discharge sensitive devices.



PE conductor terminal.



Caution, risk of electric shock, energy storage timed discharge.

2 Safety Precautions

2.1 Personnel Safety

Any work on the batteries should be handled by purchaser approved installer and hence it is understood that the purchaser approved installer should familiarize themselves with the contents of this manual before any maintenance or installation is carried out on the system.

Danger!

Operating Requirements

- High voltage exists inside the equipment. Unauthorized removal of necessary protective measures, improper use, and improper installation and operation may cause serious safety hazards, shock hazards, or equipment damage, and the resulting damage to the equipment is not covered by the warranty.
- Do not energize the equipment without completing the installation or without professional confirmation, and strictly prohibit operation with electricity.

Warning!

Operating Requirements

- Always use special insulated tools for wiring operations. Direct contact or contact with other conductors or indirect contact with the power supply equipment through wet objects is prohibited.
- During operation of the equipment, the enclosure temperature is high and there is a risk of burns. Before touching any part of the inverter, make sure that the equipment and its surfaces are at a contact-safe temperature and voltage before proceeding.

Note!

Personnel requirements

- All operations, including transportation, installation, start-up and maintenance, must be performed by qualified and trained personnel.

2.2 Handling

- Do not expose battery to open flame.
- Store in a cool and dry place with ample ventilation.
- Do not store the product near water sources.
- Store the product on a flat surface.
- Recommend to store the product out of reach of children and animals.
- Do not damage the unit by dropping, deforming, impacting, cutting or penetrating with a sharp object. It may cause leakage of electrolyte or fire.
- Do not touch any liquid spilled from the product. There is a risk of electric shock or damage to skin.
- Always handle the battery wearing the insulated gloves.
- Do not step on the product or place any foreign objects on it. This can result in damage.

- Do not charge or discharge damaged battery.



2.3 Installation

- Do not connect the battery directly to inverter conductors or PV conductors. This will damage the battery and may result in explosion.
- After unpacking, please check the product for damages and missing parts.
- Make sure that the inverter and battery is completely turned off before commencing installation.
- Do not interchange the positive and negative terminals of the battery.
- Ensure that there is no short circuit of the terminals or with any external device.
- Do not exceed the battery voltage rating of the inverter.
- Do not connect the battery to any incompatible inverter.
- Do not connect different battery types together.
- Please ensure that all the batteries are grounded properly.
- Do not open the battery to repair or disassemble. Only Fox ESS is allowed to carry out any such repairs.
- In case of fire, use only dry powder fire extinguisher. Liquid extinguishers should not be used.
- Please refrain from installing the battery near any water source to prevent accidental submersion.
- Recommend to install the battery away from children or pets.
- Do not use battery in high static environment where the protection device might be damaged.
- Do not install with other batteries or cells.
- Please ensure on installation site that the deviation of voltages between new batteries and every single present battery is less than 0.5V.
- Recommend to check the new batteries mounted on-site comply to the warranty scope or have ever been re-charged within 5 months; on top of that, please make sure the SOC of present battery system onsite is $50\% \pm 5\%$.

2.4 Mounting

Make sure the installation site meets the following conditions:

- Ensure the installation area is protected from direct sunlight, rain, and snow accumulation, a shelter(e.g., rain canopy)is recommended.
- Keep the installation area away from high-temperature sources, flammable or explosive materials and other potential explosion hazards such as gas valves, LPG cylinders, heat pumps, firewood stacks, etc.
- The installation area must be completely waterproof, with a hard, level floor, and the wall should not have noticeable inclined angle.
- Maintain low and stable humidity with good ventilation; dust and dirt within the installation area must be minimized.
- Position the installation area away from television antennas or antenna cables to avoid lightning strikes and electromagnetic interference.
- Avoid the presence of flammable debris around the battery, such as cotton, fabric, haystacks, etc. which may be ignited by sparks and then lead the fire source to the battery, thus causing the battery to burn.
- Avoid the presence of hot or flammable objects around the battery, such as hydraulic bottles natural gas, oxygen, etc.), heat pumps and so on.

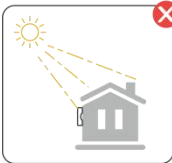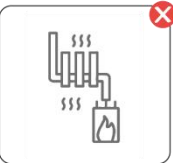 No direct sunlight	 No rain exposure	 No snow build	 Use shielding to prevent direct sunlight	 Use shielding to rain exposure	 Use shielding to snow laying up
 Direct sunlight	 Rain exposure	 Snow lay up	 Heat pumps	 Hydraulic bottles	 Flammable substance

3 Response to Emergency Situations

The batteries comprise of multiple batteries connected in series. It is designed to prevent hazards or failures. However, Fox ESS cannot guarantee their absolute safety.

Under exposure to the internal materials of the battery the following recommendations should be carried out by the user.

- If there has been inhalation, please leave the contaminated area immediately and seek medical attention.
- If there has been contact with eyes, rinse the eyes with running water for 15 minutes and seek medical attention immediately.
- If there has been contact with the skin, wash the contacted area with soap thoroughly and seek medical attention immediately.
- If there has been ingestion, induce vomiting and seek medical attention.

Fire Situation

In situations where the battery is on fire, if it is safe to do so, disconnect the battery pack by turn off the circuit breaker to shut off the power to the system. Use FM-200 or CO₂ fire extinguisher for the battery and an ABC fire extinguisher for the other parts of the system.

Under any fire situation, please evacuate the people from the building immediately before trying to extinguish it.

Water Situation

The battery modules are not water resistant. Hence care should be taken not to get it wet. If you find the battery completely or partially submerged in water do not try to open. Contact an authorized personnel or Fox ESS for further instructions.

4 Fire Protection Function

Despite the extremely stable chemical properties of lithium iron phosphate batteries and the multiple protections, each battery unit is equipped with a fire protection module to further ensure the safety and reliability of Fox ESS batteries. This innovative module utilizes a new type of aerosol fire extinguishing device with features such as pressure-free storage, no maintenance required, high extinguishing efficiency, non-toxic and harmless characteristics.

4.1 Fire Extinguishing Mechanism




The fire extinguishing mechanisms of common agents mainly include isolation, smothering, cooling, and chemical suppression, with different agents exhibiting varying mechanisms. The fire extinguishing mechanism of thermal aerosols involves two main mechanisms: the cooling effect from endothermic decomposition and the chemical suppression effects in both gas and solid phases, which work synergistically. Additionally, the gaseous components in the products of the aerosol extinguishing agent also play a supportive role.

Cooling Fire Extinguishing Effect from Endothermic Decomposition

The cooling effect of thermal aerosol extinguishing agents is primarily due to the endothermic decomposition of metal oxides and carbonates. When a fire occurs, the solid particles in the aerosol rapidly absorb heat from the fire source, resulting in a decrease in flame temperature. This reduction minimizes the heat radiating to the burning surface and lowers the energy required to dissociate vaporized combustible materials into free radicals. As a result, the combustion reaction is effectively suppressed.

Gas Phase Chemical Suppression Effect


Under thermal conditions, vaporized metal ions, such as strontium (Sr), potassium (K), and magnesium (Mg), exist as vapors and participate in multiple chain reactions with active combustion radicals including hydrogen ($\text{H}\cdot$), hydroxyl ($\cdot\text{OH}$), and oxygen ($\text{O}\cdot$). For example:



Through continuous action, this process consumes active combustion groups, significantly reducing their concentration and effectively suppressing combustion.

Solid Phase Chemical Suppression Effect

The solid particles in thermal aerosol extinguishing agents can adsorb intermediates such as $\bullet\text{OH}$, $\text{H}\bullet$, and $\text{O}\bullet$ from chain reactions, catalyzing their recombination into stable molecules. This interrupts the essential branching chain reactions in the combustion process. For example:



4.2 Technical Specifications

Activation method: Thermal activation

Thermal activation temperature: $\geq 170^\circ\text{C}$

Discharge time: ≤ 5 seconds

Notes:

Please contact Fox ESS for immediate replacement if the fire protection module is activated.

Non-professionals should not disassemble the battery without authorization.

Do not touch the device until the casing has cooled after the internal fire extinguisher has been activated to prevent burns.

For further assistance, please contact an authorized personnel or Fox ESS for further instructions.

5 Warm up Function

In low-temperature climates at high altitudes or latitudes, particularly during winter, the charging and discharging performance of batteries can significantly decline due to cold temperatures. To address this Fox ESS has introduced a "Battery Warm up" feature, enabling the battery system to operate effectively extremely low temperatures. This feature is exclusively available in the warm-up versions.

When the battery temperature is between -25°C and 1°C^{*1} , the system will warm up the battery to 10°C^{*1} . Warming up will stop once this temperature is reached, but if the battery temperature falls below 1°C^{*1} again, the warm up system will reactivate.

^{*1}: The user can set the start warm-up temperature and end warming up temperature through the inverter LCD or web page.

5.1 During Full Warm up Period

The warm up system prioritizes energy from the photovoltaic (PV) system. If PV power is insufficient, it will draw energy from either the battery or the grid, depending on the state of charge (SOC) of the battery:

- If the battery SOC $\geq 40\%$, energy will be drawn from the battery, following the priority order: PV > Battery > Grid.
- If the battery SOC $< 40\%$, energy will be sourced from the grid, with the following priority order: PV > Grid > Battery.

The full warming up function is turned off by default and must be enabled through the web interface or inverter settings when required.

5.2 During PV Warm up Period

The battery will only be warm up when surplus energy is available from the PV system.

The user can change the PV warm-up time range through the inverter LCD or web page

Important Notes:

1. The battery can only discharge when the internal temperature of battery is above -10°C . It can only charge when the internal temperature of battery is above 0°C .
2. Please check that the wiring is properly connected and that all batteries are the warm up versions; otherwise, the Warming up function will not operate.
3. Warming up control is based on the internal cell temperature of the battery, rather than the ambient temperature. Typically, the cell temperature will be higher than the ambient

temperature under normal operating conditions.

For further assistance, please contact an authorized personnel or Fox ESS for further instructions.

Note: Products with "(w)" suffix, such as EQ2900 (w) and EQ4300 (w), among others, are equipped with Battery Warm up function. Without the "(w)" suffix, like EQ2900 and EQ4300, among others, are not equipped with the Battery Warm up function.

6 Product Introduction

- EQ-S is the battery module, and EQ-M includes system controller and battery module;
- EQ-M contains the controller of the entire system, so each system must have one EQ-M;
- Ensure that each system has only 1 EQ-M and a maximum of n EQ-S, where n=6 for EQ2900/EQ2900 (W), EQ4300/EQ4300 (W), EQ6000 Plus/EQ6000 Plus (w), n=5 for EQ3300/EQ3300(w), EQ4350/EQ4350 (w), EQ5000/EQ5000 (w) and n=4 for EQ7000 Plus/ EQ7000 Plus (w).

6.1 EQ2900 Specifications

6.1.1 EQ2900-S Specifications

Specifications for EQ2900-S	
Model No.	EQ2900-S
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	57.6
Nominal capacity (Ah)	50
Nominal energy (kWh)	2.88
Battery voltage range (V)	52.2~65.7
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	25
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*155
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	31.7±5%
Communication interfaces	CAN

6.1.2 EQ2900-M Specifications

Specifications for EQ2900-M	
Model No.	EQ2900-M
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	57.6
Nominal capacity (Ah)	50
Nominal energy (kWh)	2.88
Battery voltage range (V)	52.2~65.7
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	25
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*170
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	34.6±5%
Communication interfaces	CAN

6.1.3 Battery System Specifications for EQ2900

Specifications for EQ2900						
Model No.	EQ2900-L2	EQ2900-L3	EQ2900-L4	EQ2900-L5	EQ2900-L6	EQ2900-L7
Technical Properties						
Battery designation	IFpP41/149/ 102[(18S)2S JE/-10+50/90	IFpP41/149/1 02[(18S)3S JE/-10+50/90	IFpP41/149/1 02[(18S)4S JE/-10+50/90	IFpP41/149/1 02[(18S)5S JE/-10+50/90	IFpP41/149/1 02[(18S)6S JE/-10+50/90	IFpP41/149/ 102[(18S)7S JE/-10+50/90
The number of batteries	1EQ2900-M +1EQ2900-S	1EQ2900-M+ 2EQ2900-S	1EQ2900-M+ 3EQ2900-S	1EQ2900-M+ 4EQ2900-S	1EQ2900-M+ 5EQ2900-S	1EQ2900-M+ 6EQ2900-S
Nominal voltage (V)	115.2	172.8	230.4	288.0	345.6	403.2
Nominal capacity (Ah)	50	50	50	50	50	50
Nominal energy (kWh)	5.76	8.64	11.52	14.40	17.28	20.16
Battery voltage range (V)	104.4~131.4	156.6~197.1	208.8~262.8	261.0~328.5	313.2~394.2	365.4~459.9
Max. charge/discharge current (A)	50/50					
(CC-CV) Standard charging current (A)	25					
Constant current and constant voltage charging cut-off current (A)	2					
Peak discharge Current (60s) (A)	65					
Depth of discharge(%)	90					
Storage temperature (°C)	-10~50					
Operating charge/discharge temperature (°C)	0~55/-10~55					
Discharge capacity (Ah)	35@-10±2°C @1C; 50@25±2°C @1C; 47@55±2°C @1C					
Cycle life	≥6000 @25°C @ 70%SOH					
Ingress protection	IP65					
Protective class	Class I					
Dimensions (L*W*H) (mm)	570*380*350	570*380*470	570*380*590	570*380*710	570*380*830	570*380*950
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15	±3/±3/±18	±3/±3/±21
Weight (kg)±5%	66.3	98.0	129.7	161.4	193.1	224.8
Communication interfaces	CAN					

6.2 EQ2900 (w) Specifications

6.2.1 EQ2900-S (w) Specifications

Specifications for EQ2900-S (w)	
Model No.	EQ2900-S (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	57.6
Nominal capacity (Ah)	50
Nominal energy (kWh)	2.88
Battery voltage range (V)	52.2~65.7
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	25
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*155
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	31.7±5%
Communication interfaces	CAN
^{*1} warm up function off ^{*2} warm up function on	

6.2.2 EQ2900-M (w) Specifications

Specifications for EQ2900-M	
Model No.	EQ2900-M (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	57.6
Nominal capacity (Ah)	50
Nominal energy (kWh)	2.88
Battery voltage range (V)	52.2~65.7
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	25
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*170
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	34.6±5%
Communication interfaces	CAN
^{*1} warm up function off ^{*2} warm up function on	

6.2.3 Battery System Specifications for EQ2900 (w)

Specifications for EQ2900 (w)						
Model No.	EQ2900-L2(w)	EQ2900-L3(w)	EQ2900-L4(w)	EQ2900-L5(w)	EQ2900-L6(w)	EQ2900-L7(w)
Technical Properties						
Battery designation	IFpP41/149/10 2[(18S)2S JE/-10+50/90	IFpP41/149/10 2[(18S)3S JE/-10+50/90	IFpP41/149/10 2[(18S)4S JE/-10+50/90	IFpP41/149/10 2[(18S)5S JE/-10+50/90	IFpP41/149/10 2[(18S)6S JE/-10+50/90	IFpP41/149/10 2[(18S)7S JE/-10+50/90
The number of batteries	1EQ2900-M(w))+1EQ2900-S(w)	1EQ2900-M(w))+2EQ2900-S(w)	1EQ2900-M(w))+3EQ2900-S(w)	1EQ2900-M(w))+4EQ2900-S(w)	1EQ2900-M(w))+5EQ2900-S(w)	1EQ2900-M(w))+6EQ2900-S(w)
Nominal voltage (V)	115.2	172.8	230.4	288.0	345.6	403.2
Nominal capacity (Ah)	50	50	50	50	50	50
Nominal energy (kWh)	5.76	8.64	11.52	14.40	17.28	20.16
Battery voltage range (V)	104.4~131.4	156.6~197.1	208.8~262.8	261.0~328.5	313.2~394.2	365.4~459.9
Max. charge/discharge current (A)	50/50					
(CC-CV) Standard charging current (A)	25					
Constant current and constant voltage charging cut-off current (A)	2					
Peak discharge Current (60s) (A)	65					
Depth of discharge(%)	90					
Storage temperature (°C)	-10~50					
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}					
Discharge capacity (Ah)	35@-10±2°C @1C; 50@25±2°C @1C; 47@55±2°C @1C					
Cycle life	≥6000 @25°C @ 70%SOH					
Ingress protection	IP65					
Protective class	Class I					
Dimensions (L*W*H) (mm)	570*380*350	570*380*470	570*380*590	570*380*710	570*380*830	570*380*950
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15	±3/±3/±18	±3/±3/±21
Weight (kg)±5%	66.3	98.0	129.7	161.4	193.1	224.8
Communication interfaces	CAN					
* ¹ warm up function off * ² warm up function on						

6.3 EQ3300 Specifications

6.3.1 EQ3300-S Specifications

Specifications for EQ3300-S	
Model No.	EQ3300-S
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	64
Nominal capacity (Ah)	50
Nominal energy (kWh)	3.2
Battery voltage range (V)	58.0~73.0
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	25
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*170
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	36.0±5%
Communication interfaces	CAN

6.3.2 EQ3300-M Specifications

Specifications for EQ3300-M	
Model No.	EQ3300-M
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	64
Nominal capacity (Ah)	50
Nominal energy (kWh)	3.2
Battery voltage range (V)	58.0~73.0
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	25
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*185
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	39.0±5%
Communication interfaces	CAN

6.3.3 Battery System Specifications for EQ3300

Specifications for EQ3300					
Model No.	EQ3300-L2	EQ3300-L3	EQ3300-L4	EQ3300-L5	EQ3300-L6
Technical Properties					
Battery designation	IFpP41/149/102[(20S)2S]E/-10+50/90	IFpP41/149/10 2[(20S)3S]E/-10+50/90	IFpP41/149/102[(20S)4S]E/-10+50/90	IFpP41/149/102[(20S)5S]E/-10+50/90	IFpP41/149/102[(20S)6S]E/-10+50/90
The number of batteries	1EQ3300-M+1E Q3300-S	1EQ3300-M+2 EQ3300-S	1EQ3300-M+3E Q3300-S	1EQ3300-M+4E Q3300-S	1EQ3300-M+5E Q3300-S
Nominal voltage (V)	128.0	192.0	256.0	320.0	384.0
Nominal capacity (Ah)	50	50	50	50	50
Nominal energy (kWh)	6.4	9.6	12.8	16.0	19.2
Battery voltage range (V)	116.0~146.0	174.0~219.0	232.0~292.0	290.0~365.0	348.0~438.0
Max. charge/discharge current (A)	50/50				
(CC-CV) Standard charging current (A)	25				
Constant current and constant voltage charging cut-off current (A)	2				
Peak discharge Current (60s) (A)	65				
Depth of discharge(%)	90				
Storage temperature (°C)	-10~50				
Operating charge/discharge temperature (°C)	0~55/-10~55				
Discharge capacity (Ah)	35@-10±2°C @1C; 50@25±2°C @1C; 47@55±2°C @1C				
Cycle life	≥6000 @25°C @ 70%SOH				
Ingress protection	IP65				
Protective class	Class I				
Dimensions (L*W*H) (mm)	570*380*380	570*380*515	570*380*650	570*380*785	570*380*920
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15	±3/±3/±18
Weight (kg)±5%	75.0	111.0	147.0	183.0	219.0
Communication interfaces	CAN				

6.4 EQ3300 (w) Specifications

6.4.1 EQ3300-S (w) Specifications

Specifications for EQ3300-S (w)	
Model No.	EQ3300-S (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	64
Nominal capacity (Ah)	50
Nominal energy (kWh)	3.2
Battery voltage range (V)	58.0~73.0
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	25
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*170
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	36.0±5%
Communication interfaces	CAN
^{*1} warm up function off ^{*2} warm up function on	

6.4.2 EQ3300-M (w) Specifications

Specifications for EQ3300-M	
Model No.	EQ3300-M (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	64
Nominal capacity (Ah)	50
Nominal energy (kWh)	3.2
Battery voltage range (V)	58.0~73.0
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	25
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*185
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	39.0±5%
Communication interfaces	CAN
*1warm up function off *2warm up function on	

6.4.3 Battery System Specifications for EQ3300 (w)

Specifications for EQ3300 (w)					
Model No.	EQ3300-L2 (w)	EQ3300-L3 (w)	EQ3300-L4 (w)	EQ3300-L5 (w)	EQ3300-L6 (w)
Technical Properties					
Battery designation	IFpP41/149/102[(20S)2S]E/-10+50/90	IFpP41/149/102[(2 0S)3S]E/-10+50/90	IFpP41/149/102[(20S)4S]E/-10+50/90	IFpP41/149/102[(20S)5S]E/-10+50/90	IFpP41/149/102[(2 0S)6S]E/-10+50/90
The number of batteries	1EQ3300-M (w)+1EQ3300-S (w)	1EQ3300-M (w)+2EQ3300-S (w)	1EQ3300-M (w)+3EQ3300-S (w)	1EQ3300-M (w)+4EQ3300-S (w)	1EQ3300-M (w)+5EQ3300-S (w)
Nominal voltage (V)	128.0	192.0	256.0	320.0	384.0
Nominal capacity (Ah)	50	50	50	50	50
Nominal energy (kWh)	6.4	9.6	12.8	16.0	19.2
Battery voltage range (V)	116.0~146.0	174.0~219.0	232.0~292.0	290.0~365.0	348.0~438.0
Max. charge/discharge current (A)	50/50				
(CC-CV) Standard charging current (A)	25				
Constant current and constant voltage charging cut-off current (A)	2				
Peak discharge Current (60s) (A)	65				
Depth of discharge(%)	90				
Storage temperature (°C)	-10~50				
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}				
Discharge capacity (Ah)	35@-10±2°C @1C; 50@25±2°C @1C; 47@55±2°C @1C				
Cycle life	≥6000 @25°C @ 70%SOH				
Ingress protection	IP65				
Protective class	Class I				
Dimensions (L*W*H) (mm)	570*380*380	570*380*515	570*380*650	570*380*785	570*380*920
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15	±3/±3/±18
Weight (kg)±%	75.0	111.0	147.0	183.0	219.0
Communication interfaces	CAN				
^{*1} warm up function off ^{*2} warm up function on					

6.5 EQ4300 Specifications

6.5.1 EQ4300-S Specifications

Specifications for EQ4300-S	
Model No.	EQ4300-S
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	57.6
Nominal capacity (Ah)	75
Nominal energy (kWh)	4.32
Battery voltage range (V)	52.2~65.7
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	37.5
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*173
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	36.9±5%
Communication interfaces	CAN

6.5.2 EQ4300-M Specifications

Specifications for EQ4300-M	
Model No.	EQ4300-M
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	57.6
Nominal capacity (Ah)	75
Nominal energy (kWh)	4.32
Battery voltage range (V)	52.2~65.7
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	37.5
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*170
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	39.7±5%
Communication interfaces	CAN

6.5.3 Battery System Specifications for EQ4300

Specifications for EQ4300						
Model No.	EQ4300-L2	EQ4300-L3	EQ4300-L4	EQ4300-L5	EQ4300-L6	EQ4300-L7
Technical Properties						
Battery designation	IFpP40/150/ 112[(18S)2S JE/-10+50/90	IFpP40/150/1 12[(18S)3S JE/-10+50/90	IFpP40/150/1 12[(18S)4S JE/-10+50/90	IFpP40/150/1 12[(18S)5S JE/-10+50/90	IFpP40/150/ 112[(18S)6S JE/-10+50/90	IFpP40/150/ 112[(18S)7S JE/-10+50/90
The number of batteries	1EQ4300-M +1EQ4300-S	1EQ4300-M+ 2EQ4300-S	1EQ4300-M+ 3EQ4300-S	1EQ4300-M+ 4EQ4300-S	1EQ4300-M+ 5EQ4300-S	1EQ4300-M+6 EQ4300-S
Nominal voltage (V)	115.2	172.8	230.4	288.0	345.6	403.2
Nominal capacity (Ah)	75	75	75	75	75	75
Nominal energy (kWh)	8.64	12.96	17.28	21.60	25.92	30.24
Battery voltage range (V)	104.4~131.4	156.6~197.1	208.8~262.8	261.0~328.5	313.2~394.2	365.4~459.9
Max. charge/discharge current (A)	50/50					
(CC-CV) Standard charging current (A)	37.5					
Constant current and constant voltage charging cut-off current (A)	2					
Peak discharge Current (60s) (A)	65					
Depth of discharge(%)	90					
Storage temperature (°C)	-10~50					
Operating charge/discharge temperature (°C)	0~55/-10~55					
Discharge capacity (Ah)	56@-10±2°C @0.5C; 75@25±2°C @0.5C; 73@55±2°C @0.5C					
Cycle life	≥6000 @25°C @ 70%SOH					
Ingress protection	IP65					
Protective class	Class I					
Dimensions (L*W*H) (mm)	570*380*368	570*380*506	570*380*644	570*380*782	570*380*920	570*380*1058
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15	±3/±3/±18	±3/±3/±21
Weight (kg)±5%	76.6	113.5	150.4	187.3	224.2	261.1
Communication interfaces	CAN					

6.6 EQ4300 (w) Specifications

6.6.1 EQ4300-S (w) Specifications

Specifications for EQ4300-S (w)	
Model No.	EQ4300-S (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	57.6
Nominal capacity (Ah)	75
Nominal energy (kWh)	4.32
Battery voltage range (V)	52.2~65.7
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	37.5
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*173
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	36.9±5%
Communication interfaces	CAN
^{*1} warm up function off ^{*2} warm up function on	

6.6.2 EQ4300-M (w) Specifications

Specifications for EQ4300-M	
Model No.	EQ4300-M (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	57.6
Nominal capacity (Ah)	75
Nominal energy (kWh)	4.32
Battery voltage range (V)	52.2~65.7
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	37.5
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*170
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	39.7±5%
Communication interfaces	CAN
^{*1} warm up function off ^{*2} warm up function on	

6.6.3 Battery System Specifications for EQ4300 (w)

Specifications for EQ4300 (w)						
Model No.	EQ4300-L2(w)	EQ4300-L3(w)	EQ4300-L4(w)	EQ4300-L5(w)	EQ4300-L6 (w)	EQ4300-L7(w)
Technical Properties						
Battery designation	IFpP40/150/11 2[(18S)2S JE/-10+50/90	IFpP40/150/11 2[(18S)3S JE/-10+50/90	IFpP40/150/11 2[(18S)4S JE/-10+50/90	IFpP40/150/11 2[(18S)5S JE/-10+50/90	IFpP40/150/11 2[(18S)6S JE/-10+50/90	IFpP40/150/ 112[(18S)7S JE/-10+50/90
The number of batteries	1EQ4300-M (w)+1EQ4300- S (w)	1EQ4300-M (w)+2EQ4300- S (w)	1EQ4300-M (w)+3EQ4300- S (w)	1EQ4300-M (w)+4EQ4300- S (w)	1EQ4300-M (w)+5EQ4300- S (w)	1EQ4300-M (w)+6EQ4300- S (w)
Nominal voltage (V)	115.2	172.8	230.4	288.0	345.6	403.2
Nominal capacity (Ah)	75	75	75	75	75	75
Nominal energy (kWh)	8.64	12.96	17.28	21.60	25.92	30.24
Battery voltage range (V)	104.4~131.4	156.6~197.1	208.8~262.8	261.0~328.5	313.2~394.2	365.4~459.9
Max. charge/discharge current (A)	50/50					
(CC-CV) Standard charging current (A)	37.5					
Constant current and constant voltage charging cut-off current (A)	2					
Peak discharge Current (60s) (A)	65					
Depth of discharge(%)	90					
Storage temperature (°C)	-10~50					
Operating charge/discharge temperature (°C)	0~55/-10~55* ¹ -25~55/-25~55* ²					
Discharge capacity (Ah)	56@-10±2°C @0.5C; 75@25±2°C @0.5C; 73@55±2°C @0.5C					
Cycle life	≥6000 @25°C @ 70%SOH					
Ingress protection	IP65					
Protective class	Class I					
Dimensions (L*W*H) (mm)	570*380*368	570*380*506	570*380*644	570*380*782	570*380*920	570*380*1058
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15	±3/±3/±18	±3/±3/±21
Weight (kg)±5%	76.6	113.5	150.4	187.3	224.2	261.1
Communication interfaces	CAN					
* ¹ warm up function off * ² warm up function on						

6.7 EQ4350 Specifications

6.7.1 EQ4350-S Specifications

Specifications for EQ4350-S	
Model No.	EQ4350-S
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	64
Nominal capacity (Ah)	77
Nominal energy (kWh)	4.32
Battery voltage range (V)	58.0~73.0
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	38.5
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*173
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	41±5%
Communication interfaces	CAN

6.7.2 EQ4350-M Specifications

Specifications for EQ4350-M	
Model No.	EQ4350-M
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	64
Nominal capacity (Ah)	77
Nominal energy (kWh)	4.32
Battery voltage range (V)	58.0~73.0
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	38.5
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*185
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	45±5%
Communication interfaces	CAN

6.7.3 Battery System Specifications for EQ4350

Specifications for EQ4350					
Model No.	EQ4350-L2	EQ4350-L3	EQ4350-L4	EQ4350-L5	EQ4350-L6
Technical Properties					
Battery designation	IFpP40/150/112[(20S)2S JM/-10+50/90	IFpP40/150/112[(20S)3S JM/-10+50/90	IFpP40/150/112[(20S)4S JM/-10+50/90	IFpP40/150/112[(20S)5S JM/-10+50/90	IFpP40/150/112[(20S)6S JM/-10+50/90
The number of batteries	1EQ4350-M+1EQ4350-S	1EQ4350-M+2EQ4350-S	1EQ4350-M+3EQ4350-S	1EQ4350-M+4EQ4350-S	1EQ4350-M+5EQ4350-S
Nominal voltage (V)	128.0	192.0	256.0	320.0	384.0
Nominal capacity (Ah)	77	77	77	77	77
Nominal energy (kWh)	8.64	12.96	17.28	21.60	25.92
Battery voltage range (V)	116.0~146.0	174.0~219.0	232.0~292.0	290.0~365.0	348.0~438.0
Max. charge/discharge current (A)	50/50				
(CC-CV) Standard charging current (A)	38.5				
Constant current and constant voltage charging cut-off current (A)	2				
Peak discharge Current (60s) (A)	65				
Depth of discharge(%)	90				
Storage temperature (°C)	-10~50				
Operating charge/discharge temperature (°C)	0~55/-10~55				
Discharge capacity (Ah)	56@-10±2°C @0.5C; 77@25±2°C @0.5C; 73@55±2°C @0.5C				
Cycle life	≥10000 @25°C @ 70%SOH @90%DOD				
Ingress protection	IP65				
Protective class	Class I				
Dimensions (L*W*H) (mm)	570*380*323	570*380*461	570*380*599	570*380*737	570*380*875
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15	±3/±3/±18
Weight (kg)±5%	86.0	127.0	168.0	209.0	250.0
Communication interfaces	CAN				

6.8 EQ4350 (w) Specifications

6.8.1 EQ4350-S (w) Specifications

Specifications for EQ4350-S (w)	
Model No.	EQ4350-S (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	64
Nominal capacity (Ah)	77
Nominal energy (kWh)	4.32
Battery voltage range (V)	58.0~73.0
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	38.5
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*173
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	41±5%
Communication interfaces	CAN
^{*1} warm up function off ^{*2} warm up function on	

6.8.2 EQ4350-M (w) Specifications

Specifications for EQ4350-M	
Model No.	EQ4350-M (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	64
Nominal capacity (Ah)	77
Nominal energy (kWh)	4.32
Battery voltage range (V)	58.0~73.0
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	38.5
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*185
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	45±5%
Communication interfaces	CAN
^{*1} warm up function off ^{*2} warm up function on	

6.8.3 Battery System Specifications for EQ4350 (w)

Specifications for EQ4350 (w)					
Model No.	EQ4350-L2 (w)	EQ4350-L3 (w)	EQ4350-L4 (w)	EQ4350-L5 (w)	EQ4350-L6 (w)
Technical Properties					
Battery designation	IFpP40/150/112[(20S)2S JM/-10+50/90	IFpP40/150/112[(20S)3S JM/-10+50/90	IFpP40/150/112[(20S)4S JM/-10+50/90	IFpP40/150/112[(20S)5S JM/-10+50/90	IFpP40/150/112[(20S)6S JM/-10+50/90
The number of batteries	1EQ4350-M (w)+1EQ4350-S (w)	1EQ4350-M (w)+2EQ4350-S (w)	1EQ4350-M (w)+3EQ4350-S (w)	1EQ4350-M (w)+4EQ4350-S (w)	1EQ4350-M (w)+5EQ4350-S (w)
Nominal voltage (V)	128.0	192.0	256.0	320.0	384.0
Nominal capacity (Ah)	77	77	77	77	77
Nominal energy (kWh)	8.64	12.96	17.28	21.60	25.92
Battery voltage range (V)	116.0~146.0	174.0~219.0	232.0~292.0	290.0~365.0	348.0~438.0
Max. charge/discharge current (A)	50/50				
(CC-CV) Standard charging current (A)	38.5				
Constant current and constant voltage charging cut-off current (A)	2				
Peak discharge Current (60s) (A)	65				
Depth of discharge(%)	90				
Storage temperature (°C)	-10~50				
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}				
Discharge capacity (Ah)	56@-10±2°C @0.5C; 77@25±2°C @0.5C; 73@55±2°C @0.5C				
Cycle life	≥10000 @25°C @ 70%SOH @90%DOD				
Ingress protection	IP65				
Protective class	Class I				
Dimensions (L*W*H) (mm)	570*380*323	570*380*461	570*380*599	570*380*737	570*380*875
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15	±3/±3/±18
Weight (kg)±5%	86.0	127.0	168.0	209.0	250.0
Communication interfaces	CAN				
^{*1} warm up function off ^{*2} warm up function on					

6.9 EQ5000 Specifications

6.9.1 EQ5000-S Specifications

Specifications for EQ5000-S	
Model No.	EQ5000-S
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	64
Nominal capacity (Ah)	77
Nominal energy (kWh)	4.92
Battery voltage range (V)	58.0~73.0
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	38.5
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*170
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	41.0±5%
Communication interfaces	CAN

6.9.2 EQ5000-M Specifications

Specifications for EQ5000-M	
Model No.	EQ5000-M
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	64
Nominal capacity (Ah)	77
Nominal energy (kWh)	4.92
Battery voltage range (V)	58.0~73.0
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	38.5
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*185
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	45.0±5%
Communication interfaces	CAN

6.9.3 Battery System Specifications for EQ5000

Specifications for EQ5000					
Model No.	EQ5000-L2	EQ5000-L3	EQ5000-L4	EQ5000-L5	EQ5000-L6
Technical Properties					
Battery designation	IFpP40/150/112[(20S)2S JE/-10+50/90	IFpP40/150/112[(20S)3S JE/-10+50/90	IFpP40/150/112[(20S)4S JE/-10+50/90	IFpP40/150/112[(20S)5S JE/-10+50/90	IFpP40/150/112[(20S)6S JE/-10+50/90
The number of batteries	1EQ5000-M+1EQ5000-S	1EQ5000-M+2EQ5000-S	1EQ5000-M+3EQ5000-S	1EQ5000-M+4EQ5000-S	1EQ5000-M+5EQ5000-S
Nominal voltage (V)	128.0	192.0	256.0	320.0	384.0
Nominal capacity (Ah)	77	77	77	77	77
Nominal energy (kWh)	9.84	14.76	19.68	24.60	29.52
Battery voltage range (V)	116.0~146.0	174.0~219.0	232.0~292.0	290.0~365.0	348.0~438.0
Max. charge/discharge current (A)	50/50				
(CC-CV) Standard charging current (A)	38.5				
Constant current and constant voltage charging cut-off current (A)	2				
Peak discharge Current (60s) (A)	65				
Depth of discharge(%)	90				
Storage temperature (°C)	-10~50				
Operating charge/discharge temperature (°C)	0~55/-10~55				
Discharge capacity (Ah)	56@-10±2°C @0.5C; 77@25±2°C @0.5C; 73@55±2°C @0.5C				
Cycle life	≥6000 @25°C @ 70%SOH				
Ingress protection	IP65				
Protective class	Class I				
Dimensions (L*W*H) (mm)	570*380*380	570*380*515	570*380*650	570*380*785	570*380*920
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15	±3/±3/±18
Weight (kg)±5%	86.0	127.0	168.0	209.0	250.0
Communication interfaces	CAN				

6.10 EQ5000 (w) Specifications

6.10.1 EQ5000-S (w) Specifications

Specifications for EQ5000-S (w)	
Model No.	EQ5000-S (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	64
Nominal capacity (Ah)	77
Nominal energy (kWh)	4.92
Battery voltage range (V)	58.0~73.0
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	38.5
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*170
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	41.0±5%
Communication interfaces	CAN
^{*1} warm up function off ^{*2} warm up function on	

6.10.2 EQ5000-M (w) Specifications

Specifications for EQ5000-M	
Model No.	EQ5000-M (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	64
Nominal capacity (Ah)	77
Nominal energy (kWh)	4.92
Battery voltage range (V)	58.0~73.0
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	38.5
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	570*380*185
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	45.0±5%
Communication interfaces	CAN
^{*1} warm up function off ^{*2} warm up function on	

6.10.3 Battery System Specifications for EQ5000 (w)

Specifications for EQ5000 (w)					
Model No.	EQ5000-L2 (w)	EQ5000-L3 (w)	EQ5000-L4 (w)	EQ5000-L5 (w)	EQ5000-L6 (w)
Technical Properties					
Battery designation	IFpP40/150/112[(20S)2S]E/-10+50/90	IFpP40/150/112[(2 0S)3S]E/-10+50/90	IFpP40/150/112[(20S)4S]E/-10+50/90	IFpP40/150/112[(20S)5S]E/-10+50/90	IFpP40/150/ 112[(20S)6S]E/-10+50/90
The number of batteries	1EQ5000-M (w)+1EQ5000-S (w)	1EQ5000-M (w)+2EQ5000-S (w)	1EQ5000-M (w)+3EQ5000-S (w)	1EQ5000-M (w)+4EQ5000-S (w)	1EQ5000-M (w)+5EQ5000-S (w)
Nominal voltage (V)	128.0	192.0	256.0	320.0	384.0
Nominal capacity (Ah)	77	77	77	77	77
Nominal energy (kWh)	9.84	14.76	19.68	24.60	29.52
Battery voltage range (V)	116.0~146.0	174.0~219.0	232.0~292.0	290.0~365.0	348.0~438.0
Max. charge/discharge current (A)	50/50				
(CC-CV) Standard charging current (A)	38.5				
Constant current and constant voltage charging cut-off current (A)	2				
Peak discharge Current (60s) (A)	65				
Depth of discharge(%)	90				
Storage temperature (°C)	-10~50				
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}				
Discharge capacity (Ah)	56@-10±2°C @0.5C; 77@25±2°C @0.5C; 73@55±2°C @0.5C				
Cycle life	≥6000 @25°C @ 70%SOH				
Ingress protection	IP65				
Protective class	Class I				
Dimensions (L*W*H) (mm)	570*380*380	570*380*515	570*380*650	570*380*785	570*380*920
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15	±3/±3/±18
Weight (kg)±5%	86.0	127.0	168.0	209.0	250.0
Communication interfaces	CAN				
^{*1} warm up function off ^{*2} warm up function on					

6.11 EQ6000 Plus Specifications

6.11.1 EQ6000 Plus-S Specifications

Specifications for EQ6000 Plus-S	
Model No.	EQ6000 Plus-S
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	57.6
Nominal capacity (Ah)	104
Nominal energy (kWh)	5.99
Battery voltage range (V)	52.2~65.7
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	50
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	660*360*190
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	50.1±5%
Communication interfaces	CAN

6.11.2 EQ6000 Plus-M Specifications

Specifications for EQ6000 Plus-M	
Model No.	EQ6000 Plus-M
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	57.6
Nominal capacity (Ah)	104
Nominal energy (kWh)	5.99
Battery voltage range (V)	52.2~65.7
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	50
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	660*360*205
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	55.0±5%
Communication interfaces	CAN

6.11.3 Battery System Specifications for EQ6000 Plus

Specifications for EQ6000 Plus						
Model No.	EQ6000 Plus-L2	EQ6000 Plus-L3	EQ6000 Plus-L4	EQ6000 Plus-L5	EQ6000 Plus-L6	EQ6000 Plus-L7
Technical Properties						
Battery designation	IFpP54/150/120[(18S)2S] JE/-10+50/90	IFpP54/150/120[(18S)3S] JE/-10+50/90	IFpP54/150/120[(18S)4S] JE/-10+50/90	IFpP54/150/120[(18S)5S] JE/-10+50/90	IFpP54/150/120[(18S)6S] JE/-10+50/90	IFpP54/150/120[(18S)7S] JE/-10+50/90
The number of batteries	1EQ6000 Plus-M+1EQ6000 Plus-S	1EQ6000 Plus-M+2EQ6000 Plus-S	1EQ6000 Plus-M+3EQ6000 Plus-S	1EQ6000 Plus-M+4EQ6000 Plus-S	1EQ6000 Plus-M+5EQ6000 Plus-S	1EQ6000 Plus-M+6EQ6000 Plus-S
Nominal voltage (V)	115.2	172.8	230.4	288.0	345.6	403.2
Nominal capacity (Ah)	104	104	104	104	104	104
Nominal energy (kWh)	11.98	17.97	23.96	29.95	35.94	41.93
Battery voltage range (V)	104.4~131.4	156.6~197.1	208.8~262.8	261.0~328.5	313.2~394.2	365.4~459.9
Max. charge/discharge current (A)	50/50					
(CC-CV) Standard charging current (A)	50					
Constant current and constant voltage charging cut-off current (A)	2					
Peak discharge Current (60s) (A)	65					
Depth of discharge(%)	90					
Storage temperature (°C)	-10~50					
Operating charge/discharge temperature (°C)	0~55/-10~55					
Discharge capacity (Ah)	90@-20±2°C @1/3C; 104@25±2°C @1/3C; 104@55±2°C @1/3C					
Cycle life	≥6000 @25°C @ 70%SOH					
Ingress protection	IP65					
Protective class	Class I					
Dimensions (L*W*H) (mm)	660*360*420	660*360*575	660*360*730	660*360*885	660*360*1040	660*360*1195
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15	±3/±3/±18	±3/±3/±21
Weight (kg)±5%	105.1	155.2	205.3	255.4	305.5	355.6
Communication interfaces	CAN					

6.12 EQ6000 Plus (w) Specifications

6.12.1 EQ6000 Plus-S (w) Specifications

Specifications for EQ6000 Plus-S (w)	
Model No.	EQ6000 Plus-S (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	57.6
Nominal capacity (Ah)	104
Nominal energy (kWh)	5.99
Battery voltage range (V)	52.2~65.7
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	50
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	660*360*190
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	50.1±5%
Communication interfaces	CAN
^{*1} warm up function off ^{*2} warm up function on	

6.12.2 EQ6000 Plus-M (w) Specifications

Specifications for EQ6000 Plus-M (w)	
Model No.	EQ6000 Plus-M (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	57.6
Nominal capacity (Ah)	104
Nominal energy (kWh)	5.99
Battery voltage range (V)	52.2~65.7
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	50
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	660*360*205
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	55.0±5%
Communication interfaces	CAN
*1warm up function off *2warm up function on	

6.12.3 Battery System Specifications for EQ6000 Plus (w)

Specifications for EQ6000 Plus (w)						
Model No.	EQ6000 Plus-L2 (w)	EQ6000 Plus-L3 (w)	EQ6000 Plus-L4 (w)	EQ6000 Plus-L5 (w)	EQ6000 Plus-L6 (w)	EQ6000 Plus-L7 (w)
Technical Properties						
Battery designation	IFpP54/150/1 20[(18S)2S]E/-10+50/90	IFpP54/150/1 20[(18S)3S]E/-10+50/90	IFpP54/150/1 20[(18S)4S]E/-10+50/90	IFpP54/150/1 20[(18S)5S]E/-10+50/90	IFpP54/150/ 120[(18S)6S]E/-10+50/90	IFpP54/150/ 120[(18S)7S]E/-10+50/90
The number of batteries	1EQ6000 Plus-M (w)+1EQ6000 Plus-S (w)	1EQ6000 Plus-M (w)+2EQ600 0 Plus-S (w)	1EQ6000 Plus-M (w)+3EQ600 0 Plus-S (w)	1EQ6000 Plus-M (w)+4EQ600 0 Plus-S (w)	1EQ6000 Plus-M (w)+5EQ6000 Plus-S (w)	1EQ6000 Plus-M (w)+6EQ6000 Plus-S (w)
Nominal voltage (V)	115.2	172.8	230.4	288.0	345.6	403.2
Nominal capacity (Ah)	104	104	104	104	104	104
Nominal energy (kWh)	11.98	17.97	23.96	29.95	35.94	41.93
Battery voltage range (V)	104.4~131.4	156.6~197.1	208.8~262.8	261.0~328.5	313.2~394.2	365.4~459.9
Max. charge/discharge current (A)	50/50					
(CC-CV) Standard charging current (A)	50					
Constant current and constant voltage charging cut-off current (A)	2					
Peak discharge Current (60s) (A)	65					
Depth of discharge(%)	90					
Storage temperature (°C)	-10~50					
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}					
Discharge capacity (Ah)	90@-20±2°C @1/3C; 104@25±2°C @1/3C; 104@55±2°C @1/3C					
Cycle life	≥6000 @25°C @ 70%SOH					
Ingress protection	IP65					
Protective class	Class I					
Dimensions (L*W*H) (mm)	660*360*420	660*360*575	660*360*730	660*360*885	660*360*1040	660*360*1195
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15	±3/±3/±18	±3/±3/±21
Weight (kg)±5%	105.1	155.2	205.3	255.4	305.5	355.6
Communication interfaces	CAN					
^{*1} warm up function off ^{*2} warm up function on						

6.13 EQ7000 Plus Specifications

6.13.1 EQ7000 Plus-S Specifications

Specifications for EQ7000 Plus-S	
Model No.	EQ7000 Plus-S
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	76.8
Nominal capacity (Ah)	86
Nominal energy (kWh)	6.60
Battery voltage range (V)	69.6~87.6
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	43
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	660*360*190
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	55.9±5%
Communication interfaces	CAN

6.13.2 EQ7000 Plus-M Specifications

Specifications for EQ7000 Plus-M	
Model No.	EQ7000 Plus-M
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	76.8
Nominal capacity (Ah)	86
Nominal energy (kWh)	6.60
Battery voltage range (V)	69.6~87.6
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	43
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	660*360*205
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	60.4±5%
Communication interfaces	CAN

6.13.3 Battery System Specifications for EQ7000 Plus

Specifications for EQ7000 Plus				
Model No.	EQ7000 Plus-L2	EQ7000 Plus-L3	EQ7000 Plus-L4	EQ7000 Plus-L5
Technical Properties				
Battery designation	IFpP40/150/133[(24S)2S]E/-10+50/90	IFpP40/150/133[(24S)3S]E/-10+50/90	IFpP40/150/133[(24S)4S]E/-10+50/90	IFpP40/150/133[(24S)5S]E/-10+50/90
The number of batteries	1EQ7000 Plus-M+1EQ7000 Plus-S	1EQ7000 Plus-M+2EQ7000 Plus-S	1EQ7000 Plus-M+3EQ7000 Plus-S	1EQ7000 Plus-M+4EQ7000 Plus-S
Nominal voltage (V)	153.6	230.4	307.2	384.0
Nominal capacity (Ah)	86	86	86	86
Nominal energy (kWh)	13.20	19.80	26.40	33.00
Battery voltage range (V)	139.2~175.2	208.8~262.8	278.4~350.4	348.0~438.0
Max. charge/discharge current (A)	50/50			
(CC-CV) Standard charging current (A)	43			
Constant current and constant voltage charging cut-off current (A)	2			
Peak discharge Current (60s) (A)	65			
Depth of discharge(%)	90			
Storage temperature (°C)	-10~50			
Operating charge/discharge temperature (°C)	0~55/-10~55			
Discharge capacity (Ah)	69.9@5±2°C @0.5C; 87@25±2°C @0.5C; 85.3@45±2°C @0.5C			
Cycle life	≥6000 @25°C @ 70%SOH			
Ingress protection	IP65			
Protective class	Class I			
Dimensions (L*W*H) (mm)	660*360*420	660*360*575	660*360*730	660*360*885
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15
Weight (kg)±5%	116.3	172.2	228.1	284.0
Communication interfaces	CAN			

6.14 EQ7000 Plus (w) Specifications

6.14.1 EQ7000 Plus-S (w) Specifications

Specifications for EQ7000 Plus-S (w)	
Model No.	EQ7000 Plus-S (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	76.8
Nominal capacity (Ah)	86
Nominal energy (kWh)	6.60
Battery voltage range (V)	69.6~87.6
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	43
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	660*360*190
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	55.9±5%
Communication interfaces	CAN
^{*1} warm up function off ^{*2} warm up function on	

6.14.2 EQ7000 Plus-M (w) Specifications

Specifications for EQ7000 Plus-M (w)	
Model No.	EQ7000 Plus-M (w)
Max. charge/discharge current (A)	50
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}
Storage temperature (°C)	-10~50
Humidity (%)	5~95
Nominal voltage (V)	76.8
Nominal capacity (Ah)	86
Nominal energy (kWh)	6.60
Battery voltage range (V)	69.6~87.6
Max. Continuous discharge/charge current (A)	50/50
(CC-CV) Standard charging current (A)	43
Constant current and voltage charging cut-off current (A)	2
Depth of discharge(%)	90
Peak discharge current (60s) (A)	65
Altitude (m)	≤2000
Dimensions (L*W*H) (mm)	660*360*205
Tolerance (L*W*H)(mm)	±3/±3/±3
Weight (kg)	60.4±5%
Communication interfaces	CAN
^{*1} warm up function off ^{*2} warm up function on	

6.14.3 Battery System Specifications for EQ7000 Plus

Specifications for EQ7000 Plus				
Model No.	EQ7000 Plus-L2 (w)	EQ7000 Plus-L3 (w)	EQ7000 Plus-L4 (w)	EQ7000 Plus-L5 (w)
Technical Properties				
Battery designation	IFpP40/150/133[(24S)2S]E/-10+50/90	IFpP40/150/133[(24S)3S]E/-10+50/90	IFpP40/150/133[(24S)4S]E/-10+50/90	IFpP40/150/133[(24S)5S]E/-10+50/90
The number of batteries	1EQ7000 Plus-M (w)+1EQ7000 Plus-S (w)	1EQ7000 Plus-M (w)+2EQ7000 Plus-S (w)	1EQ7000 Plus-M (w)+3EQ7000 Plus-S (w)	1EQ7000 Plus-M (w)+4EQ7000 Plus-S (w)
Nominal voltage (V)	153.6	230.4	307.2	384.0
Nominal capacity (Ah)	86	86	86	86
Nominal energy (kWh)	13.20	19.80	26.40	33.00
Battery voltage range (V)	139.2~175.2	208.8~262.8	278.4~350.4	348.0~438.0
Max. charge/discharge current (A)	50/50			
(CC-CV) Standard charging current (A)	43			
Constant current and constant voltage charging cut-off current (A)	2			
Peak discharge Current (60s) (A)	65			
Depth of discharge(%)	90			
Storage temperature (°C)	-10~50			
Operating charge/discharge temperature (°C)	0~55/-10~55 ^{*1} -25~55/-25~55 ^{*2}			
Discharge capacity (Ah)	69.9@5±2°C @0.5C; 87@25±2°C @0.5C; 85.3@45±2°C @0.5C			
Cycle life	≥6000 @25°C @ 70%SOH			
Ingress protection	IP65			
Protective class	Class I			
Dimensions (L*W*H) (mm)	660*360*420	660*360*575	660*360*730	660*360*885
Tolerance (L*W*H)(mm)	±3/±3/±6	±3/±3/±9	±3/±3/±12	±3/±3/±15
Weight (kg)±5%	116.3	172.2	228.1	284.0
Communication interfaces	CAN			
^{*1} warm up function off ^{*2} warm up function on				

7 Product Features

7.1 Battery System Features


The batteries have been fitted with multiple protection systems to ensure the safe operation of the system. Some of the protection system includes:

- Inverter interface protection: Over voltage, Over current, External Short Circuit, Reverse Polarity, Ground Fault, Over Temp, In rush current.
- Battery Protection: Internal Short Circuit, Over voltage, over current, over temp, Under voltage.

The battery system contains the following Interface to allow it to connect and operate efficiently.


EQ-S Features:

Interface:

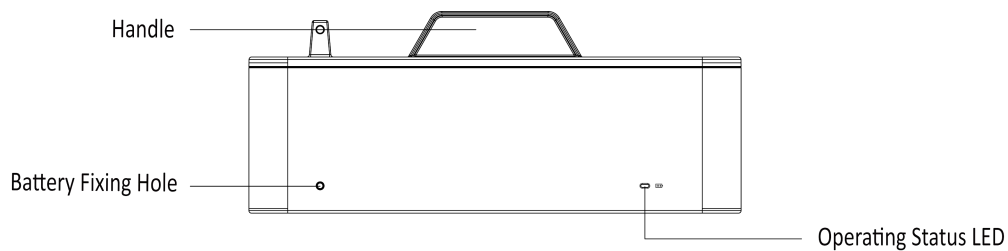

EQ-M Features:

Interface:

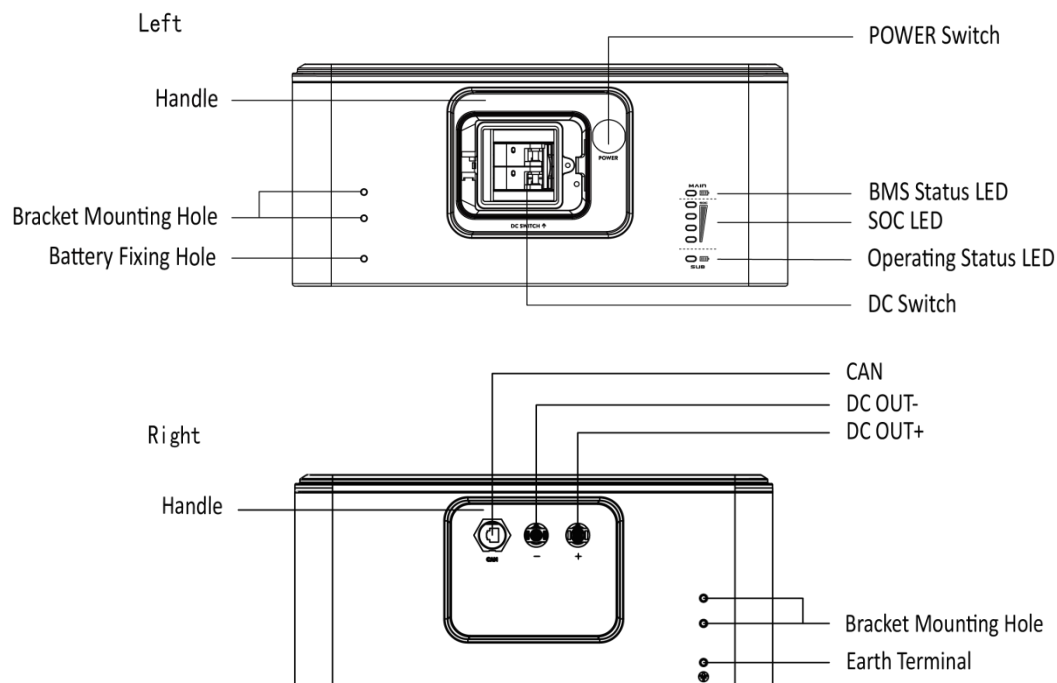

DC switch

Power switch, battery charge and discharge circuit switch.

DC OUT +

Connect bat+ of inverter.

DC OUT -

Connect bat- of inverter.

POWER switch

System power on switch, press and hold switch for 3 seconds, and then release the switch, the system starts to work.

BMS Status LED and SOC LED

LED display specific alarm information and battery system power.

Operating status LED

This LED is used to indicate if the battery is operating effectively. A green light on this LED means the battery is ON and operating normally. If the battery is operating failure, a red light on this LED means the battery is operating abnormally.

8 Installation









8.1 Items in the package

Please check if following items are including with the package:


For EQ-S



For EQ-M

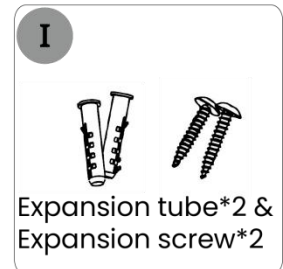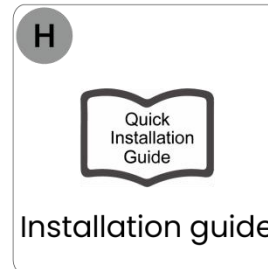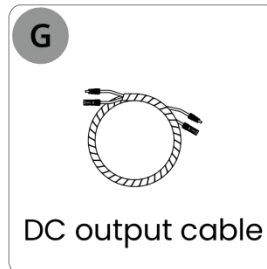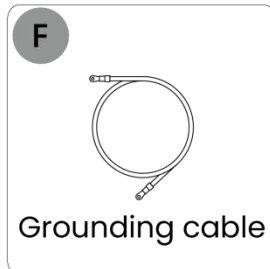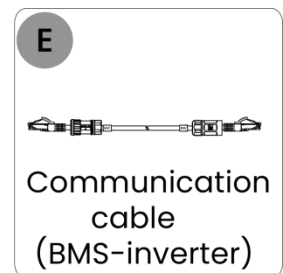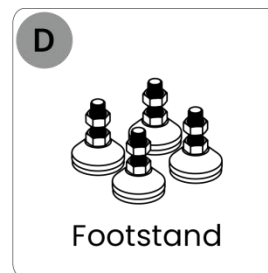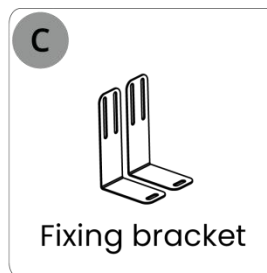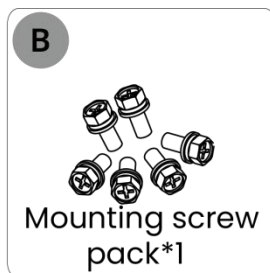

8.2 Clearance

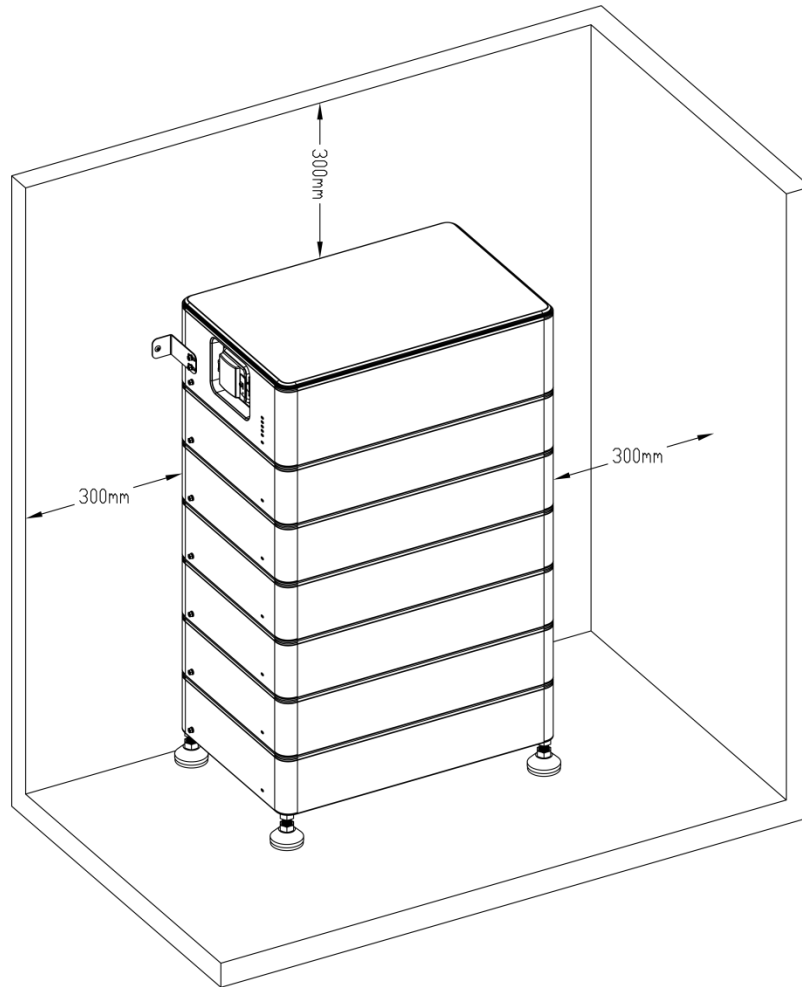

Note:

- Make sure to leave a space of at least 300mm. A clearance of at least 300mm must be left around the battery pack for proper cooling.
- Installation clearance requirements shall comply with local regulations.
- Make sure that the battery pack is always exposed to the ambient air. The battery pack is cooled by natural convection. If the battery pack is entirely or partially covered or shielded, it may cause the battery pack to stop operating.
- The safety clearance for equipment installation must comply with local regulations.
- The battery system must be kept at least 2 meters away from heat sources.

8.3 Tools

The following tools will be required to install EQ-M and EQ-S.



6mm Magnetic
Phillips Screwdriver



Crimpers



Safety Shoes



Multimeter



Safety Gloves



Safety Glasses



Plier



Cable Ties



Hammer Drill
@φ8mm



Spirit Level









Tape





Marker


8.4 Installation Steps

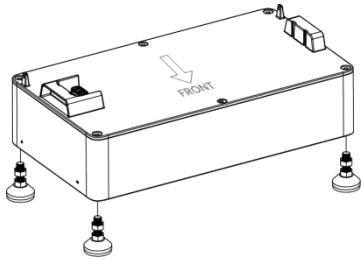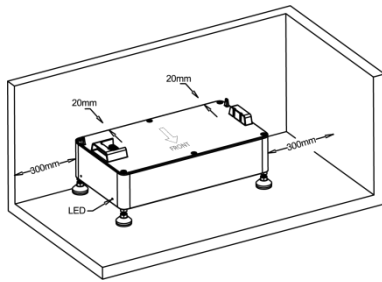Procedures		
Step 1	Install a EQ-S with four footstand (Item E) and place it on the ground and adjust it to the level. After installing the footstand, use a track level bar to confirm the level.	
Step 2	Place the battery 20mm against the wall. Note: Please make sure the Operating Status LED is on your left handside when you facing the battery model.	

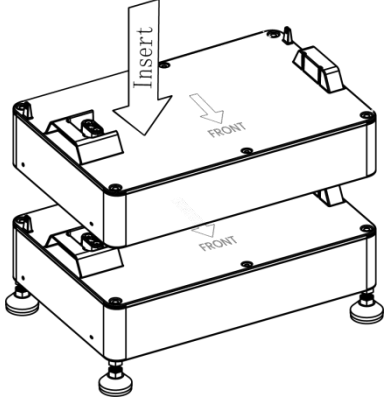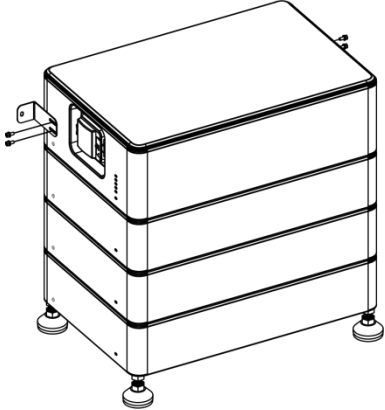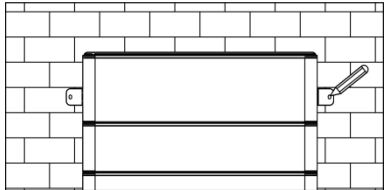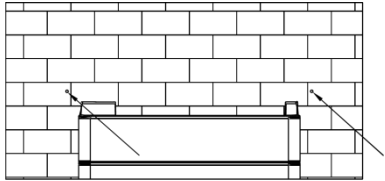Step 3	Stack the batteries one by one.	
Step 4	Place the two fixing brackets (Item C) close to the wall and install them on both sides of the battery.	
Step 5	Mark the wall through the bracket hole.	
Step 6	Punch after removing the EQ-M. Drill holes with electric drill, make sure the holes are at least 50mm deep, and then tighten the expansion tubes (Item I).	

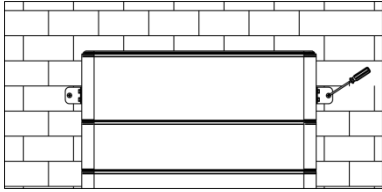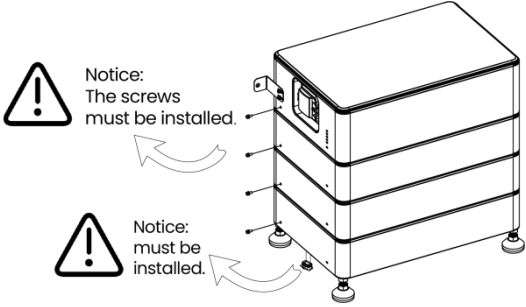Step 7	After stacking EQ-M again, fix the battery on the wall.	
Step 8	Fix the mounting screw packs on both sides of the battery. Insert the waterproof cover(Item J) into the bottom of the battery and lock it in place with the clip, the installation is over.	




Note: Ensure that each system has only 1 EQ-M and a maximum of n EQ-S, where n=6 for EQ2900/EQ2900(w), EQ4300/EQ4300(w), EQ6000Plus/EQ6000Plus(w), n=5 for EQ3300/EQ3300 (w), EQ5000/ EQ5000 (w) and n=4 for EQ7000 Plus/EQ7000 Plus (w).

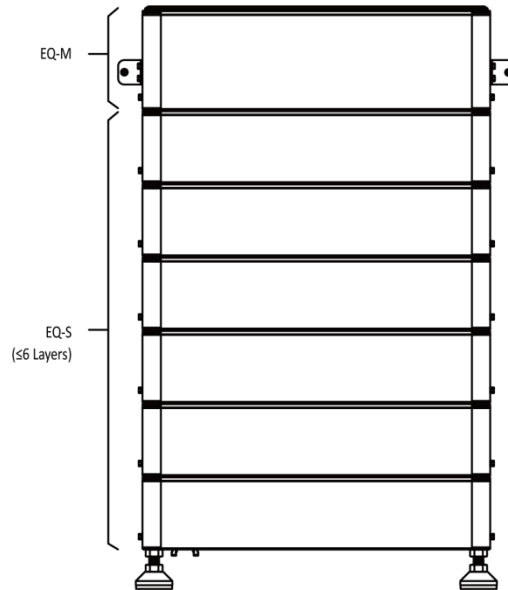

Note: When used with an inverter, the battery system voltage must meet the inverter battery port voltage range.


8.5 Wiring Steps

Note: Please use the side labeled BAT to connect to the battery and the side labeled INV to connect to the inverter.

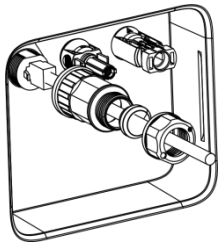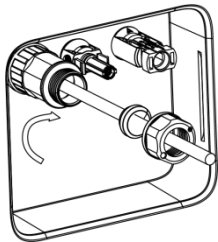Communication Cable Installation Procedure		
Step 1	Open the tail lock wire nut.	
Step 2	Plug communication cable RJ45 into the battery BMS port.	
Step 3	Use an open-end spanner to lock the body onto the RJ45 board end connector; torque: $1.2 \pm 0.2 \text{ N}\cdot\text{m}$.	


Step 4

Install the sealing plug into the main.

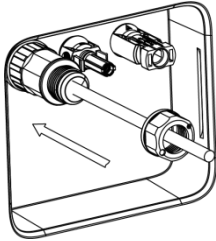

Step 5


Use an open-end spanner to lock the thread locking nut onto the main body.

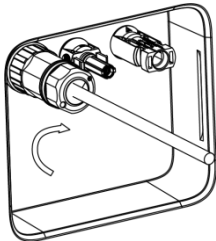

Step 6

Insert the cable connector into BMS port at the bottom of inverter and screw it tightly.

(Item E)

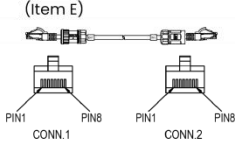


PIN ASSIGNMENTS
FRONT VIEW


CONN.1 PIN	CONN.2 PIN
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8


Note: Default wire harness PIN to PIN


PIN	Function Definitions
1	A-START
2	GND
3	/
4	BMS-CANL
5	BMS-CANH
6	BMS-CANH
7	BMS-CANL
8	/

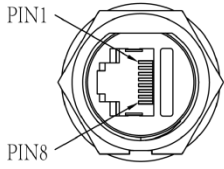


PIN ASSIGNMENTS
FRONT VIEW

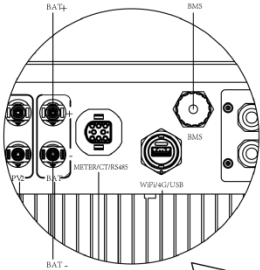

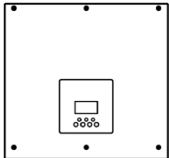

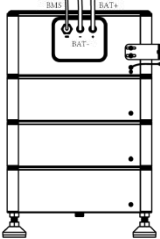

Connect the grounding cable. The figure is shown in below.

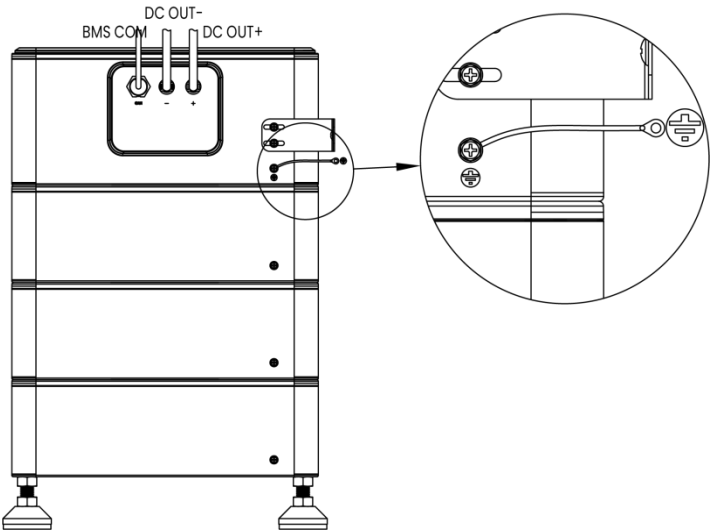

8.6 System Operation

- When the grid connected system is started, the inverter should be turned on first to avoid the current pulse of the inverter increasing to the battery pack.
- All installation and operation must comply with local electrical standards.
- Check all power cables and communication cables carefully.

System Start Up:

When the inverter is connected to the PV and the grid and both are operating normally, turn on the battery DC Switch. Press the POWER Switch and hold it for 3 seconds, then release. The Status LED is blinking green and indicates that the system is working normally.

System Shut Down:

Press and hold the POWER switch for at least 5 seconds until all of the main battery LEDs (BMS Status LED and SOC LED) begin blinking. Once they start blinking, release the switch. The lights will automatically turn off after 5 seconds. Then, turn off the DC switch.





System Black Start:

Under special circumstances when both PV and Grid power are out of order, the battery can be activated through the "Black Start" function. This means that our energy storage inverter and battery can continue to operate. The startup steps for black start are as follows:

- Turn on the DC switch, press and hold the power button for 3 seconds, then release.
- Press the "Power Switch" button three times in succession within 4 seconds. Complete within 30 seconds after the battery system starts up.
- The Status LED remains solid green, indicating successful activation of Black start mode.

Note: Ensure correct battery-inverter connection prior to Black Start. No wiring modifications during black start.

8.7 Disassembly Steps

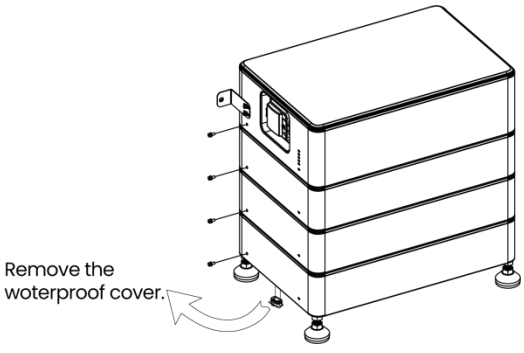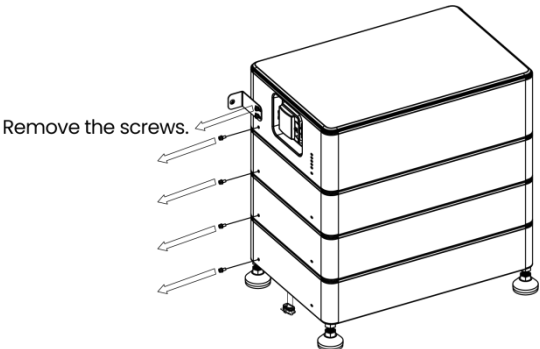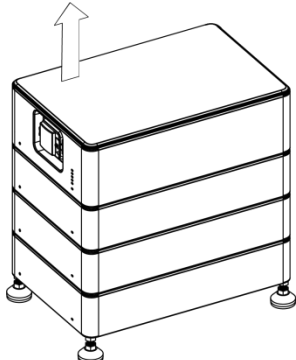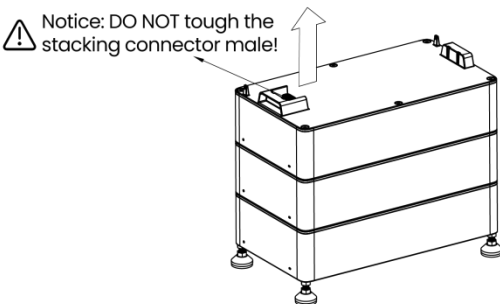Procedures		
Step 1	Shut down the battery system (refer to Section 8.6: System Shutdown), then disconnect the wiring harness connected to the inverter (refer to Section 8.5: Wiring Steps).	
Step 2	Remove the waterproof cover.	 Remove the waterproof cover.
Note: Operators must wait 1 minute at least after disconnecting or removing the waterproof cover/connector before accessing the module.		
Step 3	Remove the screws (refer to Step 7 and Step 8 in Section 8.4).	 Remove the screws.
Step 4	Remove the EQ-M and EQ-S modules, and store them properly according to the manufacturer's storage requirements.   Notice: DO NOT touch the stacking connector male!	


9 Commissioning

The operating status light on the left side of the battery pack shows its working status.

For EQ-S

Green LED	Red LED	Batteries Status
On for 0.5s, Off for 0.5s	On for 0.5s, Off for 0.5s	Running in boot
On for 0.1s, Off for 0.1s	On for 0.1s, Off for 0.1s	Upgrading
On for 1s, Off for 1s	Off	Normal Working
Off	On for 1s, Off for 1s	Alarm

For EQ-M

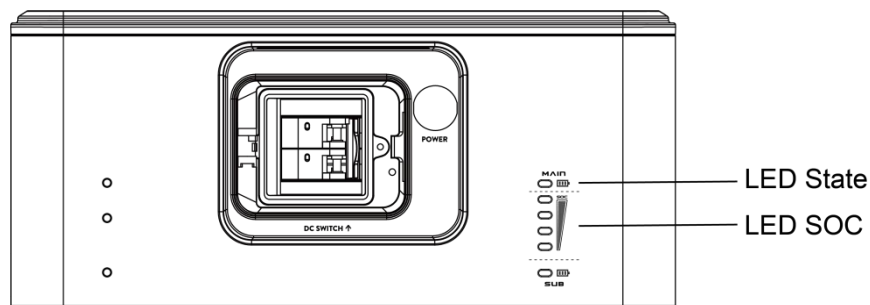

SOC	System Status	LED State	LED SOC				
=100%	Standby	■	●	●	●	●	●
100% > SOC >= 75%		■	●	●	●	●	●
75% > SOC >= 50%		■	/	●	●	●	●
50% > SOC >= 25%		■	/	/	●	●	●
25% > SOC >= 0%		■	/	/	/	●	●
=100%	Discharge	●	●	●	●	●	●
100% > SOC >= 75%		●	●	●	●	●	●
75% > SOC >= 50%		●	/	●	●	●	●
50% > SOC >= 25%		●	/	/	●	●	●
25% > SOC >= 0%		●	/	/	/	●	●
=100%	Charge	●	■	■	■	■	■
100% > SOC >= 75%		●	■	■	■	■	■
75% > SOC >= 50%		●	/	■	■	■	■
50% > SOC >= 25%		●	/	/	■	■	■
25% > SOC >= 0%		●	/	/	/	■	■

Fault	LED State	LED SOC			
Under voltage fault	■	/	/	/	●
Over voltage fault	■	/	/	●	/
Over temperature fault	■	/	/	●	●
Under temperature fault	■	/	●	/	/
Discharge over current	■	/	●	/	●
Charge over current	■	/	●	●	/
Warm up film switch adhesion	■	/	●	●	●
Reserve	■	●	/	/	/
Pre-Charge failed	■	●	/	/	●
Short circuit Protection	■	●	/	●	/
AFE communication failed	■	●	/	●	●
Module Addressing failed	■	●	●	/	/
IVU Communication failed	■	●	●	/	●
BMU Communication failed	■	●	●	●	/
PCS Communication failed	■	●	●	●	●
HVB FUSE fault	●	/	/	/	●
Module FUSE fault	●	/	/	●	/
Power failed	●	/	/	●	●
Internal total voltage sampling failed	●	/	●	/	/
Temperature sampling failed	●	/	●	/	●
Relay adhesion	●	/	●	●	/
Relay Not Close	●	/	●	●	●
Relay drive failed	●	●	/	/	/
Single Cell "0V" fault	●	●	/	/	●
Temperature high permanent failed	●	●	/	●	/
The Single voltage high permanently failed	●	●	/	●	●
SOH low protection	●	●	●	/	/
AFE failed (UV/OV/UT/OT)	●	●	●	/	●
Shutdown failed	●	●	●	●	/
Other fault	●	●	●	●	●

Remark:

■: LED flash display (on: 0.5s, off: 0.5s)

●: LED on display

10Exclusion

The warranty shall not cover the defects caused by normal wear and tear, inadequate maintenance, handling, storage faulty repair, modifications to the battery or pack by a third party other than Fox ESS or Fox ESS agent, failure to observe the product specification provided herein or improper use or installation, including but not limited to the following.

- Damage during transport or storage.
- Incorrect Installation of battery into pack or maintenance.
- Use of battery pr pack in inappropriate environment.
- Improper, inadequate, or incorrect charge, discharge or production circuit other than stipulated herein.
- Incorrect use or inappropriate use.
- Insufficient ventilation.
- Ignoring applicable safety warnings and instructions.
- Altering or attempted repairs y unauthorized personnel.
- In case of force majeure (ex: lightning, storm, flood, fire, earthquake, etc.).
- There are no warranties-implied or express-other than those stipulated herein. Fox ESS or Fox ESS shall not be liable for any consequential or indirect damages arising or in connection with the product specification, battery or pack.

11 Troubleshooting and Maintenance

11.1 Maintenance

- Regularly check whether the service environment of the battery meets the requirements, and the installation position should be far away from the heat source.
- The battery module should be stored in an environment with a temperature range between -20°C- +55°C, and charged regularly according to the table below with no more than 0.5 C(A C-rate is a measure of the rate at which a battery is discharged relative to its maximum capacity.) to the SOC of 50% after a long time of storage.

Storage environment temperature	Relative humidity of the storage environment	Storage time	SOC
Below -20°C	/	Not allowed	/
-20~0°C	10%~90%	≤ 1 months	20%≤SOC≤50%
0~35°C	10%~90%	≤ 6 months	20%≤SOC≤50%
35~55°C	10%~90%	≤ 1 months	20%≤SOC≤50%
Above 55°C	/	Not allowed	/

Note: If the battery is stored over one year, 5%- 8% of the capacity may lose irreversibly.

- Regularly check whether the battery and its supporting terminals, connecting cables and indicator lights are normal.

Expanded capacity requirement

If a battery is replaced or added for capacity expansion, each battery's SOC should be consistent. The max. SOC difference should be between $\pm 5\%$.

If users want to increase their battery system capacity, please ensure that the SOC of the existing system capacity is about 50%. The manufacturer date of the new battery shall not exceed 12 months; in case of exceeding 12 months. please charge the new battery to around 50%.

11.2 Storage with Low SOC

After the product is powered off, static power consumption and self-discharge loss may occur in internal modules. Therefore, charge batteries in a timely manner and do not store the product in low SOC. Otherwise, the product may be damaged due to overdischarge, and battery modules need to be replaced.

Storage in low SOC may occur in the following scenarios:

- The DC SWITCH on the power control module is OFF.
- The power cables or signal cables are not connected.

- The batteries cannot be charged due to a system fault after discharge.
- The batteries cannot be charged due to incorrect configurations in the system.
- The batteries cannot be charged due to no PV input and long-term mains failure.

Regardless of scenarios, the batteries must be charged within the longest interval corresponding to the SOC when the batteries are powered off. If the batteries are not charged within the specified interval, they may be damaged due to overdischarge.

Storage environment temperature	Power-Off SOC Before Storage	Maximum Charge Interval
0~35°C	0% ≤ SOC < 5%	7 days

Note: When the battery SOC decreases to 0%, charge the batteries within seven days. Permanent battery faults caused by delayed charge due to customer reasons are beyond the warranty scope.

11.3 Troubleshooting

When the red / green LED on the panel is flashing or normally on, it does not mean that the EQ is abnormal, it may be just an alarm or protection. Please check the “LED status indicators” in chapter 9 for the detailed faulty definition before any troubleshooting steps. In general, the alarm indication is normal without manual intervention. When the alarm triggering state is removed, EQ will automatically return to normal use.

Problem determination based on the following points:

- Check if the red indicator light illuminates once the battery enters operation;
- Whether the buzzer in EQ-M on;
- Whether the battery system can be communicated with inverter;
- Whether the battery can be output voltage or not.

Preliminary determination steps

Battery system cannot work, when DC switch on and POWER on, the LED doesn't light up or flash, please contact the local distributor.

- The LED display of EQ-M and EQ-S is normal, but it cannot charge and discharge. Observe the display screen of inverter and there is no SOC. Please check whether the CAN communication between EQ-M to inverter is well connected. If the connection is good, please replace a CAN communication cable. If the SOC is still not visible on the inverter display screen, please contact the local distributor.
- After the battery system is powered on, if you can see the alarm information on the LED and inverter display screen at the same time, please contact the local distributor.

12Appendix

12.1 Quality Guarantee

FOXESS Co., Ltd. (hereinafter referred to as "the Company") will, for products found to be faulty during the warranty period, repair the product free of charge or replace it with a new one.

Supporting Documentation Required

When requesting warranty service, the customer must present the original purchase invoice indicating the date of purchase. Furthermore, the product's trademark must be clearly visible. The Company reserves the right to decline warranty coverage if these conditions are not met.

Relevant Conditions

- Non-conforming products replaced under warranty shall be disposed of by the Company.
- The customer must allow the Company a reasonable period of time to complete repairs on faulty equipment.

Warranty Exclusions

The Company reserves the right to decline warranty coverage under the following circumstances:

- The entire machine or specific components have exceeded the free warranty period.
- Damage incurred during transportation.
- Faults resulting from incorrect installation, modification, or use.
- Operation in environments that exceed the limits specified as harsh in this manual.
- Malfunctions or damage caused by installation, repair, alteration, or disassembly performed by service organizations or personnel not authorized by the Company.
- Use or installation outside the scope defined in the relevant international standards.
- Damage caused by abnormal natural disasters.
- Damage resulting from storage conditions that do not meet the requirements stated in the product documentation.
- Any losses arising from failure to adhere to the safety precautions outlined in this manual.

If a product failure is caused by any of the above circumstances and the customer still requests repair services, the Company's authorized service organization may, upon assessment, provide repair services subject to a charge.

Other Provisions

The Company reserves the right to change product dimensions and parameters based on its latest documentation without prior notice.

12.2 Contact Us

If you have any questions about the product, please contact us:

- Fox ESS Headquarters: No.939, Jinhai Third Road, New Airport Industry Area, Longwan District, Wenzhou, Zhejiang, China.
- Wuxi R&D Center: No. 97 Huaqing Avenue, Wuxi Economic Development Zone (Intersection of Huaqing Avenue and Huayun Road)
- Wuhan R&D Center: No.5, Jiayuan Road, Hongshan District, Wuhan, Hubei, China
- Shanghai R&D Center: No.1255, Jinhai Road, Pudong New Area, Shanghai, China
- After-Sales Service Hotline: 400 1888 900
- Contact Telephone (Wenzhou): 0577-88159999
- Contact Telephone (Wuxi): 0510-68092998
- Contact Us: info@fox-esscom
- Contact Us (EV Charger): ev@fox-esscom
- After-Sales Service: service@fox-esscom



Online User Manual

10-500-10329-00