




COMBAT BIKE 2.0

SK-COMBB2.0

USER MANUAL

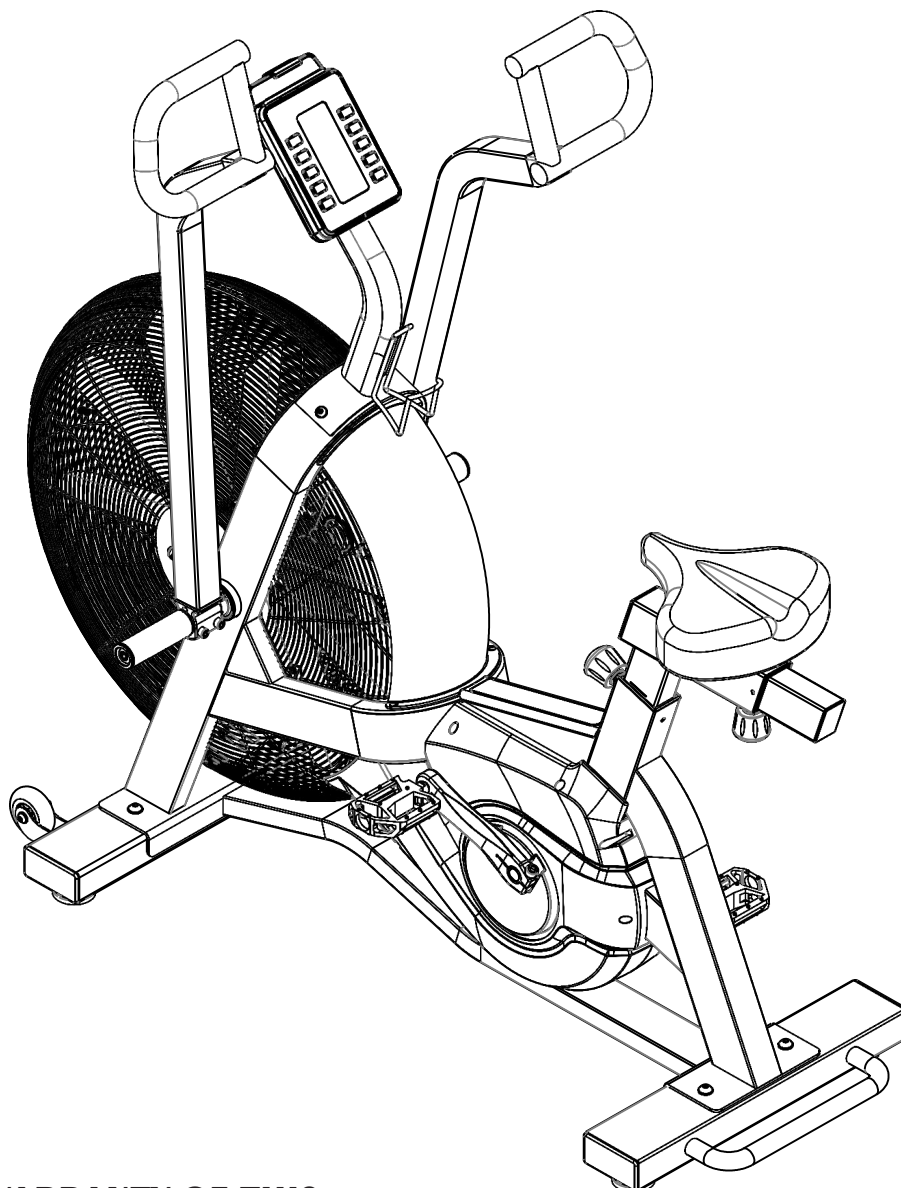

TO OBTAIN THE WARRANTY OF THIS PRODUCT, WE RECOMMEND THAT A QUALIFIED TECHNICIAN CARRIES OUT THE FULL ASSEMBLY.



CAUTION

BEFORE USING THIS EQUIPMENT. READ ALL PRECAUTIONS AND INSTRUCTIONS IN THIS MANUAL. KEEP THIS MANUAL FOR FUTURE REFERENCE.

IMPORTANT WARNINGS & SAFETY INSTRUCTIONS

PROPER INSTALLATION

The Gym facility shall ensure that all exercise equipment and machines are properly installed, anchored, and secured to the floor or wall in accordance with the manufacturer's instructions and applicable safety standards to prevent tipping, movement, or other hazards.

LIMITATION OF LIABILITY

Evolution Group LLC and its affiliates shall not be liable for any damages, injuries, or losses arising from the improper installation, maintenance, or use of the equipment. The Gym facility agrees to hold harmless and indemnify Evolution Group LLC and its affiliates against any claims, demands, or liabilities resulting from such incidents.

COMPLIANCE WITH INSTRUCTIONS

The Gym facility confirms that it has received and understood the manufacturer's instructions and safety guidelines for the equipment. The Gym facility is responsible for ensuring that its staff and members are aware of and comply with these instructions.

NO WARRANTY FOR MISUSE

Evolution Group LLC and its affiliates do not warrant the equipment's performance or safety in cases of misuse, improper installation, or failure to maintain the equipment as recommended.

PURCHASER INSTRUCTIONS

It is the sole responsibility of the purchaser of products to read, understand, and comply with the this equipment. Use this product only for its intended purpose as described in the owner's manual. Failure to do so may result in injury or damage . It is recommended that all users be informed of the following information prior to use.

RISK OF INJURY AND ASSUMPTION OF RISK; NO CHILDREN

- Before starting any exercise or conditioning program, you should consult your physician. This is especially important if you are new to exercise or training equipment, inactive, pregnant, or suffer from any illness or mental condition. Using training equipment can result in injury or death, and the purchaser is assuming that risk. This makes understanding the owner's manual and instructing others particularly important.
- If at any time during exercise you feel faint, dizzy, or experience pain, stop exercising immediately and consult your physician.
- Keep children away from the equipment, and particularly moving parts. If using the product near children or pets, ensure constant supervision to prevent accidents and ensure that there is no ability for the child or pet to get near the moving parts. If authorized by a legal guardian or parent, a child should be under direct and immediate supervision at all times. Under no circumstances should a child younger than 15 years old use the equipment.

SECURE ENVIRONMENT

Skelcore equipment must:

- Be secured to or set up on a solid, level surface to stabilize and eliminate rocking or tipping over during training.
- Be set up with sufficient ventilation to ensure proper operation.

IMPORTANT WARNINGS & SAFETY INSTRUCTIONS

- Be set up with sufficient space around the equipment so that all exercises can be completed safely. It is recommended that there should be at least 1 meter of space around the equipment where access is required to exercise.

INSTALLATION

Risk of Injury:

- Installation of this product involves certain risks, including the risk of injury. Follow the installation instructions carefully, and if you are unsure, seek professional assistance.
 - For optimal safety, professional installation is recommended. If you choose to install the product yourself, ensure that you have the necessary skills and tools.
 - Before installation, verify that the installation location can support the weight and forces exerted by the product. Consult a professional if needed.
- If you encounter difficulties during installation or have any questions, contact the distributor/sales person from which you purchased the equipment from for assistance.

Failure to follow these installation guidelines may result in injury or damage or void your warranty. By installing and using this product, you acknowledge and accept all associated risks. If you have questions, please contact our customer support.

USER WEIGHT LIMITATIONS

This product has a maximum weight limit. Do not exceed the specified weight capacity. Doing so may compromise the stability of the equipment and result in injury. This machine has a max. user weight of **136 KG / 300 LB**

INSPECTION AND CLEANING

- Before any use, examine all accessories approved for use with the Skelcore equipment for damage or wear.
- Do not use or permit the use of any equipment that is damaged or has worn or broken parts. For all Skelcore equipment, use only replacement parts supplied by Skelcore.
- Always make sure that all nuts and bolts are tightened prior to each use.
- Maintain labels and nameplates – do not remove labels for any reason. They contain important information.
- Equipment maintenance – preventative maintenance is the key to smooth operating equipment. Please ensure that you follow our maintenance tips to ensure the continued correct function of your Skelcore equipment.
- If there are damages to small parts, please stop using the equipment at once and contact the purchasing company or agency for replacements. Install the new small parts properly and make sure the connected joints and working parts are fastened, avoiding danger during use.
- Should your Skelcore equipment appear damaged or worn, do not attempt to use or repair the equipment yourself.
- Do not use caustic cleansers to clean and/or wipe it.

OPERATING PROCEDURES AND WARNINGS

- It is the purchaser's responsibility to instruct all users as to the proper operating procedures of all

IMPORTANT WARNINGS & SAFETY INSTRUCTIONS

Skelcore equipment.

- Do not wear loose-fitting clothing or jewelry when using the equipment. It is also recommended that users tie up long hair to avoid contact with moving parts.
- Ensure that anyone not using the equipment stays clear of the user, accessories, and moving parts while the machine is in operation.
- To avoid muscular pain and strain, begin each workout by stretching and warming up, and end each session by cooling down and stretching.
- If the user experiences any injury during use, they should immediately stop using the product and seek medical attention.

PROPER INSTALLATION

The Gym facility shall ensure that all exercise equipment and machines are properly installed, anchored, and secured to the floor or wall in accordance with the manufacturer's instructions and applicable safety standards to prevent tipping, movement, or other hazards.


LIMITATION OF LIABILITY

Evolution Group LLC and its affiliates shall not be liable for any damages, injuries, or losses arising from the improper installation, maintenance, or use of the equipment. The Gym facility agrees to hold harmless and indemnify Evolution Group LLC and its affiliates against any claims, demands, or liabilities resulting from such incidents.


SAVE THIS INSTRUCTION MANUAL FOR FUTURE USE AND REFERENCE.

PRODUCT OVERVIEW







Before reading further, please review the drawing below and familiarize yourself with the parts that are labelled. Read this manual carefully before using the Combat bike.

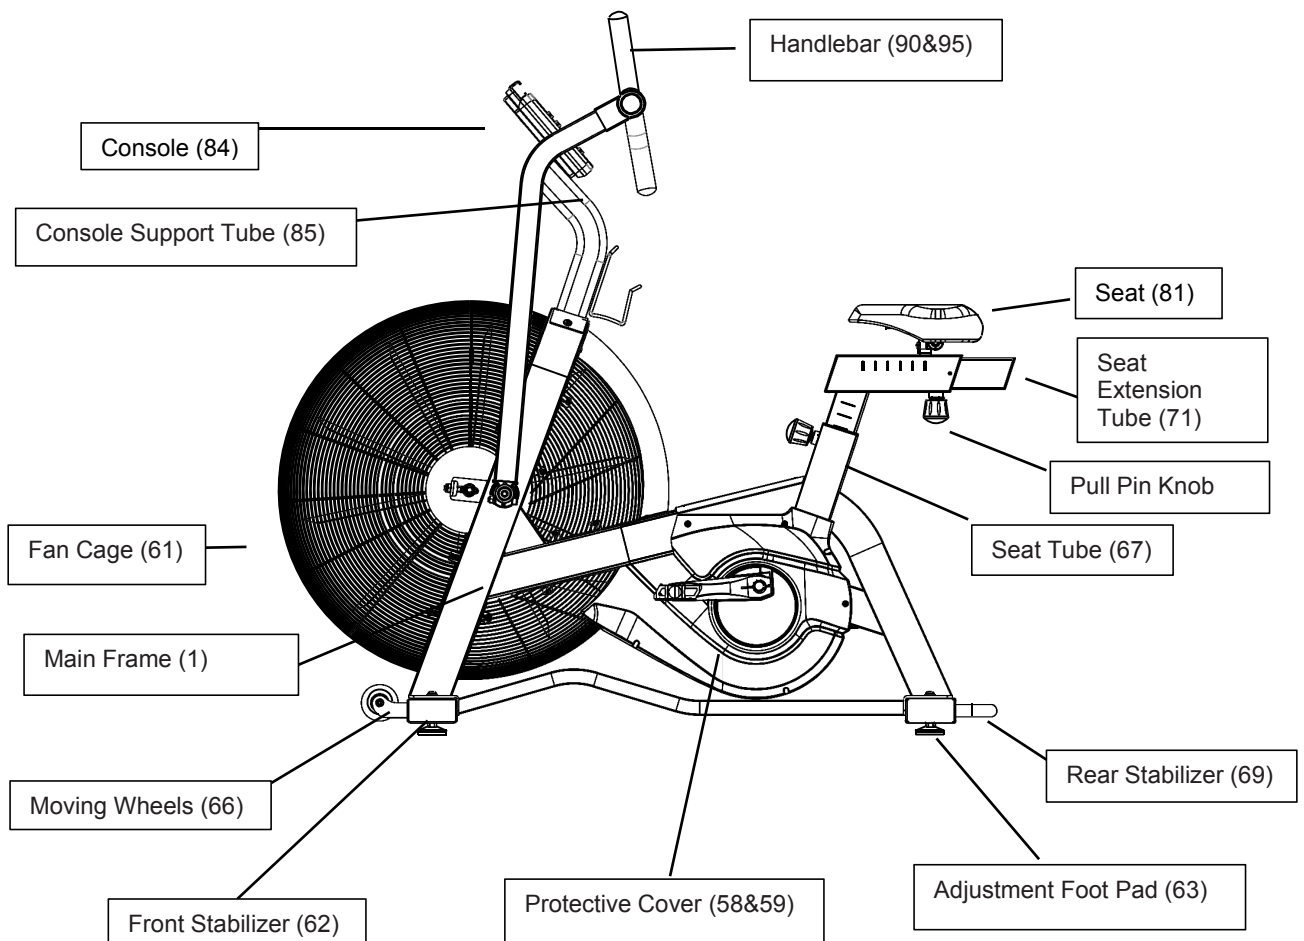

EXPLODED DIAGRAM







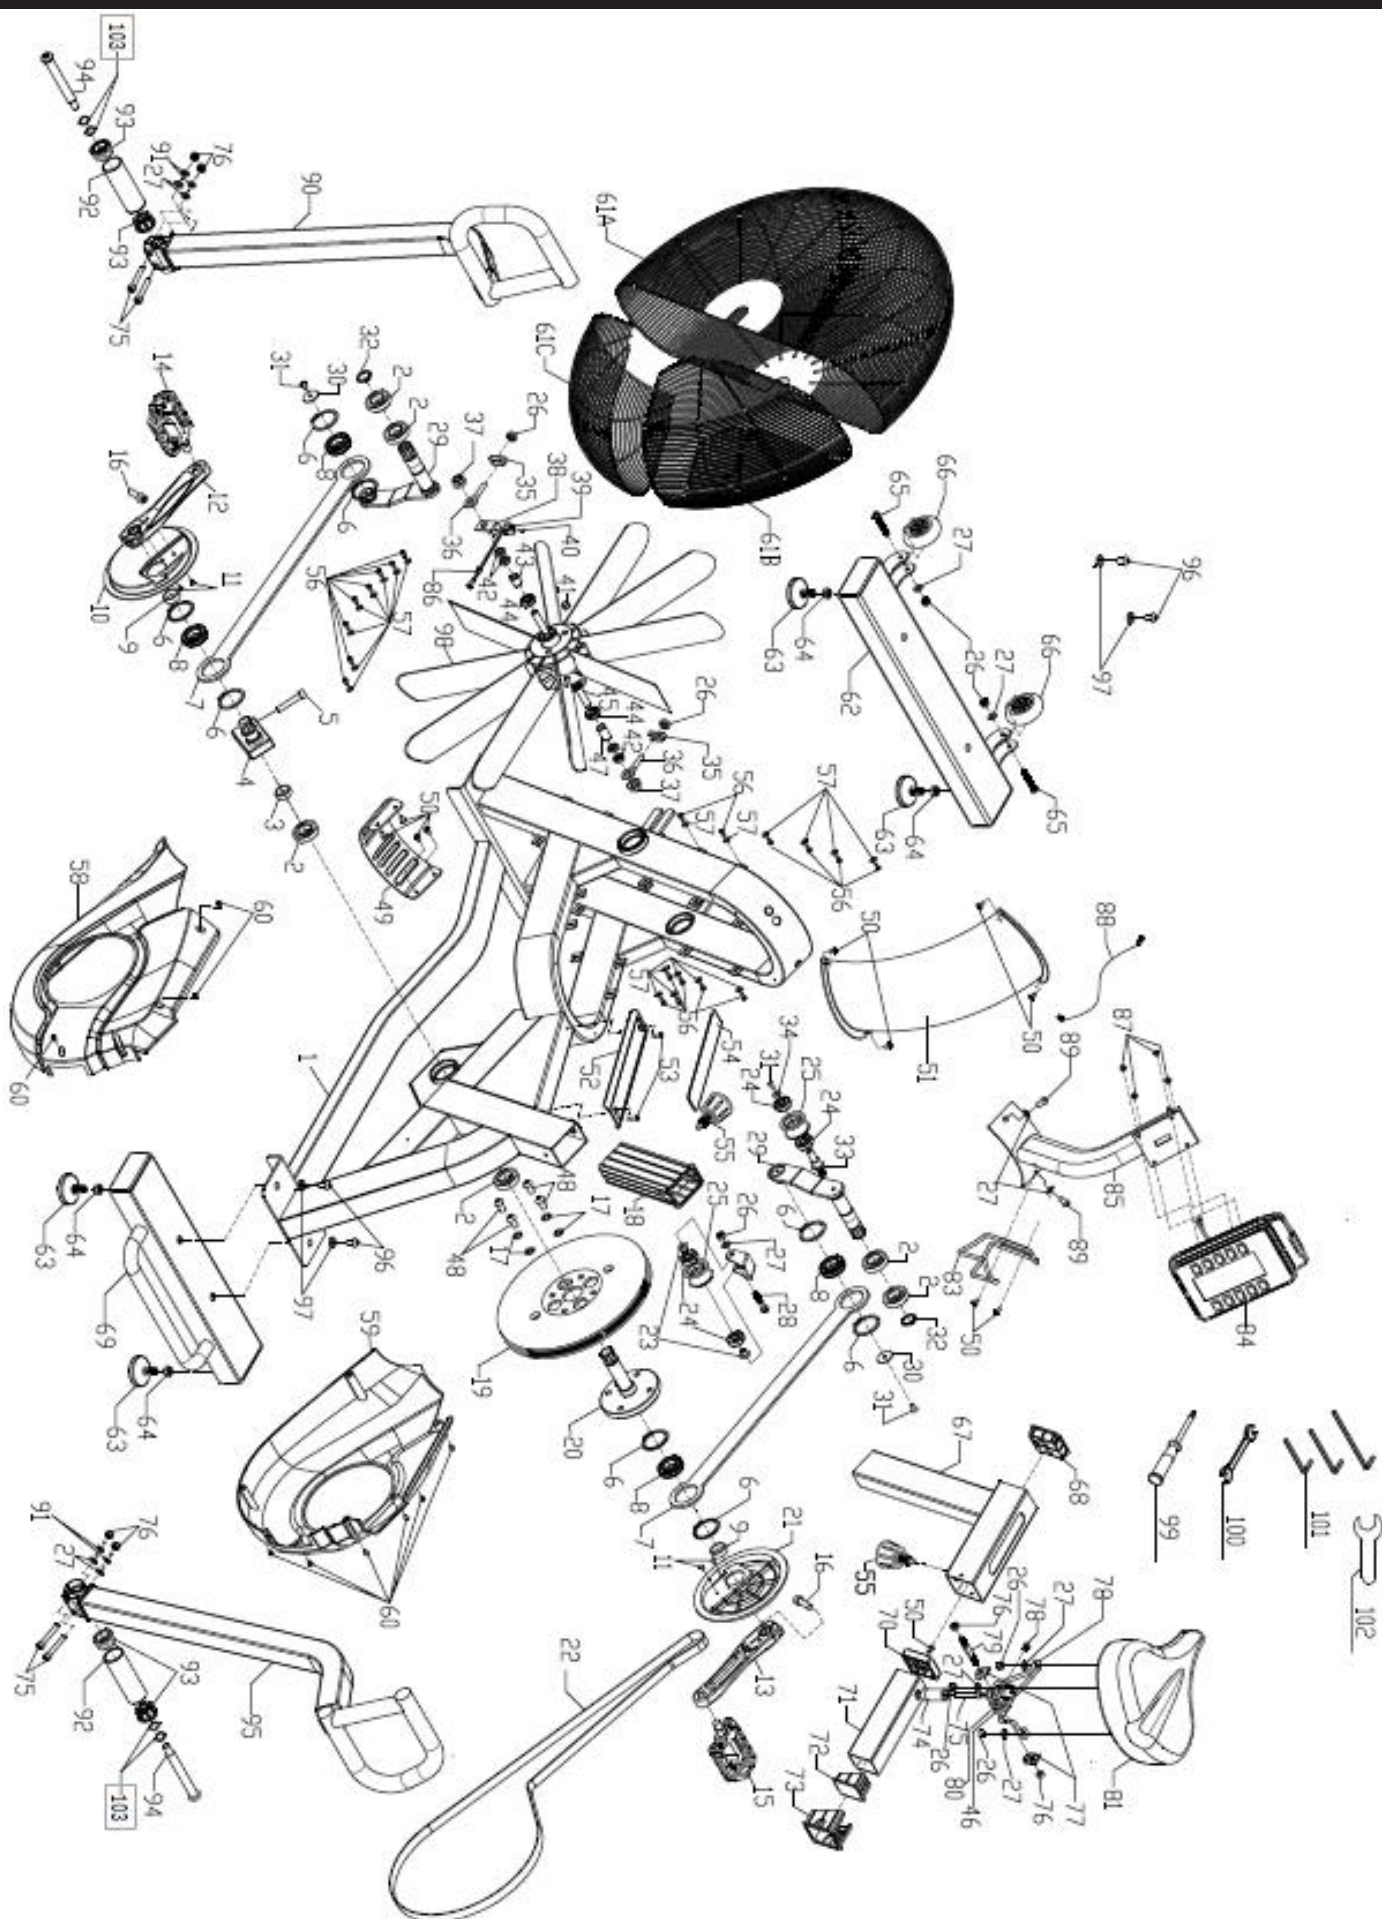


ASSEMBLY LIST

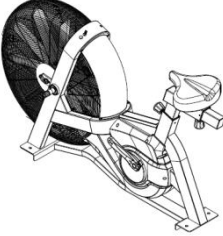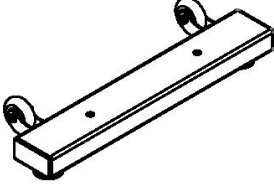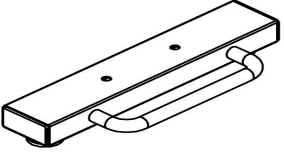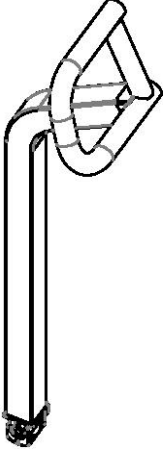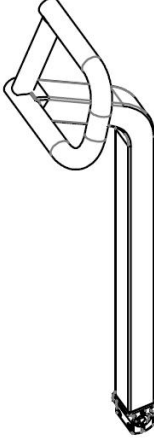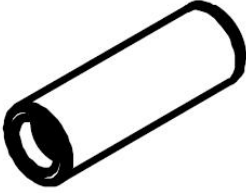1 Main Frame  x1	62 Front Stabilizer  X1	69 Rear Stabilizer  X1
90 Left Handlebar  x1	95 Right Handlebar  x1	85 Console Support Tube  x1
84 Console  x1	83 Water Bottle Holder  x1	14&15 Left and Right Pedal  x1
92 Footrest  x2		

ASSEMBLY LIST

After unpacking the unit, open the hardware bag and make sure that you have all the following fasteners. Some fasteners may be already attached to the parts.

Picture	Code	Part description	QTY
	76	Hex Nut M8x1.25mm	4
	91	Spring Washer M8	4
	27	Flat Washer M8	6
	89	Truss Head Cap Screw M8x15mm	2
	87	Phillips Pan Head Screw M5x12mm	4
	96	Truss Head Cap Screw M10x1.5x15mm	4
	97	Flat Washer M10	4
	75	Socket Head Cap Screw M8x50mm	4
	94	Step Bolt 1/2"x133mm	2
	99	Screwdriver	1
	101	Allen Wrench 5mm/6mm/8mm	1+1+1
	100	Spanner 13/15mm	1
	102	Open End Wrench 17mm	1
	103	Wave Washer	4

ASSEMBLY LIST

NO.	Description	QTY
1	Main Frame	1
2	Bearing 6005z	6
3	Spacer Ø30*Ø25.2*9.8mm	1
4	Square Crank	1
5	Socket Head Cap Screw M10x1.5x50mm	1
6	Circlips Ø47mm	8
7	Left / Right Linkage	2
8	Bearing 6005z for circlip	4
9	Spacer Ø30*Ø25.2*10.5mm	2
10	Left Disc	1
11	Phillips Pan Head Screw M4x10mm	4
12	Left Crank	1
13	Right Crank	1
14	Left Pedal	1
15	Right Pedal	1
16	Socket Head Cap Screw M10x1.25x35mm	2
17	Spring Washer M10	4
18	Hollow Seat Tube Set	1
19	Belt Pulley	1
20	Crankshaft	1
21	Right Disc	1
22	Belt	1
23	Idle Gear Ø18*Ø8.1*12mm	2
24	Bearing 6201z	4
25	Idler Pulley Ø48*25mm	2
26	Hex Nut M8	8
27	Flat Washer Ø9*Φ16mm	12
28	Carriage Screw M8*45mm	1
29	Left / Right Short Linkage	2
30	Flat Washer Φ6.2*Φ30mm	2

31	Truss Head Cap Screw M6x12mm	3
32	Circlips Ø25mm	2
33	Idler Pulley Holder	1
34	Flat Washer Ø6.2*Ø16mm	1
35	Buckle	2
36	Cat Eye Screw M8x40mm	2
37	Flange Nut M12x1.25mm	2
38	Sensor Clip Holder	1
39	Sensor Clip	1
40	Phillips Pan Head Self-Tapping Screw ST3.5x10mm	1
41	Magnet	1
42	Hex Nut M12x1.25mm	4
43	Sleeve Ø15*Ø13*15.5mm	1
44	Bearing 6001Z	2
45	Fan Axis	1
46	Inner Beam Callipers	2
47	Sleeve Ø15*Ø13*27mm	1
48	Truss Head Cap Screw M10x20mm	4
49	Lower Protective Cover	1
50	Phillips Pan Head Screw M5x10mm	11
51	Windshield	1
52	Pedal Tray	1
53	Phillips Flat Head Screw M5x10mm	2
54	Pedal	1
55	Pull Pin Knob	2
56	Phillips Pan Head Self-Tapping Screw ST4.2*15mm	20
57	Flat Washer Ø5.3*Ø15mm	20
58	Left Protective Cover	1
59	Right Protective Cover	1
60	Phillips Pan Head Self-Tapping Screw ST4.0*12mm	9
61A	Front Fan Cage	1
61B	Upper Fan Cage	1
61C	Lower Fan Cage	1


62	Front Stabilizer	1
63	Adjustment Foot Pad	4
64	Hex Nut M10x1.5mm	4
65	Truss Head Cap Screw M8x45mm	2
66	Moving Wheel	2
67	Seat Tube	1
68	Square Inner Plug	1
69	Rear Stabilizer	1
70	Square Outer Plug	1
71	Seat Extension Tube	1
72	Square Inner Plug 38.1x63.5mm	1
73	Hollow Plug	1
74	Seat Mounting Post	1
75	Socket Head Cap Screw M8x50mm	5
76	Hex Nut M8	6
77	Outer Beam Calipers	2
78	Truss Head Cap Screw M8x7mm	1
78A	Seat Basement	1
79	Screw for Beam Calipers (M8)	1
80	Seat Mounting Post Holder	1
81	Seat	1
83	Water Bottle Holder	1
84	Console	1
85	Console Support Tube	1
86	Wire Plug Ø12	1
87	Phillips Pan Head Screw M5x12mm	4
88	Sensor Wire	1
89	Truss Head Cap Screw M8x15mm	2
90	Left Handlebar	1
91	Spring Washer M8	4
92	Footrest Ø38	2
93	Round Plug Ø38	4
94	Step Bolt 1/2"x133mm	2

95	Right Handlebar	1
96	Truss Head Cap Screw M10x1.5x15mm	4
97	Flat Washer M10	4
98	Fan Blades Set	1
99	Screwdriver	1
100	Spanner 13/15 mm	1
101	Allen Wrench 5mm/6mm/8mm	1+1+1
102	Open End Wrench 17mm	1
103	Wave Washer	4

ASSEMBLY STEPS

STEP 1


1. Attach the Rear Stabilizer (69) to the Main Frame (1) by using 2 x Truss Head Cap Screw M10 x1.5 x15mm (96) and 2 x Flat Washer M10 (97).
2. Attach the Front Stabilizer (62) to the Main Frame (1) by using: 2 x Truss Head Cap Screw M10 x1.5 x15mm (96) and 2 x Flat Washer M10 (97).

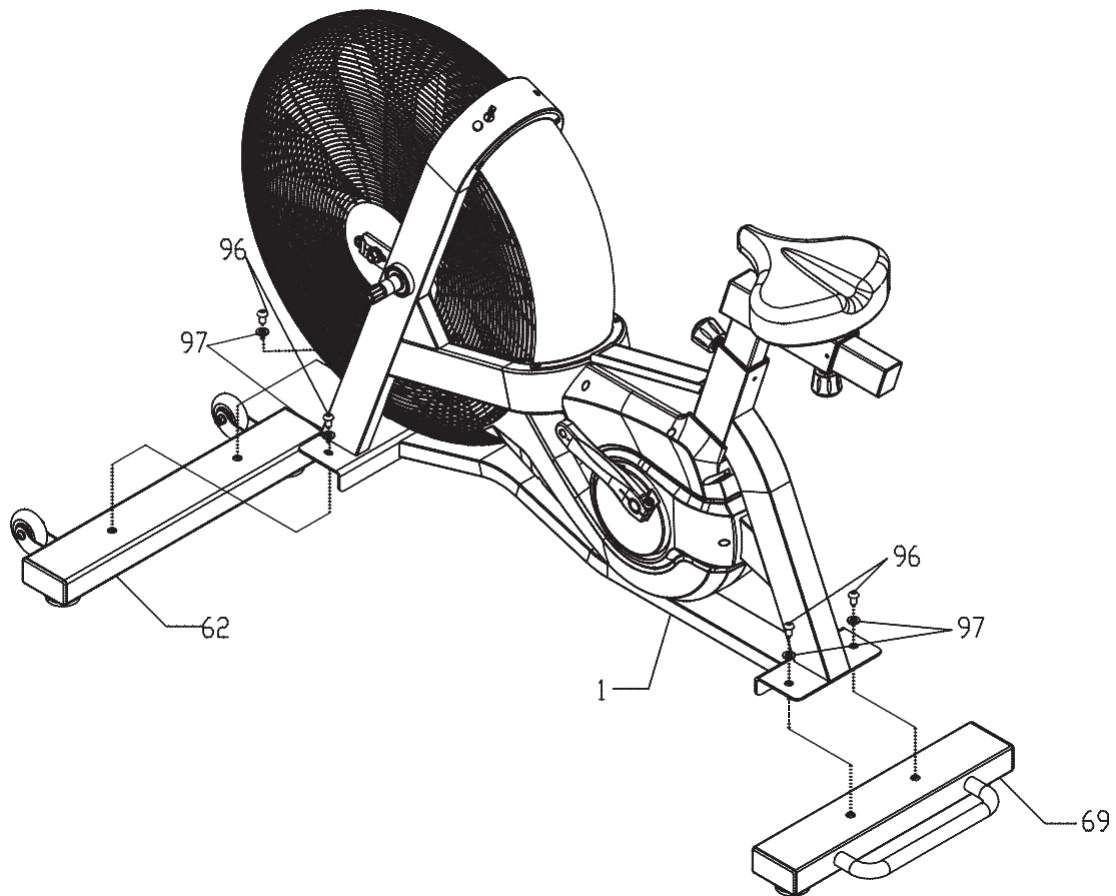

ASSEMBLY STEPS

STEP 2


1. Tighten the Left Pedal (14) by rotating it into Left Crank (12) counterclockwise. The pedals are marked with "L" and "R" identifiers.
NOTE: Left pedals tighten the opposite way to other fixings. These are tightened counterclockwise. Trying to tighten clockwise can cause damage to the pedal and crank thread.
2. Tighten the Right Pedal (15) by rotating it into the Right Crank (13) clockwise.
3. Connect the Sensor Clip (39) to Sensor Wire (88). Attach the Console Support Tube (85) to the Main Frame (1) by using: 2PCs Truss Head Cap Screw M8x15mm (89) and 2PCs Flat Washer M8 (27).

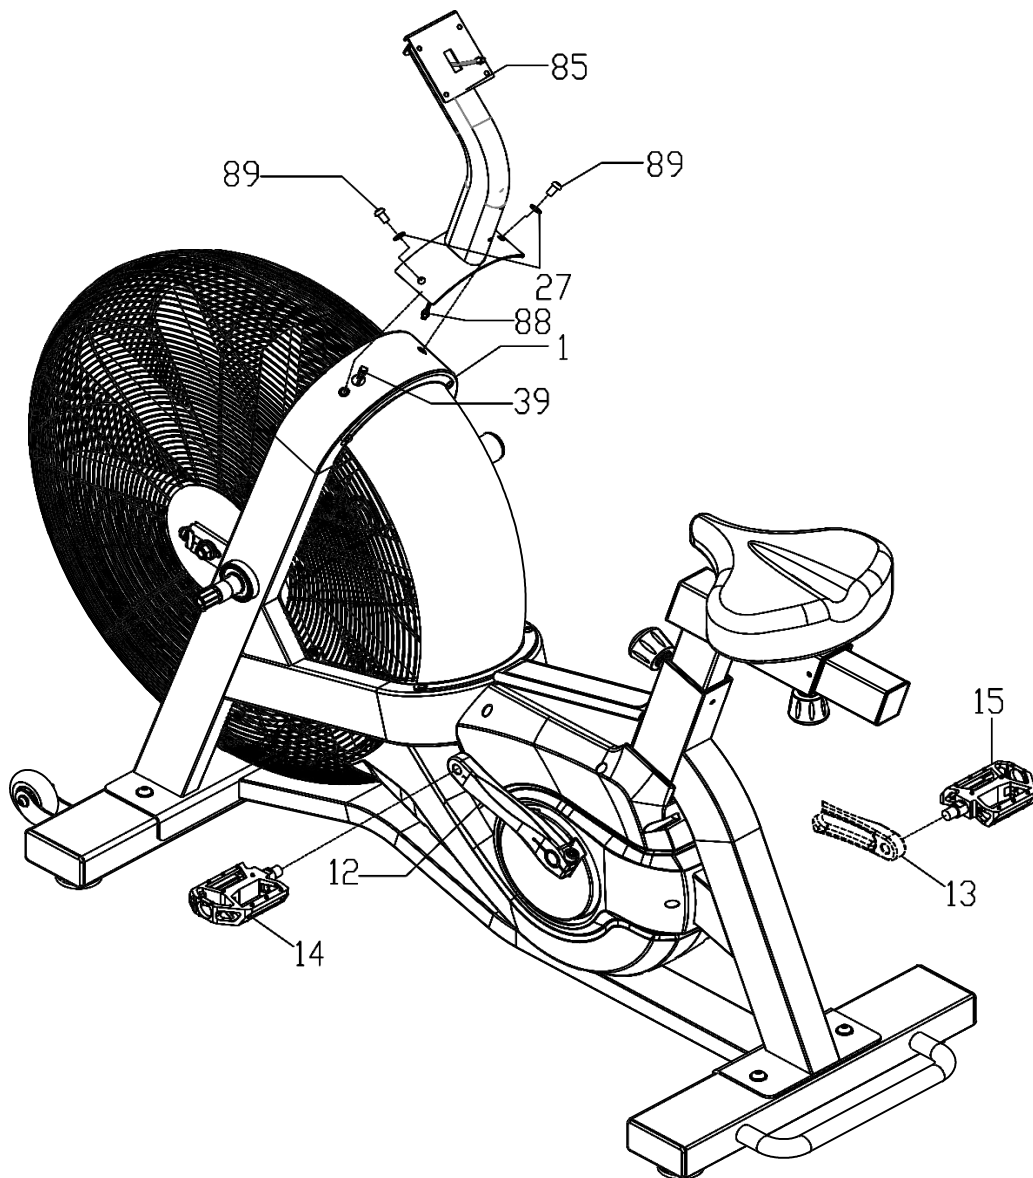

ASSEMBLY STEPS

STEP 3


1. Connect the Sensor Wire (88) to the Console (84) and attach the Console (84) to the Console Support Tube (85) by using: 4 x Phillips Pan Head Screw M5 x12mm (87)
2. Press the Water Bottle Holder (83) into the hole on the Console Support Tube (85), and fix the Water Bottle Holder (83) to the Console Support Tube (85) by using: 2pcs Phillips Pan Head Screw M5x10mm (50)

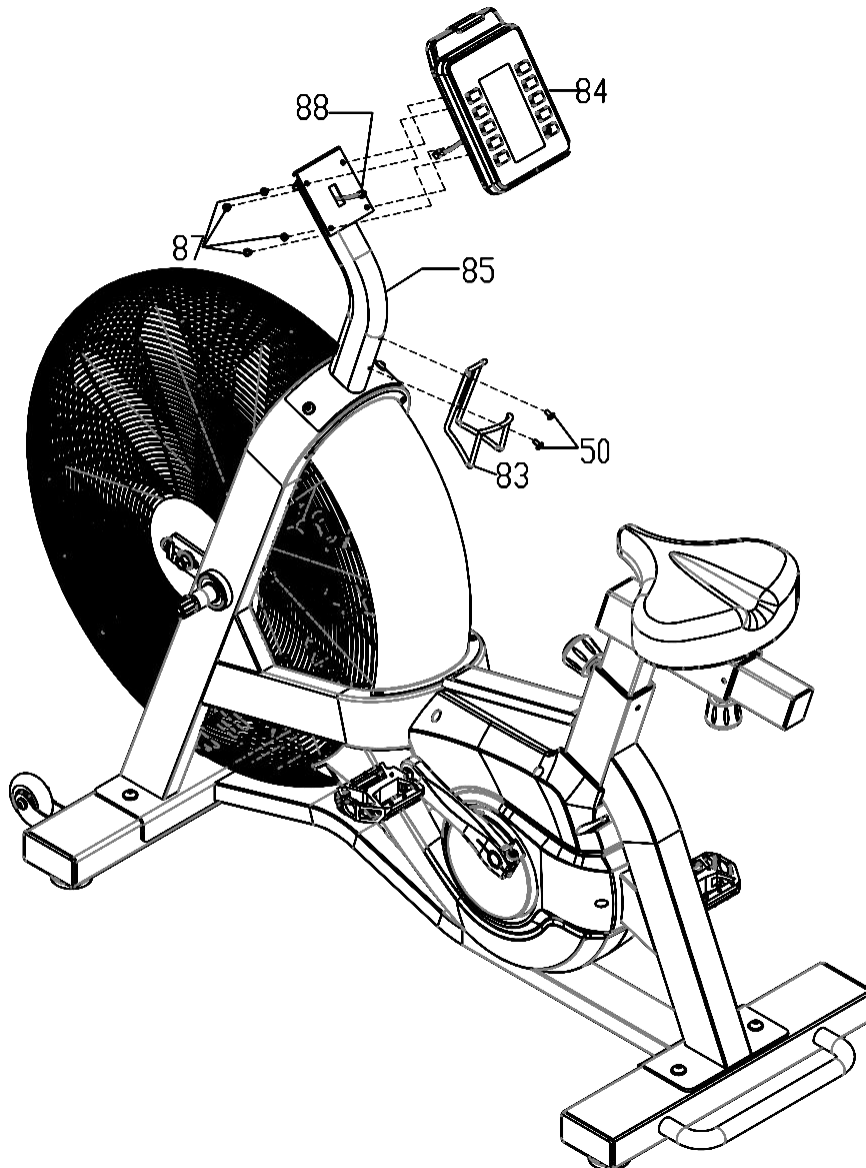

ASSEMBLY STEPS

STEP 4

1. Attach Left Handlebar (90) to the Left Linkage (29) by using: 2 x Head Cap Screw M8*50mm (75), 2 x Flat Washer M8 (27), 2 x Spring Washer M8 (91) and 2 x Hex Nut M8 (76) as shown below. **NOTE:** both washers go on the side of the hex nut.
2. Attach Right Handlebar (95) to the Right Linkage (29) by using: 2 x Head Cap Screw M8 x 50mm (75), 2 x Flat Washer M8 (27), 2 x Spring Washer M8 (91) and 2 x Hex Nut M8 (76) as shown below.
WARNING: After installing the left and right handlebars using an Allen Key and Spanner, you need to use the handlebars vigorously for 30-60 seconds (moving them back and forth). This can loosen the new fixings slightly. If they become loose, retighten them. Repeat this step until the fixings remain secured.
3. Pass through 2 x Wave Washer (103) and the Footrest Ø38 (92) with Step Bolt 1/2" x133mm (94) and tighten on the Short Linkage (29). Repeat for the other side.

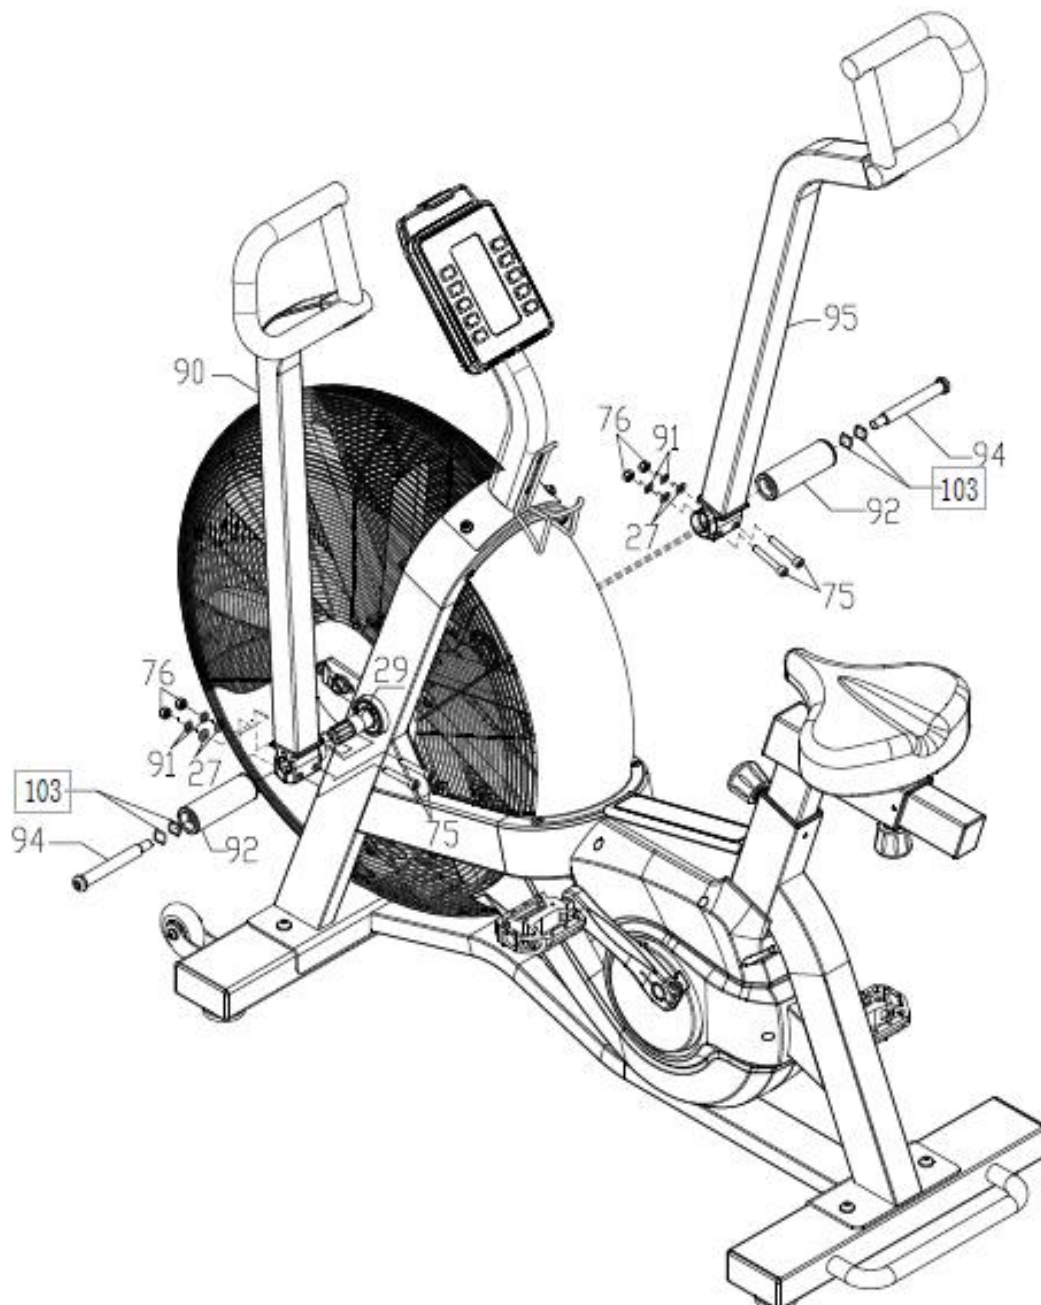


SET UP INSTRUCTIONS

Place the Combat Bike in the area where it will be used. It is recommended that the Combat Bike be placed on an equipment mat. Make sure that adequate space is available for access to and passage around the Combat Bike.

LEVELING: Adjust the Stand (63) under the Rear Stabilizer (69) so that the Combat Bike sits on the floor without rocking. Refer to the instructions below.

MOVING: The Combat Bike has a pair of Wheels (66) on the Front Stabilizer (62). Lift up from the handle at the back of the Combat Bike to move. **INSPECTION:**

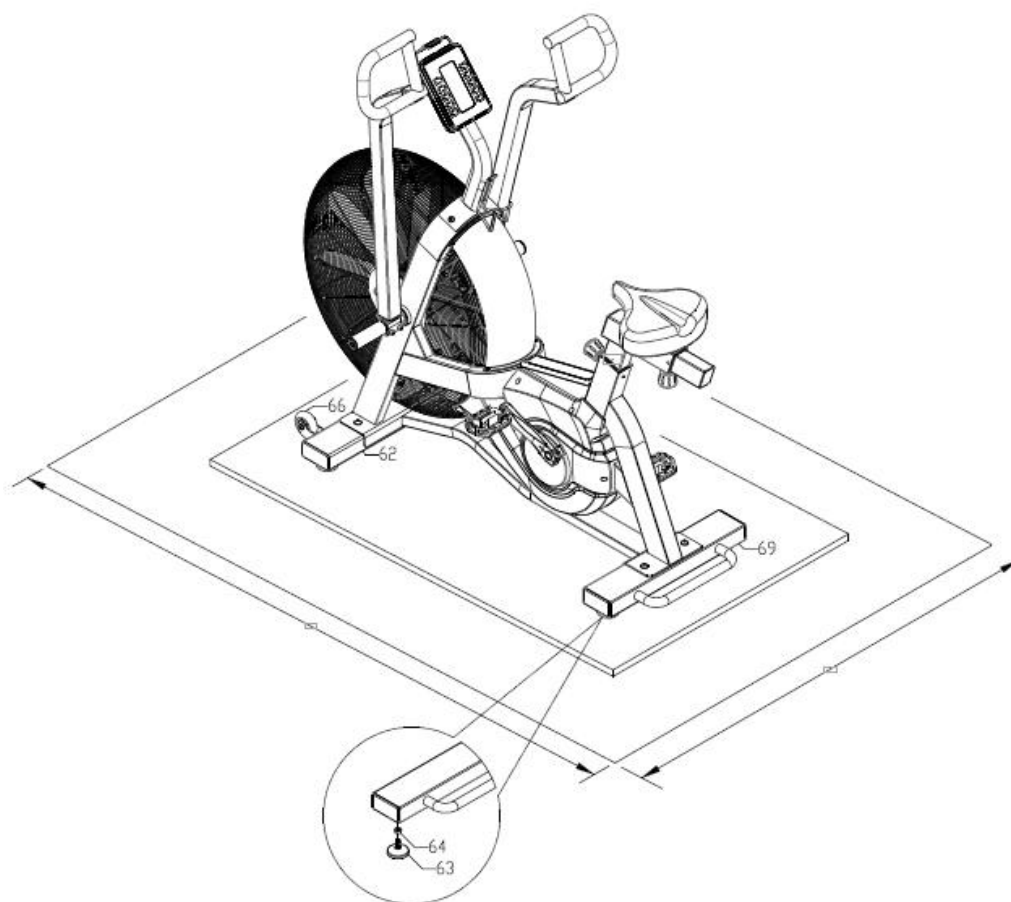

INSPECTION:

Visually inspect the Combat Bike to verify that assembly is as shown in the above illustration. Check the function of the Combat Bike by turning the crank slowly through one complete revolution to verify that the drive train functions properly. Check all fixings to make sure they are secure.

WARNINGS:

Locate and read the Warning Labels on the Combat Bike. Make sure that all users read the Warning Labels before using.

COMPUTER INSTRUCTIONS

1. After installing the battery (POWER ON), the LCD display will show all data for 2 seconds (Figure 1), and beep twice within 0.5s to enter the IDLE mode.




(Figure1)

QUICK START MODE


1. In IDLE mode, if RPM signal is higher than 15, the monitor will beep once and enter "QUICK START". Or, press the START button to enter "QUICK START".
2. When heartbeat is detected, the "HEART RATE" sign will show. The heartbeat sign "♥" will also flash and display heartbeat data (Figure 2); when there is no heartbeat detected, "HEART RATE" sign will not display. "NO SIGNAL" and heartbeat sign "♥" will still display, but the Heartbeat will display "---"
3. When in use, the only keys that will work are START, STOP, ENTER.
4. Press START to enter the Pause Mode while doing the workout. The monitor will only display TIME, DISTANCE, and CALORIES (Figure 3) for 0.5 second.
5. If the RPM signal is less than 15 for 5 minutes, the monitor will beep twice and enter IDLE mode.
6. In pause mode, press ENTER KEY for 3 seconds to switch on / off the Bluetooth function. Press START to continue the exercise and STOP to end the exercise.
7. When the workout finishes, the monitor displays: TIME (total time) DISTANCE (total distance), CALORIES (total calories burned) (Figure 4)
8. When the workout is finished and there is no RPM signal detected for 5 minutes, the monitor will enter sleep mode.
9. If RPM signal data is higher than 15 and last for 6 seconds, the computer will enter "QUICK START".
10. If RPM signal data is less than 15 and last for 5 minutes, the monitor will beep and enter IDLE MODE.



(Figure 2)

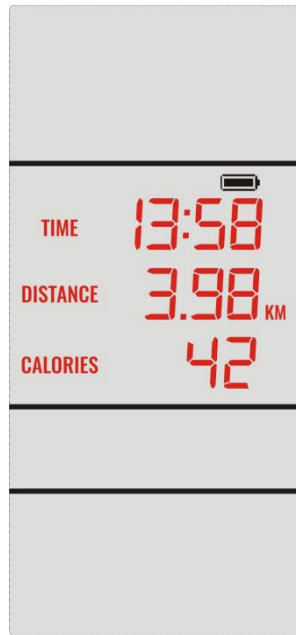


(Figure 3)

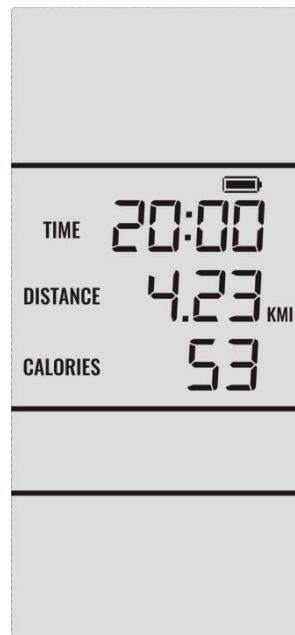

(Figure 4)

20:10 INTERVAL MODE

1. In IDLE MODE, press INTERVALS once. The 20/10 graphic will display for 0.5 seconds. Press ENTER to confirm the selection. Total Time is shown as 04:00, and Intervals is shown as 0/8.
2. Press ENTER or START key to launch this function.
3. After 3 seconds, the first WORK interval will start, counting down from 0:20. The TOTAL TIME will begin to count as well. The TIME will start to count down. SPEED, WATTS, RPM, DISTANCE, and CALORIES will start counting according to the data received. As you enter REST and WORK intervals, the INTERVAL graphic will count accordingly.

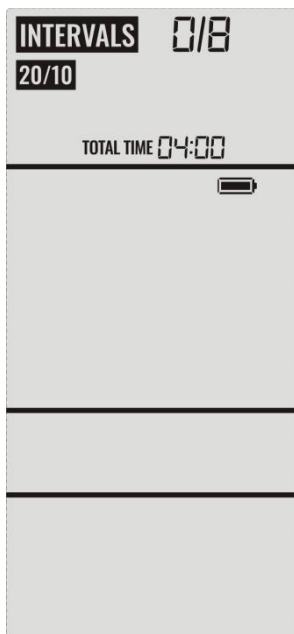

(Figure 5)



(Figure 6)

10:20 INTERVAL MODE

1. In IDLE MODE, press INTERVALS twice. The 10/20 graphic will display for 0.5 seconds. Press ENTER to confirm the selection. Total Time is shown as below 04:00, and Intervals is shown as below (0/8).
2. Press ENTER or START key to launch this function.
3. After 3 seconds, the first WORK interval will start, counting down from 0:10. The TOTAL TIME will begin to count as well. The TIME will start to count down. SPEED, WATTS, RPM, DISTANCE, and CALORIES will start counting according to the data received. As you enter REST and WORK intervals, the INTERVAL graphic will count accordingly.



(Figure 7)



(Figure 8)

CUSTOM INTERVAL MODE

1. In IDLE MODE, press INTERVAL three times. The CUSTOM graphic will display for 0.5 second (Figure 9). Press ENTER to confirm this selection and enter the CUSTOM mode. TOTAL TIME will display the default time as 06:40 and the INTERVALS will display 0/8. The setting range for INTERVALS is 1-99. Press START to begin the workout with current setting.
2. To adjust the INTERVAL settings, when in CUSTOM mode, the INTERVAL number will be flashing. Press UP or DOWN to adjust this. Once you have chosen your INTERVAL count, press enter and then the WORK graphic will flash. Press UP or DOWN to adjust the WORK duration. Once you have chosen your WORK duration, press enter and then the REST graphic will flash. Press UP or DOWN to adjust the REST duration.
3. Once INTERVAL, WORK, and REST values have been selected, press the START button to begin the workout.



(Figure 9)




(Figure 10)



(Figure 11)

TARGET TIME MODE

1. In IDLE MODE, press TARGET TIME. TARGETS and TIME graphics will display and the default time of 10:00 will flash (Figure 12). Press START to start the workout with the default settings.
2. To adjust the TARGET TIME, press the UP or DOWN buttons. The time range is 1-99 minutes.

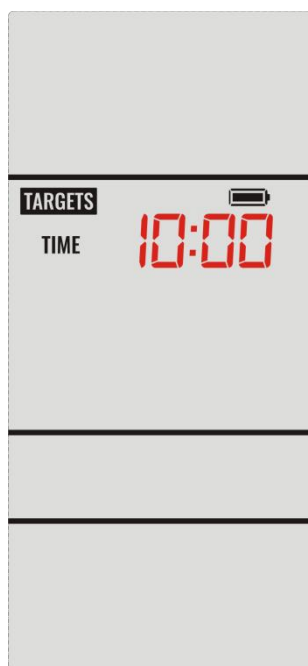

(Figure 12)

TARGET DISTANCE


1. In IDLE MODE, press TARGET DIST. TARGETS and DISTANCE graphics will display and the default distance of 3.00 will flash (Figure 13). Press START to start the workout directly.
2. To adjust the TARGET DISTANCE, press the UP or DOWN buttons. The distance range is 0.5-99.



(Figure 13)

TARGET CALORIES

1. In IDLE MODE, press TARGET CALS. TARGETS and CALORIES graphics will display and the default calories of 20 will show (Figure 14). Press START to start the workout directly.
2. To adjust the TARGET CALORIES, press the UP or DOWN buttons. The calories range is 1-999.

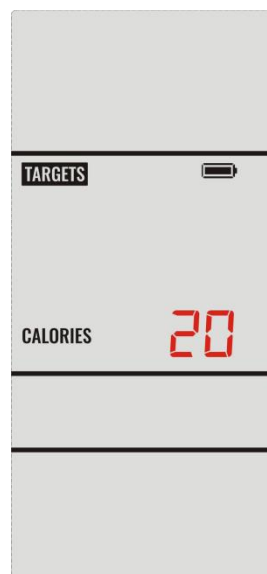

(Figure 14)

TARGET HEART RATE 80% MODE

1. In IDLE MODE, press the TARGET HR button once. TARGETS and HEART RATE graphics will show. Press the ENTER button to confirm the selection and enter the setting mode of TARGET HEART RATE 80%. The AGE graphic will flash (Figure 15). The default age will be 24 and the 80% TARGET HEART RATE will be calculated from the age. To use the default settings, press START.
2. To adjust the AGE, and recalculate the 80% TARGET HEART RATE, press the UP or DOWN buttons whilst the AGE graphic is flashing. The AGE range is 10-120.
3. While working out, if the heart rate drops below the 80% Target for 5 minutes, the  graphic will show (Figure 16).
4. While working out, if the heart rate rises above the 80% Target for 5 minutes, the  graphic will show (Figure 17).




(Figure 15)



(Figure 16)



(Figure 17)

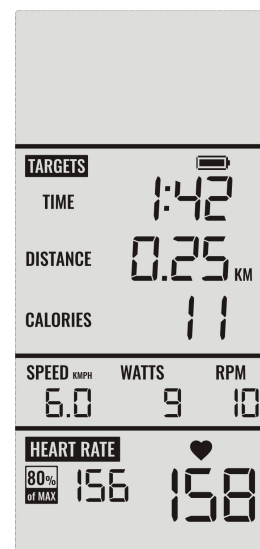

(Figure 18)

TARGET heart rate 65% :

1. In IDLE MODE, press the TARGET HR button twice. TARGETS and HEART RATE graphics will show. Press the ENTER button to confirm the selection and enter the setting mode of TARGET HEART RATE 65%. The AGE graphic will flash (Figure 19). The default age will be 24 and the 65% TARGET HEART RATE will be calculated from the age. To use the default settings, press START.
2. To adjust the AGE and recalculate the 65% TARGET HEART RATE, press the UP or DOWN buttons whilst the AGE graphic is flashing. The AGE range is 10-120.
3. While working out, if the heart rate drops below the 65% Target for 5 minutes, the  graphic will show (Figure 20).
4. While working out, if the heart rate rises above the 65% Target for 5 minutes, the  graphic will show (Figure 21).



(Figure 19)



(Figure 20)



(Figure 21)



(Figure 22)

SETTING KM OR MI (Kilometres or Miles)

In IDLE MODE press and hold the UP & DOWN buttons at the same time for 3 seconds. This will change the distance units from KM to Miles or from Miles to KM.



(Figure 23)



(Figure 24)

MEMORY

The monitor does not have a memory function. Therefore, when the battery is removed and reinserted, the monitor will revert to its default settings.

Bluetooth Function



1. In IDLE MODE, WORKOUT MODE, or PAUSE MODE, press ENTER for 3 seconds to switch on/off the Bluetooth function.
2. Once Bluetooth has been turned on, the console can then connect to compatible devices and apps.
3. Once the console is connected to the app, the display will turn off, but the Bluetooth icon will remain visible and continue flashing.
4. The Bluetooth can connect to compatible apps and heart rate chest belt simultaneously.

SEAT HEIGHT ADJUSTMENT

Ensuring the correct seat height is crucial for effective exercise. To determine the proper height, sit on the bike and place the ball of your foot on the pedal at its lowest position. Your leg should be slightly bent and relaxed. If your leg is too straight or your foot cannot reach the pedal, lower the seat. Conversely, if your leg is excessively bent, raise the seat.



Unlock the Pull Pin Knob (55) by turning it counterclockwise. Pull out the Pull Pin Knob (55) and then raise or lower the Seat Tube (67) to the desired height. Release the Pull Pin Knob and lock it again by turning it clockwise.

NOTE: Do not pull out the seat post beyond the maximum limit, which is marked on the post itself.

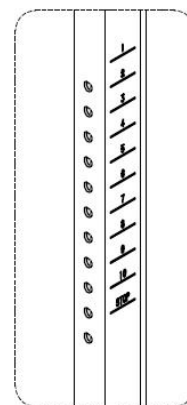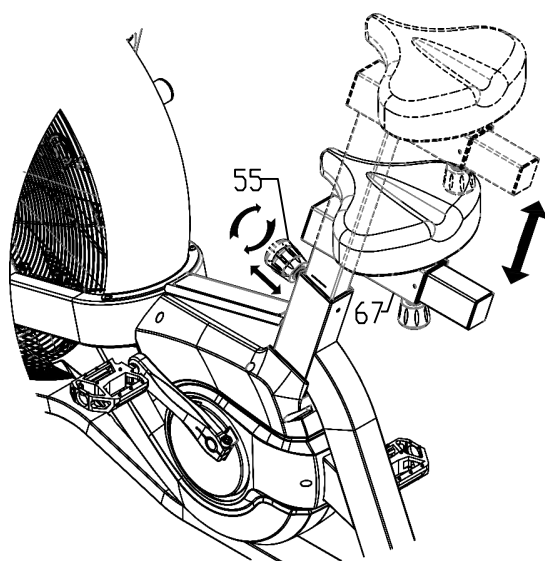

ADJUSTING THE FORWARD / BACKWARDS POSITION OF SEAT

Unlock the Pull Pin Knob (55) by turning it counterclockwise. Pull out the Pull Pin Knob (55) and adjust the Seat Extension Tube (71) to a desired position. Release the Pull Pin Knob and lock it again by turning it clockwise.

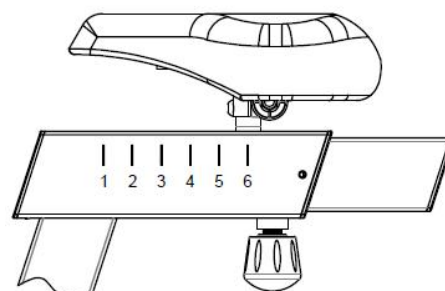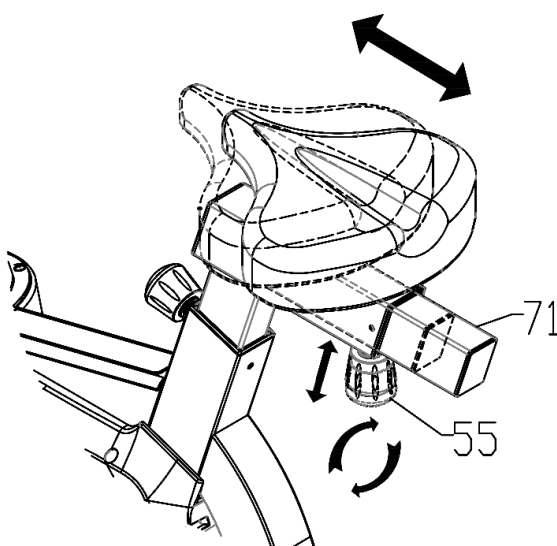

WARRANTY

For a period of either 120 days or 24 months after the purchase date (the “Warranty Period”), a warranty will apply on moving parts, pulley's, cables, buttons, upholstery, hydraulic seats and cables for a period of 120 days, with the balance of the machine being a 24 month warranty. Skelcore warrants that the equipment for materials and workmanship such that, when installed and used in accordance with the owner's manual, will operate for its intended purpose. The warranty applies to equipment installed in air conditioned and temperature controlled environments and will be null and void if used outdoors or in an environment with no air conditioning. Skelcore will, at its expense and as its sole obligation and your exclusive remedy for any breach of this warranty, repair or replace the equipment or any parts, in its discretion, provided that such malfunction or defect is reported to Skelcore by you in writing during the Warranty Period and that you provide all information that may be necessary or requested to assist Skelcore in resolving the malfunction. If Skelcore determines that it is unable to repair the malfunction or replace the equipment, Skelcore or its authorized reseller may refund you the fees you actually paid for the defective equipment, in which case you agree to immediately cease using and to destroy, throw out, or otherwise take steps to ensure no one can use the equipment ever again.

If there are any problems or malfunctions with the Skelcore equipment you purchased, please contact your sales manager promptly. They will help you identify the cause of the problem and assist you in resolving it. If the issue involves parts that cannot be quickly addressed, the company's professional after-sales service personnel will provide specialized support.

COST OF REPAIRS

UNDER WARRANTY

Any items still under warranty will be repaired free of charge, if the repair complies with the terms and conditions of the warranty (refer to the “warranties” section in this manual). Any items that need to be repaired that are not covered under the warranty will be at your expense. A quote for the repair or replacement of these items will be provided to you for approval prior to any repairs being conducted.

OUT OF WARRANTY

Any items that need to be repaired once the warranty has expired will be at your expense, including call-out fees. A quote for the repair or replacement of these items will be provided to you for approval prior to any repairs being conducted.

Save this instruction manual for future use and reference.

SAVE THIS INSTRUCTIONAL MANUAL FOR FUTURE USE AND REFERENCE.

WARRANTY

To maintain your warranty, please complete the form below upon receiving your machine and email it back to the representative who sold you the goods.

Failure to do so will result in the loss of warranty.

SKELCORE ATTACH RECEIPT

CLIENT DETAILS

- NAME:
- EMAIL:
- CELL:
- TEL(H):
- TEL(W):
- FAX:
- ADDRESS:

PRODUCT DETAILS

- DATE OF PURCHASE:
- SERIAL NUMBER:
- TILL SLIP NUMBER:
- DESCRIPTION OF PURCHASE:

Signature: _____

Date: _____